

TABLE OF CONTENTS

Important Information	1
1.1 Cleaning the screen and cabinet... ..	1
1.2 Disposing of your TV at the end of service life.....	1
Features of your new television.....	2
2.1-Special Features	2
Important Safety Instructions	3
Start.....	6
4.1-Antenna connection.....	6
4.2-Powering on your device and the initial use	6
4.3-Batteries	6
Your new television	7
5.1-TV Control Panel.....	7
5.2-Rear and Side External Connections	7
5.3-Remote Control	8
Performing the initial power-on settings.....	9
6.1-TV controls	9
6.2-Turning on the TV and Setting the Channels	10
6.3-Program Table	12
Settings of Your New Television	13
7.1- Sound Menu Settings	13
7.2-Picture Menu Settings.....	13
7.3-Features Menu Settings	15
Teletext	16
External Equipment Connections:.....	18
Help and tips	22
Technical Specifications Chart.....	23

1 Important Information

LCD panels are produced with state-of-the-art technology. However, there may be black or lit spots on the screen under certain circumstances. That does not mean that the product is faulty.

1.1 Cleaning the screen and cabinet...

After powering off, wipe the screen and the cabinet clean with a soft and dry cloth. We recommend that you do not use patented polishes or solvents to clean the screen or cabinet since they may cause damage.

1.2 Disposing of your TV at the end of service life...

The cold cathode fluorescent lamp found in your LCD screen contains a very small amount of mercury. Once your TV set has completed its physical life, please dispose of it in accordance with local government regulations or leave it at a recycling centre.

2 Features of your new television

We would like this product, which has been manufactured in modern facilities in accordance with total quality principles, to offer you the best performance. Therefore, we would like you to read this entire manual carefully before you use your product and keep it for future reference.

2.1-Special Features

- HDMI connection
- HD-Ready
- HDCP feature
- SCART connection
- Audio/Video RCA inputs
- PC connection
- Component connection through VGA
- S-VHS connection through scart
- Low energy consumption
- Available for cable broadcasts
- Automatic switch-off feature that can be programmed between 15 and 120 minutes
- Fastext
- Toptext (*)
- Sharpness feature in Colour Transitions (CTI)
- Sharpness feature and picture resolution (LTI) in black-white transitions
- A clearer Picture made possible with a Digital Comb Filter
- DNR Noise reduction
- Manual fine tuning
- 100 Program memory
- Returning to the last viewed program by single button (SWAP)
- Infrared remote control equipped with all functions
- Feature of viewing the NTSC broadcast via scart input
- Easy performance of the processes with the advanced menu system
- Panel Lock
- Multilanguage menu option
- 4:3, 16:9, 14:9 Subtitle, Letterbox, Auto picture formats
- Automatic broadcast detecting system by means of WSS feature
- Renaming, deleting, skipping and relocating the programs.
- Ability to operate with both 220-240V mains voltage and 12V DC External Power Supply (*)



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

(*): These features are optional and they are not available on all models.

3 Important Safety



Instructions

This symbol is used to warn the user about the “dangerous voltage” contained inside the housing of the product that may create a risk of electrical shock.




This symbol is used to remind the user important usage and service instructions supplied with the device.

- 1) Please **READ** the operating instructions before using the device for the first time.
- 2) Please observe the instructions contained in the Operating Instructions.
- 3) Please consider all warnings.




- 4) **MAKE SURE** that all power connections (extension cables and the connections between the device components) have been made properly and in accordance with the manufacturer's instructions. Before making or changing the connections, power off the device and unplug the mains connection plug.

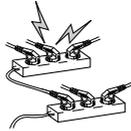

- 5) If you have any doubts regarding the installation, operation or safety of the device, please **REFER** to the vendor.
- 6) **BE CAREFUL** with glass panels and covers on the device. The screen glass may break and cause serious injuries if something hits it.

- 7) To ensure adequate ventilation, please leave a clearance area of at least 10 cm around the television. This clearance prevents the TV from overheating and consequently causing damage.
 - Using the device in dusty environments should also be avoided.
 - Never block the slots and openings by placing the TV on a bed, sofa, pillow or other similar surfaces.


- Never install the TV into closed places such as bookcases or cabinets unless adequate ventilation is provided.

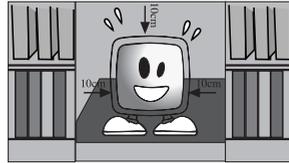

- 8) **DO NOT COVER** the ventilation openings of the device with items such as newspapers, table-clothes, curtains, etc. Overheating causes damage and shortens the service life of the device.



- 9) Your TV may be damaged if you place it under direct sunshine or close to a heater. Please abstain from using the product in very hot or humid locations or in places where the temperature is likely to decrease below 5°C (41°F). **DO NOT PLACE** on or near the device any hot objects or items with open flame such as candles or any night lamps. The high temperature can melt plastic parts and cause a fire.

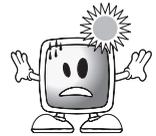

10) Never operate electrical devices close to water. Operating such devices, for example, near a bathtub, washbasin, kitchen washbasin, washing basin, wet basement and swimming pool can cause fire or electric shock.



• Do not allow your TV to get wet. Never pour any liquids onto the TV. Do not operate your TV if any solid or liquid substance enters into it. This can cause electric shock and your TV may be damaged. Have it checked immediately by qualified personnel.



• Keep open flame sources (such as candles) away from TV in order to avoid risk of fire.




11) DO NOT USE

headphones at extremely high volume levels since this may cause permanent loss of hearing.



12) Operate your TV only in the 220-240V 50-60Hz voltage range. Use the AC power cable supplied with the product. If your TV is a grounded (Class I) product, then it must certainly be connected to a grounded socket.

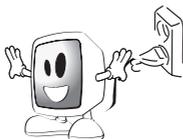

- **The socket into which you plug in the AC power cable or the adaptor must be within easy reach.**
- **Turn off your device with the ON/OFF button and then unplug it in order to disconnect it from mains.**

Note 1: If you would like to operate your television by means of the lighter cable (*) in a car, then use the cable supplied with the product () or another cable with equivalent properties. Using an unsuitable cable may damage your appliance.**

(*): Lighter cable input is optional and is not available on all models.

(): Cable is an option. It is not supplied with every model. If your product does not contain a cable, you can use a cable approved according to UL 2089.**

Note 2: If your device has an adaptor, then use the adaptor and AC power cable supplied with your product. Do not use defective sockets. Make sure that the plug is firmly inserted into the socket. If the plug remains loose, then it can cause fire due to arcing. Refer to an electrician to have your socket replaced.

13) Make sure that the power cable is not stepped on and that there is no bending at the plug sections, plug heads and device output point.



14) Use only the add-ons/accessories specified by the manufacturer.

15) Use only together with the carts, bases, tripods, brackets or stands specified by the manufacturer or sold along with the product. When using a cart, pay attention that it won't overturn while carrying the cart/device combination and cause injuries. The device must be fixed to the floor or wall as indicated in the installation instructions in order to avoid any possible damages. Place your device on a level surface.



16) Unplug the power cable during thunderstorms or when you will not use your device for a long period of time.




17) Consult authorised service personnel for service requirements. Never attempt to repair the device yourself. Opening the cabinet can expose you to dangerous voltages or other hazardous situations.




Service is required in situations such as damage to the power cable of the device or its plug, water spills or substances falling into the device, the device is subjected to rain or moisture, it does not operate normally or it is dropped.

18) Wipe the TV cabinet clean with a soft and dry cloth. Wipe dust from the screen gently with a soft cloth. Stubborn stains can be cleaned with a cloth slightly moistened with soap and lukewarm water. Never use solvents such as thinner or gasoline for cleaning. Unplug the AC power cable from the socket when cleaning the TV. Otherwise, there is the risk of electric shock.

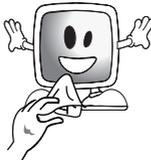

19) Do not dispose of the batteries in fire.

- Do not short circuit, dismantle or overheat the batteries. **There is the risk of explosion if the batteries are not replaced correctly. Replace only with the same or equivalent type batteries.**

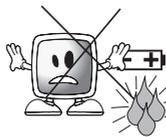

20) Disposing of the exhausted batteries:

Dispose of the exhausted batteries in accordance with the local laws and regulations in order to protect our environment.



21) Do not dispose of your TV with regular household waste. Observe local laws and regulations for disposal.



Note 1: This is a Class A product. During operation, the device can cause radio interference. In this case the user may have to remedy this. Please contact your specialist dealer.

Note 2: Electromagnetic fields can cause temporary performance degradation. This can be distinguished as noise in the image.

Note 3: Tighten the screws that are used to connect the wall mount kit by 1 Nm (10kgfcm) maximum.

Note 4: Your television can operate with 220-240V AC or 12V DC external power supply. However, do not connect 220-240V AC and 12V DC external power supplies to your television at the same time. Otherwise, your television can get damaged.

Note 5: Do not use any power supply generating different voltages other than the 12V DC when operating your television with DC power supply or vehicle battery. Current for 12V DC external power supply to be used in 16" TV should be at least 3A, current for 12V DC external power supply to be used in 19" TV should be at least 4A, current for 12V DC external power supply to be used in 22" TV should be at least 5A.

Note 6: When you are operating your television in a vehicle and the vehicle is not running, avoid keeping it turned on for long periods since this may cause the vehicle battery run flat.

4 Start

Remove your television carefully from its box. You can keep the packaging of your television to use in future.

Contents of the box

Power cable (*)

Adaptor (*)


Remote control

2 batteries

Note: The Scart, VGA (*) and RCA cables are not supplied with the device.

(*) These features are optional and may not be available on all models.

4.1-Antenna connection

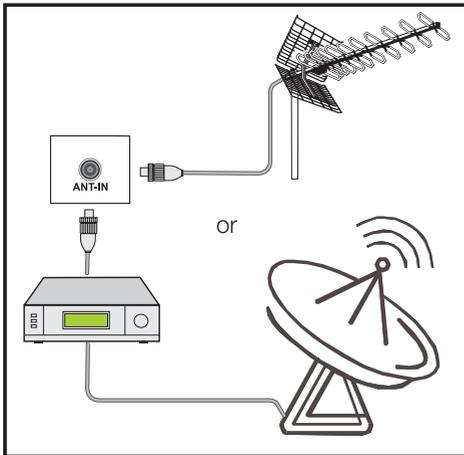

If you use a 75 Ohm coaxial cable (round cable) as an antenna cable, connect the antenna plug directly to the antenna input located on the TV.

Motorized vehicles, energy lines and telecommunication lines affect your antenna. Therefore, be careful to install your antenna away from these and metal surface in such a way that it shall not swing. Do not make your antenna cable longer than required and do not coil it. Make sure that it is not crimped passing through a window or door. Your antenna and cable might be affected by natural phenomena such as rain, wind, smoke and humidity over time. Periodically check your antenna and equipment.

4.2-Powering on your device and the initial use

1. Insert the power cable or the adaptor into the appropriate power supply input located on the back panel of the LCD TV.

2. Insert the plug of the power cable or adaptor, supplied with the device into the mains socket.

Note 1: Your TV will switch to the **stand-by** mode in five minutes if there is no broadcast signal from antenna.



3. To power on your television, press any numerical key or **PR+** or **PR-** keys on the remote control.

Note: If you are not going to use your television for a long time, unplug its power cable from the socket.

Initial power on and performing settings

To set up your television, read the sections on the TV controls and making the channel settings.


4.3-Batteries

Open the lid of the battery compartment and make sure that you have placed the batteries in the correct direction. For this remote control, UM-4, IEC R03 or AAA 1.5 V batteries are suitable.

Do not throw your old batteries into the fire, discard them in a dedicated waste area for this purpose.


Do not mix used batteries with new ones or different types of batteries together.

The performance of the remote control will be reduced at a distance of 8 meters from or at an angle of 30 degrees beyond the centre of the TV.

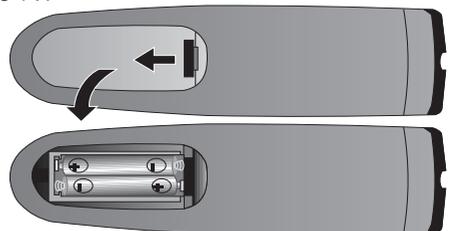


5 Your new television

5.1-TV Control Panel

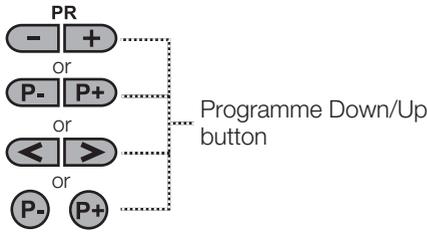

Programme Down/Up button

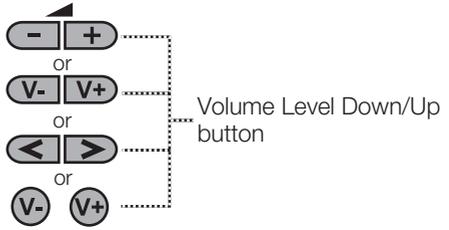

Volume Level Down/Up button



Menu button/Source selection button / Sound-Program Selection Button



Power/Standby button



Main power on/off button (optional)




Stand by indicator

Bright light: TV is in Stand-by

Dimmed light: TV is On

No light: Power Cable is not connected.

5.2-Rear and Side External Connections

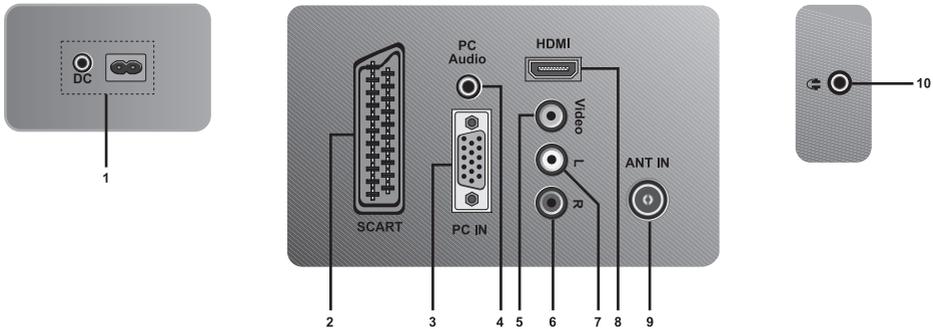

1- Power input

2- Scart/S-VHS input

3- VGA (PC/COMB connection) input

4- PC/COMB audio input

5- Video input CINCH connector

6-Sound input CINCH connector (Right/R)

7-Sound input CINCH connector (Left/L)

8- HDMI input

9-Antenna input

10-Headphone input

Important Note: DC power input is for models with an adaptor only.

Note 1: RGB input via Scart offers the best picture quality.

Note 2: Above drawing for external connections is representational. Their order and places on your TV may be different.

Please see Technical Specifications Table on page 23 for the available external connections on your television.

5.3-Remote Control



	Temporary off button
	Temporary sound mute button
	Numeric buttons
	Picture format selection button
	Switching back to the last viewed channel button
	Volume down / up buttons
	Programme forward / back buttons
	Confirmation button
	Up/Down navigation buttons
	Right/Left navigation buttons
	Enter menu button Teletext Question/Answer button (Reveal)
	Source Menu button Teletext page enlarge button (Double)
	Return to previous menu button
	TV/Teletext selection button
	Exit menu button
	Red Teletext button
	Green Teletext button
	Yellow Teletext button
	Blue Teletext button
	Information display button Teletext index button
	Teletext page stop button (Stop)
	Teletext Update button
	Teletext sub page button (Sub)

6 Performing the initial power-on settings

6.1-TV controls

6.1.1-Temporary on/off (STAND-BY)



When you press the red **POWER** button located on the upper right hand side of your remote control while your television is switched on, the sound and the picture will go off. In the stand-by mode, the power indicator of your television will glow brighter. To switch your television back on, either press any numeric

button or **PR+/PR-** buttons.

Caution! If you are not going to use your television for a long time, unplug its power cable from the socket.

6.1.2-Channel Selection



You may select whichever program number you would like by pressing the **PR+/PR-** buttons located on your television and your remote control. To select the programs that are above 9, you can use the Numerical buttons. You may enter the number of the programme you would like to select using the numerical buttons. For example,

to switch to the program number 12, press respectively the numeric buttons 1 and 2 on your remote control. You can perform the program selection also from the Program Table.

6.1.3-TV and AV Mode Selection



Press the **AV** button on your remote control. **SOURCE** menu will be displayed. Select **TV** or desired **AV** mode from the Source menu with **Up/Down** navigation buttons and confirm with **OK** button so that your television will switch to the source you have selected.

6.1.4-Temporary sound mute (MUTE)



To temporarily mute the sound of your television, press the **MUTE** button on your remote control. In that case, **MUTE** symbol will appear on the screen. When you press the same button a second time, the sound will be restored. If you press the **VOL+** button while in the Mute mode, the sound level is increased and the Mute function is aborted.

6.1.5-Returning to Selected Program (SWAP)




Allows you to switch between the current program you watch and the last selected program. For example, if you change the channel to Program 11 while you were watching Program 1, press **SWAP** button to switch back to Program 1. Press **SWAP** button to switch back to Program 11 again.

PR 01 ➔ PR 11 ➔ PR 01


6.1.6-Main Menu

Press the **M** button. The Menu including all the setting menus will appear on the screen. Navigate through the Menu titles with the **Up / Down** navigation buttons and press the **OK** button to select the desired menu. If you want to exit the menu in any step, just press the **EXIT** button. Press **←** or **M** buttons to return to the previous Menu while you are in a sub menu.

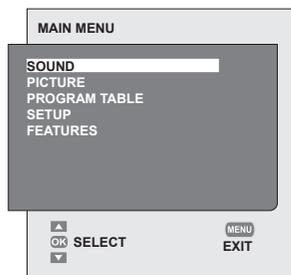

6.2-Turning on the TV and Setting the Channels

LANGUAGE menu will be displayed on the screen when you turn on your television for

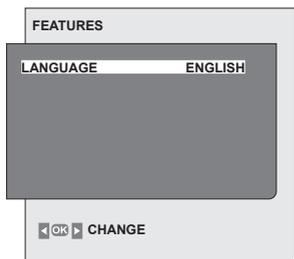

the first time. Select the language you would like to use on your television and press **OK** button to continue. **COUNTRY SELECTION** menu will be displayed.



If the antenna connections are made properly, select the country with **Up/Down, Left/Right** navigation buttons and press **OK** button to start autoprogramming. At the same moment, the marker indicating the progress of the autoprogramming will be displayed.

The Program Table, which will allow you to sort the channels as you wish, will be displayed after the search is complete.


6.2.1-Automatic tuning of channels and storing in the memory

You can either tune the programs Automatically or Manually and store them in your television.

Note: If your television does not receive any antenna broadcast for a period of 5 minutes, it automatically switches to the stand-by position. The countdown OSD is displayed on the screen during the last 1 minute.



You can tune the programs automatically with the Autoprogram function of your television and then sort the channels as you desire by means of the **Program Table**. Press the **M** button on your remote control. Select **SETUP** by pressing the **down** navigation button and confirm your selection with **OK** button. Setup menu is displayed.

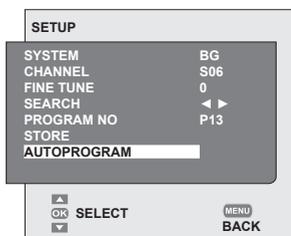

Select **PROGRAM NO** tab by pressing the **Up/Down** navigation buttons in Setup menu, enter the channel number to be searched and stored automatically, then select **AUTOPROGRAM** tab by using the **Up/Down** navigation buttons and press **OK** button; Country Selection menu will be displayed.



In the Country Selection menu, select the country, whose broadcast you would like to watch in priority, by pressing the **Up/Down** and **Right/Left** navigation buttons and start autoprogramming by pressing the **OK** button. The channels will be automatically searched and those found will be stored in memory starting from the program selected in the Setup menu. At the same moment, the marker indicating the progress of the autoprogramming will be displayed.




To stop the process at any given time, please press the **M** button. The Program Table, which will allow you to sort the channels as you wish, will be displayed after the automatic search is complete.

6.2.2-Manual tuning of channels and storing in the memory

6.2.2.1-If you already know the channel number

Press the **M** button. Move to the **SETUP** menu by pressing the **down** navigation button in Main Menu and confirm your selection with **OK** button. The Setup menu is displayed.

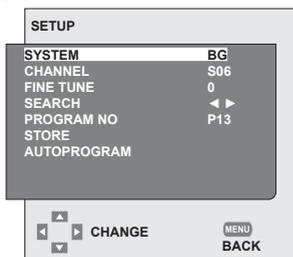

Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down navigation button. Press **OK** on your remote control to select “**S**” for cable channels and “**C**” for channels received via the antenna. Move onto the **PROGRAM NO** tab and using the number buttons enter the channel number in which you would like to have the channel stored. If the broadcast viewed on

the screen is of your desired quality, first move onto the **STORE** tab with the **Down** navigation button to store in the memory the selection you have made and store the channel by pressing the **Right** or **Left** navigation buttons. The prompt **STORED** will be displayed briefly. The channel will be stored according to the programme number of your choice. You can tune and store in memory other channels the same way. In the event that you wish to exit the channel settings menu for any reason, simply press the **EXIT** button.

6.2.2.2-If you do not know the channel number



Press the **M** button. Move to the **SETUP** menu by pressing the **down** navigation button in Main Menu and confirm your selection with **OK** button. The Setup menu is displayed. Select the system in which you would like to make the search from the **SYSTEM** tab. Move into **CHANNEL** tab by pressing the down navigation button. Press **OK** on your remote control to select “**S**” for cable channels and “**C**” for channels received via the antenna. Select **SEARCH** tab using the **up/down** navigation buttons, and scan the channels in ascending order with **Right** navigation button and

in descending order with **Left** navigation button. If the channel that is found is of your liking, select the **STORE** tab. Then store it in the memory by pressing the **Right** or **Left** navigation buttons. Repeat the same procedure for other channels by selecting the program number of your choice from the **PROGRAM NO** tab. If the channel you found is not of the desired quality and requires Fine Tuning or if you would like to rename the channel, refer to the relevant sections.

6.2.3-Fine Tuning




If the channel you found is not of the desired quality and requires **Fine Tuning**, then select the **FINE TUNE** tab by pressing the **Down** navigation button in the **SETUP** menu. Using the **Left/Right** navigation buttons on your remote control, adjust the broadcast displayed on the screen to your desired quality. Under normal

circumstances, you will not require to use the Fine Tune function. The Automatic Frequency Lock values of your television will automatically adjust and lock themselves to the channel. However, you might need it in case the TV channels do not operate according to the standards. To store in the memory, the settings you have made, select the **STORE** tab and press the **Right** or **Left** navigation button.

6.3-Program Table

Press the **M** button. Move to the **PROGRAM TABLE** tab by pressing the **Down** navigation button in Main Menu and confirm your selection with the **OK** button. Program Table menu will be displayed.

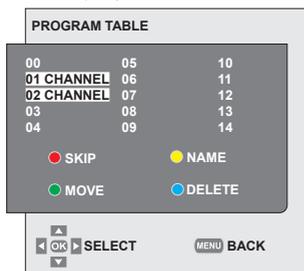

6.3.1-Switching the locations of the stored channels



Select the program you would like to relocate by pressing the **Up/Down** or **Left/Right** navigation buttons. Press the **“GREEN”** button. The program you selected will appear in red. Highlight the program number you would like to relocate by pressing the **Up/down** or **Right/left** navigation buttons. Finish the relocation process by pressing the **“RED”** button. To cancel relocating the channels, press the **“GREEN”** button. When you press **“RED”** button, the channel in the first program number you selected

selected program number and the channels between both program numbers have been shifted to the initially selected program number. After setting is complete, press **EXIT** button to exit the menu.

6.3.2-Deleting a stored channel



Select the program you would like to delete by pressing the **up/down** or **right/left** navigation buttons. Press the **“BLUE”** button. You may perform the deletion process by pressing the **“RED”** button or you may abort the deletion process by pressing the **“GREEN”**

button. Once you press the **“RED”** button, the selected program is deleted and all the following channels are transferred to previous

program number. After setting is complete, press **EXIT** button to exit the menu.

6.3.3-Skipping a stored channel



In the event that you do not wish to see certain programs while navigating through the channels using the **PR+/PR-** buttons, then you can use this function. Select the program that will be hidden by pressing the **up/down** or **right/left** navigation buttons. Press the **“RED”** button. The name of the program to be skipped will appear in red. You may perform this procedure for more than one programme. To view the skipped program, directly enter the program number using the numeric buttons. To cancel the program skipping process, press again the **“RED”** button. After setting is complete, press **EXIT** button to exit the menu.

6.3.4-To name the channels



You can assign your program or programs of choice the names that have a maximum of five characters. Select the program you would like to name from the Program Table by pressing the **up/down** or **right/left** navigation buttons. Press the **“YELLOW”** button. An empty space appears beside the channel for which you would like to specify name information. Here, choose the desired letter, number or sign using the **up/down** navigation buttons.


For the second character, press the **right** navigation button and then select the desired letter, number or sign again with the **up/down** navigation buttons. After entering all the characters, store the name you have written in the memory by pressing the **“RED”** button. To write names for any of the other programmes, simply repeat the above procedure. To cancel the program naming process, press the **“GREEN”** button. If you want to exit the menu, simply press the **EXIT** button. If the program is not named, then the channel number of that program will be displayed automatically.

7 Settings of Your New Television

7.1- Sound Menu Settings

7.1.1-Sound Menu

You can perform sound settings by entering the Sound menu. For this, press the **M** button on your remote control. Select **SOUND** by pressing the **Up/Down** navigation buttons from the main menu and press the **OK** button. The Sound menu is displayed.

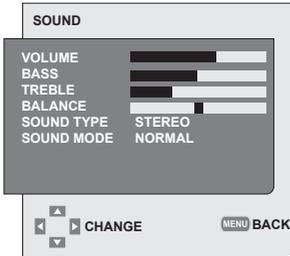

You can select the desired title to be processed from this menu. You can select the desired setting by pressing the **Up/Down** navigation buttons and adjust their levels with **Right/Left** navigation buttons. You can adjust **VOLUME, BASS, TREBLE, BALANCE, SOUND TYPE, SOUND MODE** levels as you desire. The changes you have made in the sound settings will be stored in the memory without requiring any other operations.

7.1.1.1-Sound Type

Sound Type option is displayed on the Sound menu in all inputs except for the Analog TV mode. You may select the Sound Type as **STEREO, DUAL I, DUAL II** by this option. If your selection is **DUAL I** or **DUAL II**, the **BALANCE** option in the menu will be deactivated and cannot be changed by the user.


7.1.1.2-Sound Mode

You may add some depth to the sound of the programme you are watching; to do this, select one of the **NORMAL, SPATIAL, SURROUND** options from the **SOUND MODE** tab by pressing the **Right/Left** navigation buttons. If your selection is **SPATIAL** or **SURROUND**, the **BALANCE** and **SOUND TYPE** options in the menu will be deactivated and cannot be changed by the user.

7.2-Picture Menu Settings

7.2.1-Picture Menu

You can perform other picture settings by entering the Picture menu. For this, press the **M** button on your remote control. Select **PICTURE** by pressing the **Up/Down** navigation buttons from the main menu and press the **OK** button. The Picture menu will be displayed.

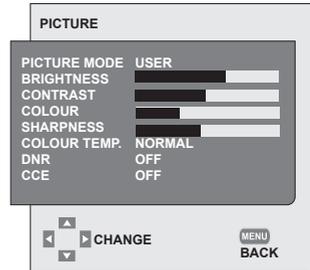

You can select the desired title to be processed from this menu. You can select the desired setting by pressing the **Up/Down** navigation buttons and adjust their levels with **Right/Left** navigation buttons. You can adjust **BRIGHTNESS, CONTRAST, COLOUR** and **SHARPNESS** levels as you desire. The changes you have made in the picture settings will be stored in the memory without requiring any other operations.

7.2.1- Picture Mode

You can select either one of the three non-adjustable settings in the memory or one of the user defined options by changing the **Picture Mode** option in Picture menu with **Right/Left** navigation buttons. **Soft, Natural, Rich** are default values; **User** represents the values you stored in memory.

7.2.2-Colour Temperature

Colour intensity of the picture can be adjusted with this feature. Select **COLOUR TEMPERATURE** tab from the picture menu by pressing the **Up/Down** buttons to activate this feature and then select one of the **COOL, NORMAL** or **WARM** options by pressing the **Right/Left** buttons.

7.2.3-DNR (Noise reduction)

You may reduce interference and noise formed in the picture by using this feature. Select **DNR** tab in the Picture menu with the **Up/Down** navigation buttons to activate this feature and select one of the **OFF**, **LOW**, **MID**, **HIGH** or **AUTO** options with **Left/Right** navigation buttons.

7.2.4-CCE (Colour&Contrast Enhancement)

With this feature, you can make the colours in the picture appear more saturated. Select **CCE** tab from the Picture menu by pressing the **Up/Down** buttons and then select **ON** by pressing the **Right/Left** buttons to activate this feature.

7.2.5-Tint

When NTSC video is input via Scart, you may make Hue settings. The tint option is not seen in the menu when you have not input this type of a video. When a NTSC video is connected via the Scart, this option becomes active and appears in the menu.

7.2.6-Picture Format

With this option, you can view the broadcast you watch in a format of your choice. You may view broadcastings in either **AUTO**, **16:9**, **14:9**, **4:3**, **LETTERBOX** or **SUBTITLE** formats. Picture format can be selected as **16:9**, **14:9** or **4:3** formats in **HDMI**, **YPBPR** and **PC** modes. In that case, the name of the selected picture format will be displayed in the centre of the screen.

Note: In **HDMI**, **YPBPR** and **PC** modes, **4:3** and **16:9** picture formats are supported.

7.2.6.1-Auto

Some movie channels may broadcast in the 16:9 format. If you would like to see this format automatically, then select **AUTO**. In that case, **AUTO 16:9** appears on your screen.



7.2.6.2-16:9

Please use this setting for watching wide screen DVDs, wide screen video cassette or 16:9 formatted broadcasts. Since various screen formats such as 16:9, 14:9 and etc. are used, black stripes might be formed on the lower and upper parts of the screen.



7.2.6.3-14:9

This is a movie format.



7.2.6.4-4:3

Use this setting to watch the broadcasts in the 4:3 format.



7.2.6.5-Letterbox

While watching a "16:9 or Cinemascope formatted" film or video cassette, this setting will eliminate or minimize the black stripes on the background by zooming in the picture without diffusing it.



7.2.6.6-Subtitle


If the subtitles are transmitted in the "16:9 formatted" broadcast, then this setting will push the picture upwards in order to ensure the entire written text to be seen.



Note: Since the use of certain functions in order to change the picture sizes for collective projection or commercial purposes (modifying the height and width etc.) will be deemed an infringement of the picture's copyright, legal proceedings can be carried out as required under relevant laws.

7.3-Features Menu Settings

Press the **M** button on your remote control. Select **FEATURES** by pressing the **Up/Down** navigation buttons from the main menu and press the **OK** button. The Features menu will be displayed.

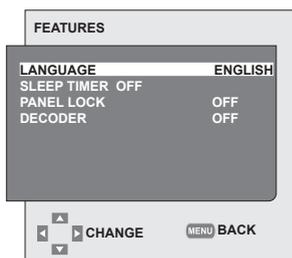

You can select the titles for which you would like to perform an operation in this menu by using the **Up/Down** navigation buttons.

7.3.1-Language

Select the Language tab and press **Right/Left** navigation buttons to select the language of the desired country. All the setting displays of your television will be shown in the language that you selected.

7.3.2-Off Time

Off Timer switches your television automatically to Standby Mode after the preset time has elapsed. You can adjust this time from **15** to **120** minutes with increments of 15 minutes. To activate this feature, select the Off Time tab and press **Right/Left** navigation buttons to select the desired time.

7.3.3-Panel Lock

If this feature is turned On, the control buttons on your LCD television will be locked and will not function. They will be active again when the feature is turned Off.

7.3.4-Decoder

This feature is used to turn off the sound and picture output on the scart. If the scart output is required to be active (on) for an analog decoder or recorder device that will be connected via its socket, then switch to the channel to be recorder and set the **DECODER** option to **ON** from the **FEATURES** menu by means of **right/left** navigation buttons. This value should be stored separately for each channel.

8 Teletext

Being one of the most prominent services of broadcasting today, Teletext renders the TV more fruitful. Teletext means in short the transmission of various updated information along with the TV broadcast signal in the form of text and graphics. To be able to receive a quality teletext broadcast, a good antenna system and a broadcast signal that is not weak, with no reflections and interference from other channels are required. Even in a very clear reception, it is normal for some characters or tabs to be lost. Such conditions will automatically be improved in a short time under normal circumstances.

8.1-Entering the Teletext Mode

 In a channel that does not have the Teletext feature, **NO TELETEXT** will be displayed when you press the **TXT** button. In order to switch your television to the teletext broadcast, please press the **TXT** button in a programme that has a teletext broadcast. To switch back to the television broadcast, press the same button again. Once you have switched to the teletext broadcast, the initial page that appears will be the index page. In this page, the titles of the topics in the teletext broadcast and the initial page numbers will appear.

8.2-Page Selection

 To be able to view the page you would like on the screen, type in the number of that page using the numerical keys. You can see the number you have entered on the left side of the upper title tab. When you would like to turn the pages one by one, you can go to the next page pressing the **up** button and to the previous page pressing the **down** button. Press the **I** button to return to the Index page.

8.3-Page enlarge button (DOUBLE)

 Using this button, you can watch the top half of the teletext page in an enlarged format. To be able to view the bottom half of the enlarged page, press the same button for the second time. Once you press the same button the third time, the page will be restored to its normal size.

8.4-Page Stop (HOLD)

 Some information is laid out in multiple pages and it is broadcast in an automatic cycle mode. For example, on a text of four pages, the pages are indicated with the figures 01, 02, 03 and 04 on the bottom of the page. Press this button to view one of these pages for a longer time. When you press the same button again, the cycle continues.

8.5-Subpage selection (SUB)

 If the page of text you are viewing contains sub pages the page numbers starting from 01 appear on the screen. You can switch to the sub pages with the **Sub** button. In which case, the sub page tab is displayed on the bottom line within “Red -” and “Green +” frames. You can select the subpages by pressing the “RED” and “GREEN” buttons. You can exit the sub page by pressing the **Sub** button again.

8.6-Temporary TV Picture (UPDATE)



This button allows you to switch to the television picture while the page you want is being searched in the teletext broadcast eliminating the need to wait during the search. You may switch to the television picture by pressing this button while Teletext is searching for your desired page. Once the page you want is found, the number of that page appears on the screen.

8.7-Question - Answer Button (REVEAL)



Sometimes, a teletext page contains a hidden answer such as a game or a riddle. Press **M** button to disclose the hidden answer.

8.8-Fasttext

The coloured buttons on the remote control are for the fasttext feature. When you select any page, the titles on various subjects may appear on the screen in four different colours or inside coloured frames (red, green, yellow and blue). By pressing the button pertaining to the relevant colour on the remote control, you can access the subject of your choice without waiting.

Note: The fasttext feature is not available for all teletext broadcasts. It is determined by the broadcasting agency whether it is to be broadcast or not.

8.9-Toptext (optional)

There is a topics line in yellow and blue at the bottom of the teletext screen. You can select the relevant topic by pressing the yellow or blue buttons on the remote control. You can select the next page by pressing the red button and the previous page by pressing the green button.

Note: Toptext feature is not available in every programme.


9 External Equipment Connections:

Your TV is equipped with **5** inputs including antenna input, which allows for the external device connection. These inputs are:

- 1- Antenna input
- 2- SCART input
- 3- AV input
- 4- VGA / YPBPR input
- 5- HDMI inputs

You can connect your external device supporting the suitable inputs to your TV via these inputs. By pressing the **AV** button on your remote control, select the external source input to which you connected your device.


9.1-Connecting external equipment via Scart connection

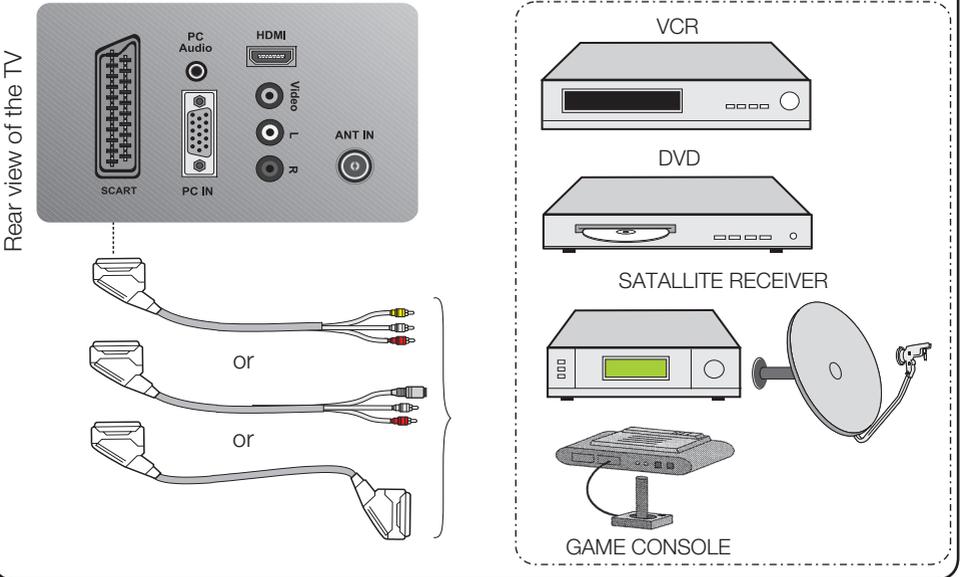

SCART : To watch the picture of the broadcast device connected to Scart, select **Scart** from the **Source** menu and press **OK** button. (You can watch via this Scart if the connected device has a RGB output).


S-Video: To watch the picture of the broadcast device connected using the **SVHS** input over the SCART input by scart converter, select **SCART-SVHS** option from the **Source** menu and press **OK** button. Your TV will switch to the selected source.

9.2-Connecting external equipment via AV connection

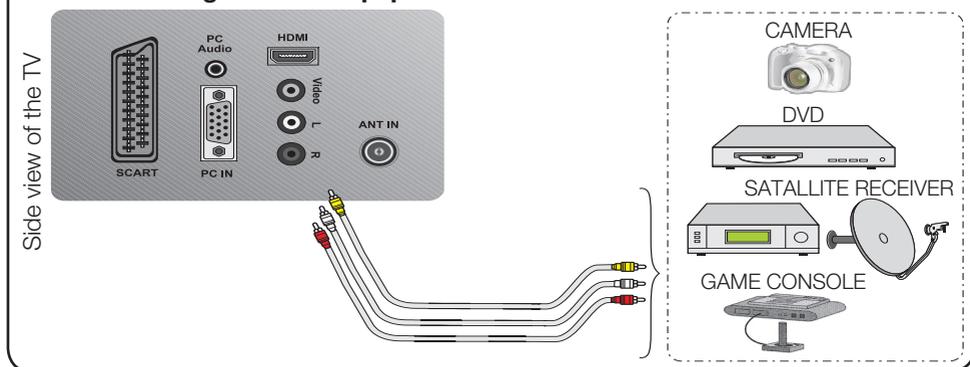

AV : To watch the picture of the broadcast device connected using the RCA (Cinch) input, select **AV** option from the **Source** menu and press **OK** button. Your TV will switch to the selected source.



9.3-Connecting an external device via YPBPR connection

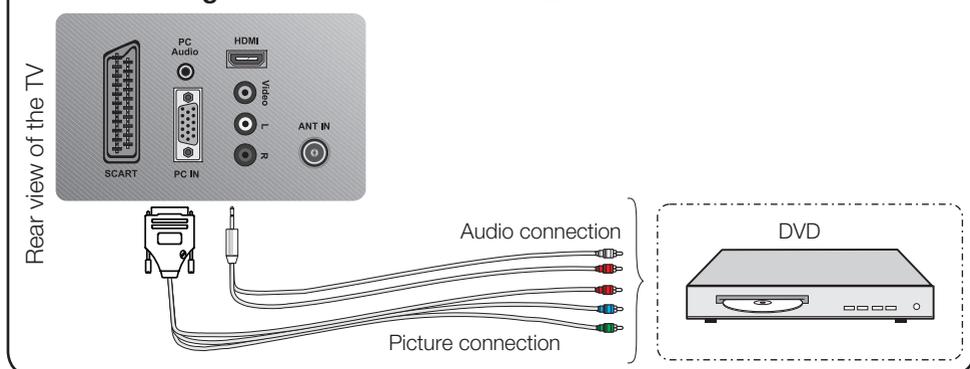

YPBPR (Component Input): When a connection is made via VGA socket with VGA to YPBPR, select **YPBPR** option from the **Source** menu and press the **OK** button to display the picture. Your TV will switch to the selected source.

9.4-Connecting an external device via HDMI connection

Side view of the TV

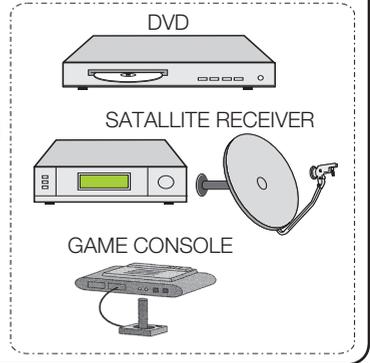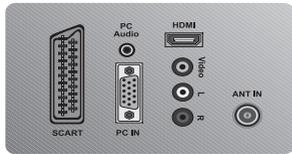

HDMI: When a connection is made via HDMI socket, select the **HDMI** input you connected through from the **Source** menu and press the **OK** button to be able to display these pictures. Your TV will switch to the selected source.

Connect to the HDMI input at the back of your TV by using the connector located on your PC or your digital video-transmission device with a suitable cable (not supplied with the TV).

Note: To be able to watch an image in the HDMI mode, your computer must be equipped with a HDMI graphic card.

You may display the resolution information by pressing the **I** button.

9.4.1-HDCP

Your TV supports HDCP feature. To use this feature, you must set up a connection to your TV set's HDMI video port and select **HDMI** by pressing the **AV** key on your remote control.


NOTE: In HDMI mode; some resolutions are supported when a DVI to HDMI converter cable from a PC is used. Only 16:9 and 4:3 are supported as picture format.

High Definition - HD-READY



Your television can receive high-definition signals (HDTV). You can connect the input sources (HDTV set-top box or HDTV DVD player) to the (HDMI) socket (digital HDTV signal). This ensures that you can view digital HDTV programmes, even if they are copy-protected (HDCP High-Definition Copy Protection).

9.5-PC connection

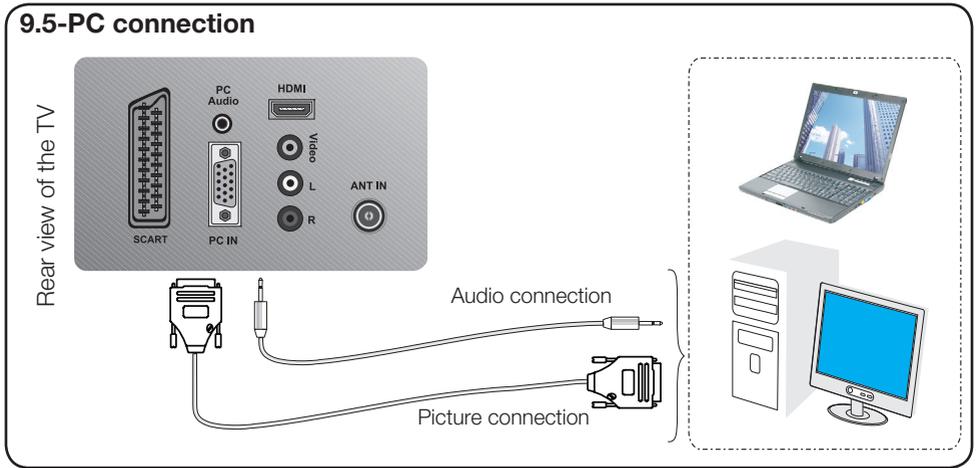

9.5.1-PC Connection:

Connect the D-Sub15 connector to the PC-IN socket at the back of your television by using an appropriate cable (not supplied with your television). Again, by using an appropriate cable, connect the audio output of your PC to the PC AUDIO-IN at the back of your television to listen to sounds from your PC and you can adjust the volume level of your source by using **VOL+ /VOL-** buttons.

9.5.2-Transition to the PC mode

For your LCD-TV to switch to the monitor (PC) mode, press the **AV** button on your remote control. **Source** menu will be displayed. Select **PC** by pressing the **Up/Down** navigation buttons and press the **OK** button.

9.5.3-PC Setting

Enter into the **Setup** menu from the Main Menu by pressing the **M** button in the PC mode. In order to make the necessary settings in this menu, you can select the headings with the **Up/Down** buttons on your remote control to perform the following monitor-related settings.

9.5.4-AUTOCONFIGURATION

The most suitable geometric settings in accordance with the entry mode are configured by this function. For this operation, select the **AUTOCONFIGURATION** tab and press **OK** button.

9.5.5-HORIZONTAL POSITION: Horizontal position setting.

9.5.6-VERTICAL POSITION: Vertical position setting.

9.5.7-CLOCK FREQUENCY: This is the pixel clock frequency. User can narrow down or enlarge the display by selecting a desired value.

9.5.8-PHASE: Using the right/left navigation buttons, you can ensure that the colors and shapes are exactly consolidated on the PC image.

9.5.9-PICTURE FORMAT

You can select the PC image to be displayed in 16:9 or 4:3 formats.

10 Help and tips

Failure	Possible cause	Solution
The television does not function	Is the power cord connected to the mains supply?	Check the power cord.
	Is the main power On/Off button on?	Check if the On/Off button is on.
Poor picture quality	Is the antenna cable attached?	Check the antenna cable.
	If you are using a satellite antenna, is it well adjusted?	Have the antenna adjusted.
	Aerial may be affected by two connected external devices.	Try disconnecting one of the devices.
	It may need fine tuning.	Perform fine tuning.
	Picture settings are not correct.	Adjust Brightness, Contrast and Colour.
Shadow and reflection in the picture.	Channel setting	Perform automatic, manual channel setting or fine tuning.
	Antenna	Check antenna cable and system
No picture	Is there any damage on the antenna cable?	Check the antenna cable.
	Are you sure you pressed the correct button on your remote control?	Press the PR+ or PR- button to turn on the TV.
No colour.	Colour intensity level is at the lowest setting.	Lighten the colour.
	Broadcast system setting (if setting choice is available)	Select the broadcast system.
	Problem in channel broadcasting.	Test with another channel.
No or defective teletext	Television channel (no teletext) or antenna system.	Test another channel for fine tuning and shadowy pictures
	Very weak signal	Check the antenna system.
No sound	Temporary sound mute may be on	Try pressing the mute button
	Is the sound turned down?	Turn on the volume with Vol + button.
Remote control does not work	Are the batteries correctly placed?	Place the batteries correctly.
	Are batteries exhausted?	Replace the batteries with new ones.
	Is there any obstacle between the remote control and television?	If yes, remove it.

If your television does not work properly even though you tried the above mentioned solutions, try turning it on and off again. If you cannot start your television even though you have applied all noted methods, refer to the dealer or authorised service from where you purchased the product. Never attempt to repair a faulty device yourself.

11 Technical Specifications Chart

SCREEN SIZE	16"	18.5"	21.6"	22"
Panel type	16", 16:9 Active matrix TFT	18.5", 16:9 Active matrix TFT	21.6", 16:9 Active matrix TFT	22", 16:9 Active matrix TFT
Sound output	2x2 W	2x2.5 W	2x3 W	2x3 W
Power consumption	24 W	30 W	45 W	50 W
Stand by power value	<1 W	<1 W	<1 W	<1 W
Scart input	Standard	Standard	Standard	Standard
Audio/Video RCA input	Standard	Standard	Standard	Standard
HDMI input	Standard	Standard	Standard	Standard
VGA / COMB input	Standard	Standard	Standard	Standard
PC / COMB Audio input	Standard	Standard	Standard	Standard

General technical specifications

Power supply AC:	220-240 V ~ 50-60 Hz
Power supply DC:	12V (*)
Program memory:	100
RF Aerial input:	75 Ohm (Co-axial)
Loudspeaker impedance:	16 Ohm
Sound systems:	Mono / AV Stereo
Batteries:	2xUM - 4, IEC R03 or AAA 1.5V
Channels received:	VHF (Band I Channel 2-4) VHF (Band III Channel 5-12) UHF (Channel 21-69) Cable TV (S1-S20/S21-S41)
Broadcasting systems received:	PAL BG SECAM BG SECAM BG DK PAL I

(*): These features are optional and they are not available on all models.

Design and specifications may be changed without prior notification.