

BEKO

BKK 2109

Electronic Toaster

User's Manual



This product has been produced in environmentally friendly, modern facilities

Dear customer,

We would like our product, which is manufactured in modern facilities and which has been subject to detailed quality control process, to provide you with the highest productivity. **Therefore, we would like you to read this manual thoroughly before you start using the product and we would like you to keep it as a reference.**

BEKO

C O N T E N T S



Part 1: Safety Warnings/3



**Part 4: Maintenance and
Cleaning / 6**



**Part 2: Technical Aspects of
your machine / 4**



Part 3: Using your machine / 5

Part 1: Safety Warnings

- ☛ Do not touch hot surface.
- ☛ Do not insert metal object, knives, forks and the like into the bread slot.
- ☛ Close supervision is necessary when any appliance is used by or near children.
- ☛ Do not use any unauthorised attachments with your toaster, they may be hazardous.
- ☛ Unplug from outlet when not in use.
- ☛ Appliance should not be used if the supply cable is damaged or dropped causing visible damage.
- ☛ Bread may burn. Therefore toasters must not be near or below curtains and other combustible materials. They must be watched.
- ☛ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ☛ Children should be supervised to ensure that they do not play with the appliance.

Attention

Before using your product, read carefully the following operating instructions. It is suggested that you keep these instructions in safe place. Check whether the voltage indicated on the base of the product is the same as the voltage in your home.

Attention!

Before using the toaster, read carefully the following operating instructions. It is suggested that you keep these instructions in safe place.


Check whether the voltage indicated on the base of the toaster is the same as the voltage in your home.





Part 2: Technical Aspects of your machine

Voltage : 230V ~ 50 Hz.
Frequency : 50 Hz.
Power : 800 W
Net Weight : 1164 gr
Capacity : Two slice
Isolation Class : I

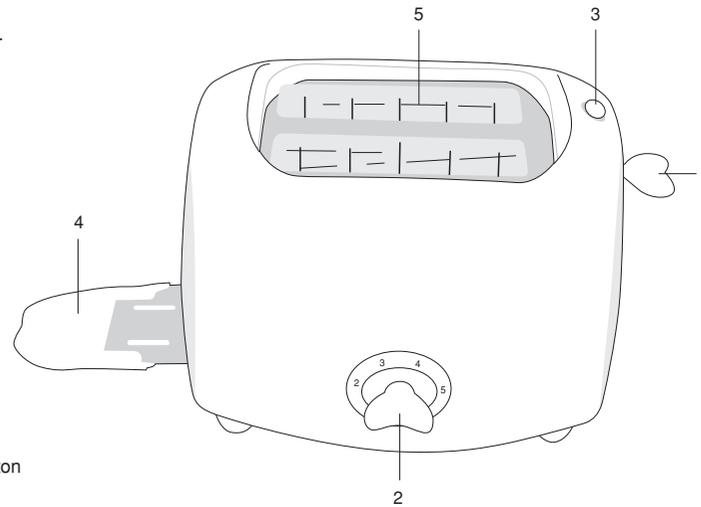

- 1 - On Switch and Hi-Lift Lever
- 2 - 6 Browning Level Control Button
- 3 - Cancel Button
- 4 - Crumb Tray
- 5 - Self Adjusting Grills

Part 3: Using your machine

*Plug your toaster into a suitable mains supply, place the bread to be toasted into the bread slot.

*Set the browning control (Figure 1) to the desired setting and fully depress the lever (Figure 2), this will switch on the appliance. The browning control may be rotated to vary the toasting time and therefore the degree of browning. To increase the degree of browning, rotate the browning control button (Figure 3) clockwise and counterclockwise to reduce browning.

*As soon as the toasting cycle is complete, the toasted items will "pop up" ready for use.

Note : For toasting small or awkward items the bread carriage mechanism has been designed to include an "Extra Lift" feature. After the cycle has finished with the carriage in its normal upper position, simply lift the carriage lever to the top of its travel, this will allow easy removal of the small or awkward items (Figure 5).

*If you wish to cancel the toasting cycle at any stage during its operation, depress the cancel button (Figure 4).

*After using the toaster, disconnect your toaster by switching off at the mains supply or removing plug.

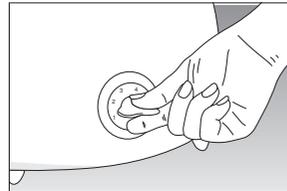


Figure 1

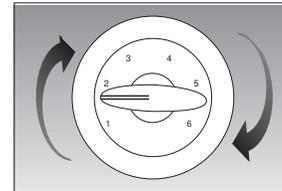


Figure 3

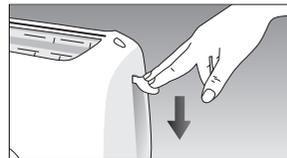


Figure 2



Figure 4

Attention!

In case of damaging the power cord repairs should be only by authorized service.

During operation high temperatures on touchable surfaces could occur.

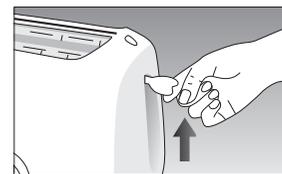


Figure 5





Part 4: Maintenance and Cleaning

Unplug your toaster from the main supply and allow to cool. Slide out the crumb tray (Figure 6) and discard the crumbs, wipe clean and

replace. Carry out this regularly to prevent the build-up of crumbs which can smoke or even burn.

Note : Never immerse the toaster in water or liquid. Wipe the outside with a clean damp cloth.

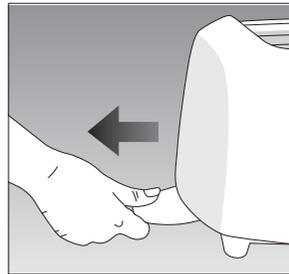


Figure 6