


! Attention: Please read the operating manual prior to operating the machine for the first time.

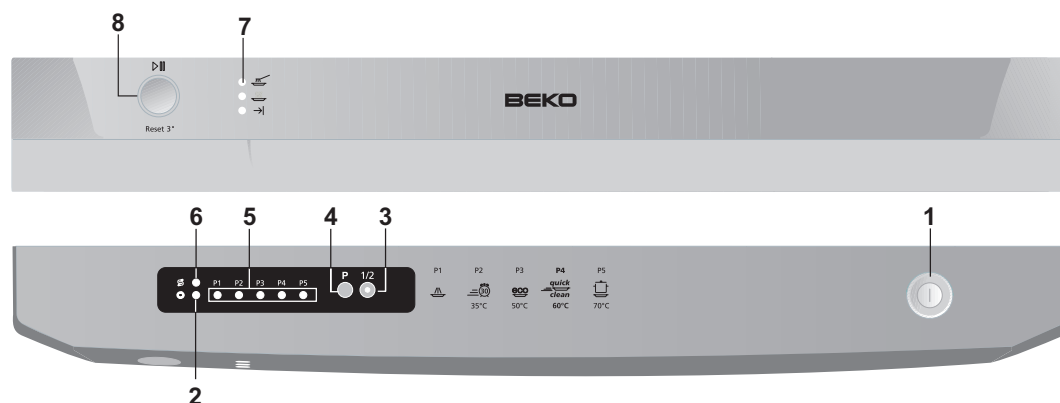

- 1 On/Off button
- 2 Rinse aid level indicator light
- 3 Half Load (1/2)
- 4 Programme selection button
- 5 Programme indicator lights
- 6 Salt level indicator light
- 7 LED progress indicator lights
- 8 Start/Cancel button

How to use your dishwasher:


 



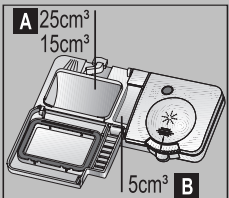
- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Pour (Put in) the detergent.
- Push in the on/off button and check that the programme light comes on.
- Check the salt and rinse aid level indicators before you start the machine. If necessary add salt and rinse aid.
- Use the programme selection button to choose your washing programme.
- When there are few dishes, additionally use the Half load button.
- Close the door then programme starts.
- Start the programme with the Start/Cancel button.

Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the On / Off button to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.

Programme Table

Programme number	1	2	3 Reference*	4	5
Programme name	 Pre-wash	 30 Min.	 Eco	 Quick & Clean	 Intensive
Cleaning temperature	-	35°C	50°C	60°C	70°C
Degree of Soiling	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup. 	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Most economical washing program for the medium soiled daily dishes that are kept waiting.	Daily washing program at which the medium soiled dishes that are kept waiting are cleaned in the fastest way.	Suitable for heavily soiled dishes, pots and pans.
Detergents A=25 cm³/15 cm³ B=5 cm³	-	A	A+B	A+B	A+B
Programme sequence (without options)	Pre-wash ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End
Duration (min)	14	30	144	58	115
Water (l)	4,2	11,8	15	11,8	17,5
Energy (kWh)	-	0,79	1,03	1,32	1,67
Left-on mode / Off mode (W) ***	0.53 / 0.05				

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

* Reference programme for testing institutes The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

*** Power consumption in off-mode and left-on mode are measured according to EN 62301.




- 1 On/Off button
- 2 Rinse aid level indicator light
- 3 Half Load (1/2)
- 4 Programme selection button
- 5 Programme indicator lights
- 6 Salt level indicator light
- 7 LED progress indicator lights
- 8 Start/Cancel button

On/off button

You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used programme will light up.

Visual Indicator

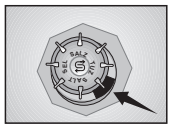


Salt level indicator light

When this indicator light comes on, you must refill special salt (If applicable).

In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container.

When the colour is light, open the container and add dishwasher salt.

Visual Indicator

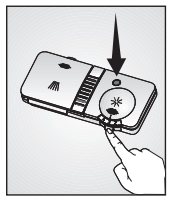

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Program selection buttons

Use the program selection button to select the desired program. The corresponding program light lights up.

Half Load (1/2) button

When there are few dishes, you press this button after pressing the programme selection button. When turning the dishwasher on, the indicator light on the button lights up. This function helps you to save water and energy.

Start/cancel button

You use this button to start the selected programme.

Wash ●

Dry ●

End ●

LED progress indicator lights

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

! Warning

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then End progress indicator light will come on.

! Warning

Do not switch the machine off before End light comes on.

How to cancel the washing program

To cancel a programme while the machine is operating:
Open the door.

! Care must be taken when opening the door, as steam will escape. Press the Start/Cancel button for 3 seconds. Start/Cancel indicator light will start flashing. Close the door. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when Start/Cancel indicator light goes off. Then you can choose and start a new programme.

! Important:

Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

! How to change the washing program

To change the program selection while the machine is operating open the door.

! Care must be taken when opening the door, as steam will escape. Press Start/Cancel button. The indicator light will go off. Select the new program. Press Start/Cancel button. The indicator light will be on and close the door new program will start.

! Important:

The new program will NOT start right from the beginning. It will start from the stage last carried out by the previous program selection.

! Warning

Depending on the length of the terminated program detergent and rinse aid may still be in the dispensers.

Improper Loading Of Dishware

