




QUICK START UP GUIDE

It is essential that you carefully read right through the installation & operation instruction booklet before plugging in to the mains socket.

All temperatures are in degrees celsius

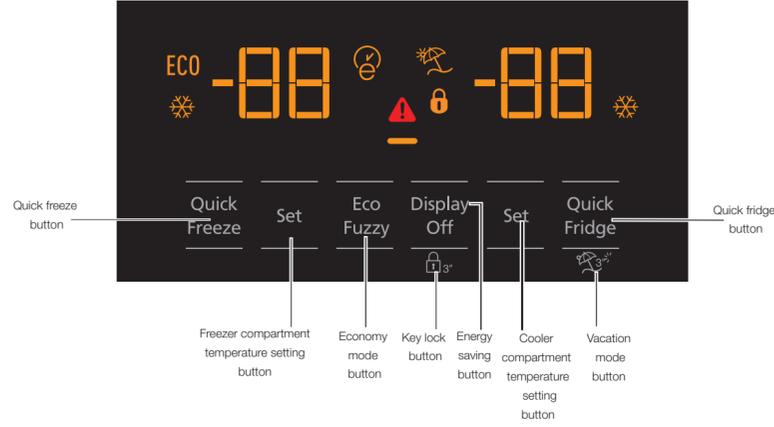

Before starting

- 1 Remove all packaging.
- 2 Clean the interior.
- 3 Level by adjusting the front feet
- 4 Leave to settle for at least 4 hours if the product has been transported horizontally.

Starting

- 1 Insert the plug in the mains socket and switch on.
- 2 The appliance may not start immediately- wait for about 5 minutes.
- 3 The display shows factory pre-set temperatures which are -18°C, 4°C.
- 4 You will then hear the compressor, fans, air and refrigerant gas flows (you may also hear some cracking/popping sounds which is normal).
- 5 Do not load with food immediately.
- 6 When the correct storage temperatures have been reached (approximately 8 hours), you can start loading food.
- 7 The freezer High temperature indicator light (H) will be activated 24 hours after the first operation if there is a fault maintaining the temperature. Monitor for 12 hours before calling service.

ÖN SAYFA



QUICK START UP GUIDE

Quick Freeze

To freeze a large amount of fresh food, press the quick freeze button before placing the food in the freezer compartment.

When the quick freeze function is turned on, the quick freeze indicator will light up and the freezer compartment temperature indicator will display the value -27. Press the quick freeze button (❄) again to cancel this function. The quick freeze indicator will turn off and return to normal setting. The rapid freezing function will be automatically cancelled after 24 hours, unless cancelled by the user.

Quick Fridge

To cool a large amount of fresh food, press the quick fridge button before placing the food in the cooler compartment.

When the quick fridge function is turned on, the quick fridge indicator will light up (❄) and the cooler compartment temperature indicator will display the value 1. Push the quick fridge button again to cancel this function. The quick fridge indicator will turn off and return to normal setting. The quick fridge function will be automatically cancelled after 1 hour, unless cancelled by the user.

Fridge set temperature

Fridge compartment temperature can be set to 8,7,6,5,4,3,2 and 1 respectively.(F)

Freezer set temperature

The temperature in the freezer compartment is adjustable. Freezer temperature can be set to -18,-19, -20, -21, -22, -23 and -24.

Key lock section

Prevent any accidental touching of the control panel by activating the key lock. Simply keep the key lock button pressed for 3 seconds. To remove the lock, again keep the button pressed for 3 seconds.

Alarms

If one of the doors is left open for longer than 1 minute, an audible alarm will sound to alert you to close the door as soon as possible.

To cancel the alarm, press one of the buttons on the display.

If the freezer temperature rises above the set temperature, then (H) indicator will light.

If this indicator remains on for over 12 hours, refer to the instruction booklet for advice.

Don't worry if the indicator light comes on for a few hours. It could be due to the warm food put in or warm air in the compartment when the door has been left open.

Self-diagnostics

Your appliance incorporates a self-diagnostics system. Certain messages will appear where the freezer temperature is displayed. Please refer to the instruction booklet for further information.

IMPORTANT WARNING: RISK OF ELECTRIC SHOCK ! IF IN DOUBT CONTACT A QUALIFIED ELECTRICIAN
Switch off and unplug from the mains supply before removing the top hinge and electrical component covers.
Make sure installation instructions in the booklet are observed. Specifications may change without notice.

4885570200-AG

ARKA SAYFA

03	02	01	TIP	MALZEME	RENK	STANDART	ÖLÇÜ					
								TARİH	İSİM	BEKO UK QUICK STARTUP (YENİ SBS) ETİKETİ		
								BESİME AKGÜN				
								EMRAH BİLGİÇ				
								EMRAH BİLGİÇ				
								RESİM NO.			ÖLÇEK	
								Ma. Sınıf	Komp. Sıra no.	Tip	St. Değ.	SAYFA NO 1
								48	8557	..	00	
							YERİNE GEÇTİ			TAMAM 1	