

# Kettle

## User Manual



BKK 2105

**EN**

01M-8930243200-1616-01

**beko**

## Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

### Explanation of symbols

Throughout this user manual the following symbols are used:



Important information or useful hints about usage.



Warning for hazardous situations with regard to life and property.



This product has been manufactured in environmental friendly modern plants without giving any harm to the nature.

Complies with the WEEE Regulation.



Does not contain PCB.  
Made in P.R.C.

# CONTENTS

---

## **1 Important instructions for safety and environment 4-8**

---

1.1 General safety ..... 4

1.2 Compliance with the WEEE  
Directive and disposal of waste  
products ..... 8

1.3 Package Information ..... 8

## **2 Your kettle 9**

---

2.1 Overview ..... 9

2.2 Technical data ..... 9

## **3 Operation 10-11**

---

3.1 Preparation ..... 10

3.2 Operation ..... 10

## **4 Cleaning and care 12-13**

---

4.1 Cleaning ..... 12

4.2 Descaling ..... 12

4.3 Storage ..... 13

# 1

## Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Failure to follow these instructions invalidates the granted warranty.

### 1.1 General safety

- This appliance complies with the international safety standards.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Do not use it if the power cable or the appliance itself is damaged. Contact an authorised service.

# 1

## Important instructions for safety and environment

- This appliance is intended to be used in household only. It is not designed for professional use in:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels, and other residential type environment
  - bed and breakfast type environment.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- For additional protection, this appliance should be connected to a household faulty current protection switch with no more than 30 mA.
- Use the appliance with a grounded outlet only.
- Do not use the appliance with an extension cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.

# 1

## Important instructions for safety and environment

- Do not touch the appliance or its plug with wet or damp hands when the appliance is plugged in.
- Do not pull the power cable when unplugging the appliance.
- This appliance is intended for private domestic use only and is not suitable for professional-catering purposes.
- Never fill the appliance above the maximum level indicator, boiling water may splash out.
- Do not fill the kettle below the minimum level indicator.
- Do not open the lid while the water is boiling.
- Position the lid so that the hot steam is directed away from you.
- Hold the appliance by the handle only.
- Never operate the appliance without any water inside it.
- Do not fill the kettle when it is fitted on its base.
- Operate the appliance with its original base.

# 1

## Important instructions for safety and environment

- Always use the appliance on a stable and flat surface.
- Do not attempt to dismantle the appliance.
- Only use the original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning. After cleaning, dry the appliance and all parts before connecting it to mains supply.
- Do not immerse the appliance, or power plug in water or any other liquids.
- Never use the appliance in or near to combustible or inflammable places and materials.
- If you keep the packaging materials, store them out of the reach of children.

# 1

## Important instructions for safety and environment

### 1.2 Compliance with the WEEE Directive and disposal of waste products

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging. Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

### 1.3 Package Information



The packaging used for the appliance is made of recyclable materials. Please ensure that the packaging materials are disposed of as per the applicable local rules in order to include the materials in recycling process for environment protection.



## 2 Your kettle

### 2.1 Overview



1. Filter (inside)
2. Lid
3. Lid release button
4. On / Off switch
5. Handle
6. Water level indicator
7. Base
8. Power cord storage

### 2.2 Technical data



**Power supply:** 230 V~, 50 Hz

**Power:** 2200 W

Technical and design modifications reserved.

All declared values on the product and on the printed leaflets are picked up after laboratory measurements performed according to related standards. These values may differ upon usage and ambient conditions.

## 3 Operation

### 3.1 Preparation

1. Before using of the appliance for first time, clean all parts which come into contact with water carefully (See 4.1).
2. Completely roll out the power cord from the power cord storage (8) on the bottom. Pass the power cord through the slot on the base (7).
3. Fill the kettle with water.
4. Set the kettle on its base (7). Make sure that the kettle is sitting in an upright position and that it is sitting on the base correctly and in a stable position.
5. Pour out the hot water and rinse the kettle with water. This will remove any remaining manufacturing residues from the inside of the kettle.
6. Clean kettle well before initial use and discard water of first two boiling cycles.

### 3.2 Operation

1. Push the lid release button (3) on the kettle to open the lid (2).
  - The lid (2) opens automatically.
2. Fill the water tank with water.



Do not place the kettle on the base (7) while filling it with water.

3. Close the lid (2) until it clicks into place.
4. Place the water tank on the base (7). Make sure that it is sitting in an upright and stable position.
5. Insert the plug into the wall socket.
6. Press down On / Off switch (4).
  - Power on indicator illuminates and heating process begins.

### 3 Operation



Lid (2) should always be closed during the heating process; otherwise the kettle will not switch off automatically.

7. After a few minutes, the water will start to boil. The kettle switches off automatically and On / Off switch (4) moves upwards.



If you want to stop the heating manually, push the On / Off switch (4) upwards. Power on indicator (4) goes off.

8. Disconnect the plug from the wall socket.
9. Take the kettle from the base (7). Only hold it by the handle (5).



**WARNING:** Do not open the lid (2) as hot water could splash out. Make sure that no water splashes onto the base (7).

10. Pour the water from the spout to the cup or glass you want to use.



Let the kettle cool down between each heating process.

## 4 Cleaning and care

### 4.1 Cleaning



**WARNING:** Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.
3. Use a damp soft cloth and a little mild cleanser to clean the exterior of the appliance.
4. The filter (1) can be removed for cleaning purposes. To do this:
5. Press the release downwards and take out the filter (1).
6. Depending on the level of lime build-up, clean the filter (1) with water and a little lemon juice or white vinegar. Use a soft brush.
7. Insert the filter (1) again from above until it clicks into place.



**WARNING:** Never put the appliance, base (7) or power cord (8) in water or any other liquid.

### 4.2 Descaling

Descaling extends the life of your kettle. Descaling period depends on the water hardness of your area.

1. Fill the kettle with water, up to three quarters of the maximum level.
2. Add white vinegar or citric acid in the kettle up to the maximum level.
3. Boil the solution (refer to operation section).
4. After the kettle has switched off, unplug the appliance.
5. Leave the solution in the kettle for a few hours.

## 4 Cleaning and care

6. Pour out the solution and rinse the inside thoroughly.
7. Fill the kettle with clean water and boil the water.
8. Empty the kettle and again rinse it with water.



If there is still some scale, repeat the procedure.



You can also use a descaler which is appropriate for utensils. If you use a descaler, please follow the instructions of that descaler.



**WARNING:** If you do not descale the kettle after a long time you use it, the bottom at the inside of the water tank fully gets covered with scales of lime and the appliance will not work again. In that case, it requires to be repaired by a service centre.

### 4.3 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Wind up the power cord (8) around the power cord storage (8) on the bottom of the base (7).
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.





