 




DL1243AP Programme Chart and Quick Reference Guide

Before starting, it is essential that you carefully read right through the Installation & Operation Instruction booklet before plugging in to the mains socket.

 
 
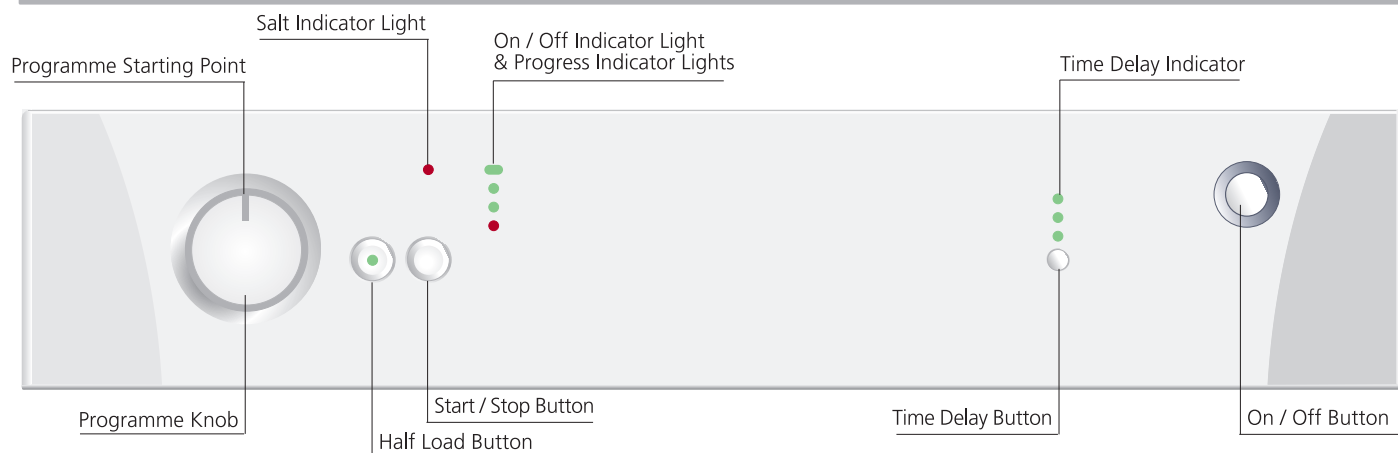 


Programme symbols and temperatures	1 RAPID 35°C	** 2 ECO 50°C	3 QUICK & CLEAN 60°C	4 INTENSIVE 70°C
Programme selection	Lightly soiled dishes 30 minute programme	Most economic programme for normally soiled dishes	Lightly soiled dishes, A class cleaning in 58 minutes	Heavily soiled dishes requiring Hot pre-wash
Detergent compartment A=25 cm ³ / 15 cm ³ B=5 cm ³	A	A+B	A+B	A+B
Programme sequence	Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying	Prewash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Hot rinse ▼ Drying
Consumption figures [*]				
Water (Litres)	11,8	14	11,8	17,5
Energy (kWh)	0,79	1,02	1,32	1,67
Duration (min)	30	165	58	115

* Values declared on the product or in the operating instruction booklet / programme chart and quick reference card supplied with the product are obtained in tests performed under controlled laboratory conditions and these tests are as defined in relevant standards. These figures may vary depending on how soiled the dishes are, the water hardness level and other factors. Water inlet temperature, which is 13°C to 17°C in standard test conditions, is also an important variant that may effect the figures.

** Reference programme for the Testing Institute and energy labeling. Testing program: Eco 50°C as compliant to EN 50242 international norms.

*** Due to continual improvement through research & design, specifications and design may change without prior notice.

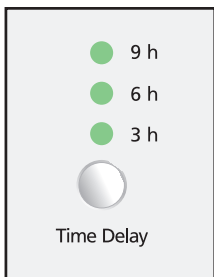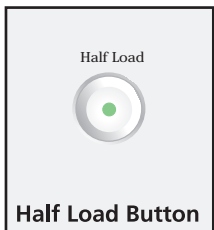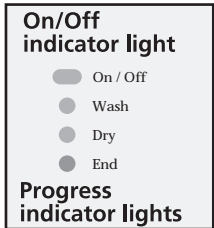

Operating the dishwasher

- Turn the water tap on. Open the door of the machine.
- Check that the upper and lower arms can rotate freely.
- Pour (Put in) the detergent.
- Close the door of the machine.
- Push in the on/off button and check that the on/off indicator light comes on.
- Select the required programme by referring to the programme chart.
- Select the desired programme by turning the selector knob.
- Press start / stop button and check that the wash indicator light comes on.
- ! Do not open the dishwasher door whilst the appliance is in operation. However, in case the door is opened while the machine is working, then a safety mechanism ensures the machine immediately stops. Water may be very hot, so be careful.
- ! Care must be taken if opening the door, as steam and water will escape.
- Press the on/off button after the programme is completed. The indicator light will go off.
- Unload the baskets - we recommend to turn off the water tap when not in use.

Programme Sequence

While the dishwasher operates, "Wash" indicator light will be on. When the programme selected is completed, "Wash" indicator light will go off Dry Indicator will come on. When drying finished "End" indicator light will come on.

How to cancel the washing programme

To cancel a programme while the machine is operating:

- Press and hold start/stop button for 3 seconds. The wash indicator light will start flashing. The machine will drain the water inside the machine for 45 seconds.
- The programme is cancelled when wash indicator light goes off. Then, you can choose and start a new programme.
- ! Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

Half Load

Select Half Load when using any wash programme [Except Prewash] to save on water, electricity and time if the machine is only half full. You can place dishes anywhere in the machine; some upper and some lower basket.

Time delay

With the delay function of your machine, you may delay the starting time of the programme up to 3-6-9 hours using the Time delay button.

3-6-9 hour lamps will start flashing respectively, each time you press the delay button. If you press the Start/Cancel button while the desired delay lamp is flashing, then the delay lamp comes on constantly and the function is saved to the memory. As of this moment, the countdown starts. Upon completion of the delay period, the delay lamp will go off and the selected washing programme will start.

If you press the Delay Button when the 9 hours delay lamp is flashing, then the delay lamps goes off. If you press the Start/Cancel button when the Delay Lamps are not lit, then the selected programme will start without any delay.

You may follow the remaining delay period from the delay lamps.

For example: If you select the 9 hours delay option, then the 6 hours lamp will come on when there is 6 hours remaining to the start of washing programme and 3 hours lamp will come on when there is 3 hours remaining.

Changing the delay period

Press Start/Cancel button. The Delay period lamp will start flashing. You may choose the new delay time by pressing the delay button again. Press Start/Cancel button again to save the setting.

Cancelling the delay function

Keep the Start/Cancel button pressed for 3 seconds. The selected delay period will be cancelled. As soon as the cancelling starts, the water that may be remained in your machine will be drained for 30 seconds due to safety reasons.

BEKO