


! Attention: Please read the operating manual prior to operating the machine for the first time.

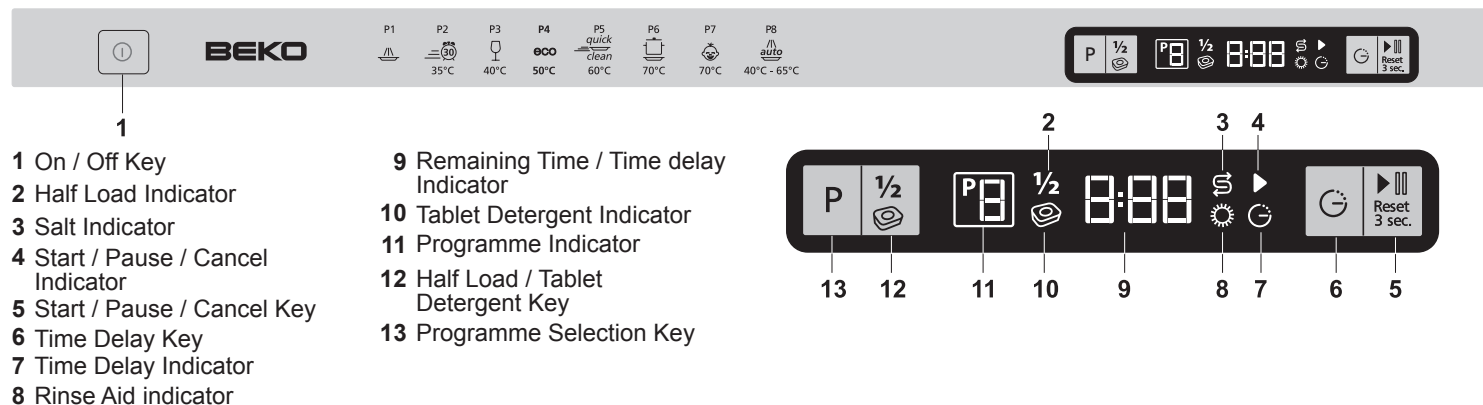

Starting your machine

- Open the tap.
- Plug in to the socket.
- Open the door of the dishwasher.
- Place the dishes in accordance with the instructions in the user manual.
- Make sure that the upper and lower impellers rotate freely.
- Put sufficient amount of detergent in the detergent dispenser and close its lid.
- Make sure that indicators on programme display are illuminated by pressing On / Off key.
- Check if the Salt and Rinse Aid indicators light and add salt and / or rinse aid if needed.

⚠ Since different salt brands in the market have different particle sizes and since the water hardness may vary, dissolution of the salt in water may take a couple of hours. Therefore, Salt Indicator remains on for a while after adding salt into the machine.

- You may use Half Load / Tablet Detergent Key and Time Delay key features as necessary.
- Refer to "Table of Programme Data and Average Consumption Values" to select a suitable programme.

- Select the desired programme with Programme Selection key.
- Press Start / Pause / Cancel key to start the programme.

- ⚠ Pay attention not to open the door of the machine when it is running. If you need to open the door, safety system will stop your machine. There may be a rush of vapour when you open the door of your machine; be careful. The programme will resume running when you close the door.
- When the programme you have selected comes to an end, an audible warning signal with intervals of 8 seconds will warn you to turn off your machine. This audible signal will warn you 10 times before it turns off.
- Open the door of the dishwasher.
- Press On / Off key to turn off your machine.
- Indicator lights on the programme display will turn off.
- Close the tap.
- Unplug the machine from the socket.

- ⚠ Leave your dishes in the machine for about 15 minutes after they are washed in order to have them cooled down. Your dishes will dry in a shorter time if you leave the door of your machine ajar during this period. This will increase the drying effectiveness of your machine.

Programme Table

| Programme number | 1 | 2 | 3 | 4 Reference* | 5 | 6 | 7 | 8 |
|--------------------------------------|---|---|--|---|---|--|---|---|
| Programme name | Pre-wash | 30 Min | Delicate | eco | Quick&Clean | Intensive | Baby Protect | Auto |
| Cleaning temperature | - | 35°C | 40°C | 50°C | 60°C | 70°C | 70°C | 40°C - 65°C |
| Degree of Soiling | Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup. | Suitable for lightly soiled daily dishes that are scraped or pre-cleaned. | Suitable for dishes that are not pre-cleaned but washed immediately. | Most economical washing program for the medium soiled daily dishes that are kept waiting. | Daily washing program at which the medium soiled dishes that are kept waiting are cleaned in the fastest way. | Suitable for heavily soiled dishes, pots and pans. | Suitable for the dishes which require extra hygiene such as articles for babies. Also suitable for heavily soiled dishes. | Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes. |
| Detergents | - | A | A | A+B | A+B | A+B | A+B | A |
| Programme sequence (without options) | Pre-wash ▼ End | Wash ▼ Cold rinse ▼ Hot Rinse ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End | The programme sequence is adjusted to the amount of soiling |
| Duration (min) | 15 | 30 | 83 | 171 | 58 | 143 | 124 | 80-154 |
| Water (l) | 4 | 10,4 | 13,4 | 10 | 10,2 | 16,2 | 17,8 | 10,4-14,2 |
| Energy (kWh) | - | 0,8 | 0,88 | 0,92 | 1,32 | 1,26 | 1,97 | 0,90-1,42 |


The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

* Reference programme for testing institutes The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

On / Off Key

When you press On / Off key, indicator lights illuminate on the display for ON position. The lights turn off in OFF position.

Visual Indicator

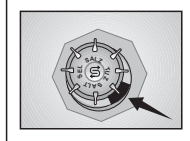

Salt level indicator light

When this indicator light comes on, you must refill special salt (If applicable).


In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the

container.

When the colour is light, open the container and add dishwasher salt.

Visual Indicator

(If applicable)

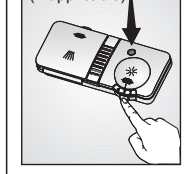

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Programme Selection Key

Refer to "Table of Programme Data and Average Consumption Values" to select a programme suitable for your dishes. Select the desired programme with programme selection key.

Half Load / Tablet Detergent Key

Half Load / Tablet Detergent Key allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

Half Load Function

If you want to run your machine without loading it completely, place your dishes into the machine as you desire. Press On / Off key to turn on your machine. Press the Half Load / Tablet Detergent key after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel key and close the door of your machine. With the Half Load option you can use every part of your lower and upper baskets and you can save from both water and power.

Tablet Detergent Function

Depending on the hardness level of the tap water, the Tablet Detergent function allows obtaining a better drying performance from the multi-purpose detergents such as 2in1, 3in1, 4in1, 5in1, etc., called as all-in-one detergents. Tablet Detergent Indicator lights when the Tablet Detergent function is selected. Salt and Rinse Aid indicators turn off when this function is activated.

Turn on your machine by pressing the On / Off key to use the Tablet Detergent function. Press the Half Load / Tablet Detergent key after selecting the desired programme until Half Load Indicator lights up, then press Start / Pause / Cancel key and close the door of your machine.

To use the Half Load and Tablet Detergent functions concurrently, turn on your machine by pressing the On / Off key and then press the Half Load / Tablet Detergent key until Half Load and Tablet Detergent Indicators illuminate together.



If you have used Half Load or Tablet Detergent features during the last programme you used, Half Load or Tablet Detergent function will remain active in the next washing programme you will select. If you do not want to use these functions in the new programme you have selected, press the Half Load / Tablet Detergent key until the indicator of the relevant function turns off.

Changing Warning Sound Volume

Press and hold Half Load / Tablet Detergent key for 5 seconds until S:03 appears on the display. Every time you press the Half Load / Tablet Detergent key, the warning sound level will change as - - Off, S:01 Low, S:02 Medium, and S:03 High. Turn off your machine using the On / Off key to save it. Factory setting of your machine is S:03.

Time Delay

Using the Time Delay key, you may delay the starting time of your programme up to 9.5 hours with increments of 30 minutes. Press Start / Pause / Cancel key after setting the Time Delay and close the door of your machine. Once the time delay is over, the selected programme will start automatically.

Start / Pause / Cancel Key

When you press the Start / Pause / Cancel key, the washing programme you have selected will start. (Start / Pause / Cancel indicator lights in Start mode, and turns off in Pause mode)



To press the Start / Pause / Cancel key, wait for two seconds after you turn on the machine by pressing the On / Off key.

Canceling a programme

To cancel the program selection while the machine is operating open the door.

! Care must be taken when opening the door, as steam will escape. Press and hold Start / Pause / Cancel key for 3 seconds. Release the key as the Start / Pause / Cancel indicator starts flashing. Once you close the door of your machine, draining is completed in 2 minutes and the machine gives an audible warning when it is completed.



There might be residues of detergent or rinse aid left in the machine and / or on the pieces being washed depending on the step the programme you have cancelled was in.

Changing a Programme

To change the program selection while the machine is operating open the door.

! Care must be taken when opening the door, as steam will escape. To change your selection after the programme has started:

1. Press Start / Pause / Cancel key to switch your machine in pause mode.
2. Select the desired programme by pressing the Programme Selection key.
3. Start the new programme by pressing Start / Pause / Cancel key again.



The new programme will start from the step where the previous one has stopped. For example, if the previous programme has remained in drying step, new one will start from the drying step as well.



If you want to run the new programme from the very beginning, first you must cancel the current programme and then select a new programme.