 


! Attention: Please read the operating manual prior to operating the machine for the first time.

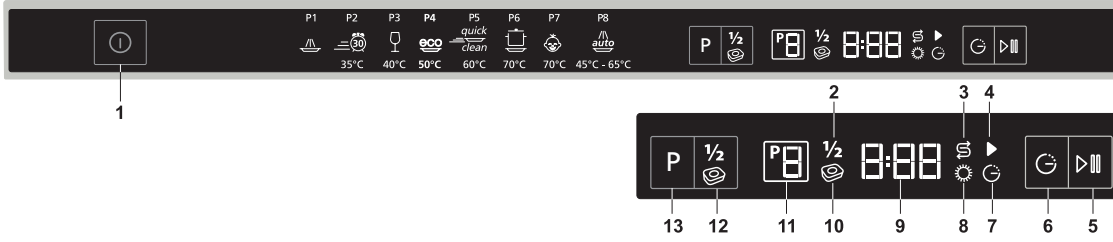

- 1 On/Off button
- 2 Half Load indicator
- 3 Salt indicator
- 4 Start/Cancel indicator
- 5 Start/Cancel button
- 6 Time Delay button
- 7 Time Delay indicator
- 8 Rinse aid level indicator light
- 9 Remaining Time Indicator/ Delay Time Indicator
- 10 Combi Tablet indicator
- 11 Programme indicator
- 12 Half Load/Combi Tablet button
- 13 Programme selection button

How to use your dishwasher:

- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Pour (Put in) the detergent.
- Push in the on/off button and check that the display lights comes on. Check the salt and rinse aid level indicators before you start the machine. If necessary add salt and rinse aid.
- Use the programme selection button to choose your washing programme.
- You may use Half Load/Combi Tablet button - Delayed Start Button features as necessary.
- Start the programme with the Start / Cancel button:
- Close the door then programme starts.

Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- When the program you have selected comes to an end, an audible warning signal with intervals of 8 seconds will warn you to turn off your machine. This audible signal will warn you 10 times before it turns off. Open the door Press the on/off button after the programme is completed. The indicator lights will go off.
- Close the water tap. Pull out the plug.
- Leave your dishes in the machine for about 15 minutes after they are washed in order to have them cooled down. Your dishes will dry in a shorter time if you leave the door of your machine ajar during this period. This will increase the drying effectiveness of your machine.


Programme Table

Programme number	1	2	3	4 Reference*	5	6	7	8
Programme name	Pre-wash	Mini 30'	Delicate	Economy	Quick & Clean	Intensive	Baby Protect	Auto
Cleaning temperature	-	35°C	40°C	50°C	60°C	70°C	70°C	45°C - 65°C
Degree of Soiling	Suitable for removing the remnants on the soiled dishes that will be kept waiting in the machine for a few days, and thus, for preventing the bad odor buildup.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.	Suitable for dishes that are not pre-cleaned but washed immediately.	Most economical washing program for the medium soiled daily dishes that are kept waiting.	Daily washing program at which the medium soiled dishes that are kept waiting are cleaned in the fastest way.	Suitable for heavily soiled dishes, pots and pans.	Suitable for the dishes which require extra hygiene such as articles for babies. Also suitable for heavily soiled dishes.	Determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. Suitable for all types of dishes.
Detergents A=25 cm ³ /15 cm ³ B=5 cm ³	-	A	A	A+B	A+B	A+B	A+B	A
Programme sequence (without options)	Pre-wash ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Wash ▼ Cold rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Hot Rinse ▼ Dry ▼ End	Pre-wash ▼ Wash ▼ Cold rinse ▼ Hot Rinse ▼ Hot Rinse ▼ Dry ▼ End	The programme sequence is adjusted to the amount of soiling
Duration (min)	15	30	83	194	58	143	127	72-162
Water (l)	4	10	12,6	9	9,6	15,2	16	9,8-13,2
Energy (kWh)	-	0,7	0,75	0,76	1,12	1,2	1,67	0,80-1,26
Left-on mode / Off mode (W) ****	1.77 / 0.09							

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

* Reference programme for testing institutes The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.

 
**** Power consumption in off-mode and left-on mode are measured according to EN 62301.

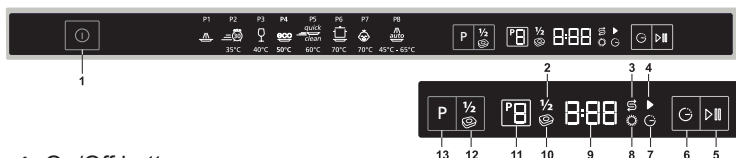

- 1 On/Off button
- 2 Half Load indicator
- 3 Salt indicator
- 4 Start/Cancel indicator
- 5 Start/Cancel button
- 6 Time Delay button
- 7 Time Delay indicator
- 8 Rinse aid level indicator light
- 9 Remaining Time Indicator/ Delay Time Indicator
- 10 Combi Tablet indicator
- 11 Programme indicator
- 12 Half Load/Combi Tablet button
- 13 Programme selection button

On/off button

 You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used programme will light up.

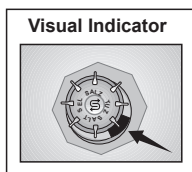


Visual Indicator

Salt level indicator light

When this indicator light comes on, you must refill special salt (If applicable).

In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container.

 When the colour is light, open the container and add dishwasher salt.

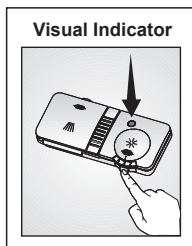

Visual Indicator

Rinse aid level indicator light

If this indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

Program selection buttons

Use the program selection button to select the desired program. The corresponding program light lights up.

Half Load / Tablet Detergent Button

Half Load/Tablet Detergent Button allows you to turn on and off the Half Load and Tablet Detergent functions of your machine.

Half Load Function

If you want to run your machine without loading it completely, place your dishes into the machine as you desire. Press the On/Off button to turn on your machine. Press the Half Load/Tablet Detergent button after selecting the desired program until Half Load Indicator lights up, then press Start/Cancel button and close the door of your machine. With the Half Load option you can use every part of your lower and upper baskets and you can save from both water and power.

Tablet Detergent Function

Depending on the hardness level of the tap water, the Tablet Detergent function allows obtaining a better drying performance from the multi-purpose detergents such as 2in1, 3in1, 4in1, 5in1, etc., called as all-in-one detergents. The programs in which the tablet detergent function can be enabled is indicated in the Program Data and Table of Average Consumption Values. Tablet Detergent Indicator lights when the Tablet Detergent function is selected. Salt and Rinse Agent indicators turn off when this function is activated.

Turn on your machine by pressing the On/Off button to use the Tablet Detergent function. Press the Half Load/Tablet Detergent button after selecting the desired program until Tablet Detergent Indicator lights up, then press Start/Cancel button and close the door of your machine.

To use the Half Load and Tablet Detergent functions concurrently, turn on your machine by pressing the On/Off button and then press the Half Load/Tablet Detergent button until Half Load and Tablet Detergent Indicators illuminate together.

! Important:

If you have used the Half Load or Tablet Detergent features during the last program you used, Half Load or the Tablet Detergent function will remain active in the next washing program you will select. If you do not want to use these functions in the new program you have selected, press the Half Load/Tablet Detergent button until the indicator of the relevant function turns off.

Changing Warning Sound Volume

To change the program selection while the machine is operating open the door.

! Care must be taken when opening the door, as steam will escape. Every time you press the Half Load/Tablet Detergent button, the warning sound level will change as -- Off, S:01 Low, S:02 Medium, and S:03 High. Turn off your machine using the On/Off button to save it. Factory setting of your machine is S:03.

Display

Water hardness level, Time Delay for the selected programme and warning message are displayed.

Time Delay

Using the Delayed Start button, you may delay the starting time of your program up to 9.5 hours with increments of 30 minutes. After delaying the start, press Start/Cancel button and close the door of your machine. Once the delay time is over, the selected program will start automatically.

Canceling the delay function

Keep the Start/Cancel button pressed for 3 seconds. The selected delay period will be cancelled. As soon as the canceling starts, the water that may be remained in your machine will be drained for 30 seconds due to safety reasons.

Start/cancel button

When you press the Start/Cancel button, the washing program you have selected will start. (Start/Cancel indicator lights in Start mode, and turns off in Pause mode)

How to cancel the washing program

To cancel the program selection while the machine is operating open the door. ! Care must be taken when opening the door, as steam will escape. Press and hold the Start/Cancel button for 3 seconds. Release the button when the Start/Cancel indicator starts flashing. Once you close the door of your machine, draining is completed in 45 seconds - 2 minutes and the machine gives an audible warning when it is completed.

! Important:

Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

How to change the washing program

To change the program selection while the machine is operating open the door. ! Care must be taken when opening the door, as steam will escape. Press Start/Pause/Cancel button first to switch your machine into pause mode if you want to change your selection after you have started the program. Then, switch to the desired program by pressing Program Selection button. Start the new program by pressing Start/Cancel button again.

! Important:

The new program will NOT start right from the beginning. It will start from the stage last carried out by the previous program selection.

! Warning

Depending on the length of the terminated program detergent and rinse aid may still be in the dispensers.

Improper Loading Of Dishware

