

beko



Juicer
User Manual

BKK 2144
BKK 2144 Y



Please read this user manual first!


 

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

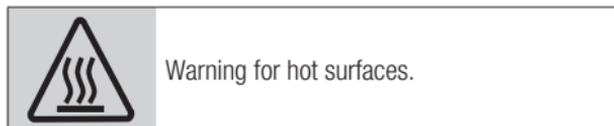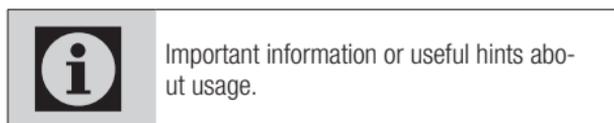

This product has been produced in environmentally friendly, modern facilities

Complies with the WEEE Regulation.



Does not contain PCB.

Made in: P.R.C

CONTENTS

1 Important instructions for safety and environment 4-10

- 1.1 General safety 4
- 1.2 Compliance with WEEE regulation
and disposal of the waste product 10
- 1.3 Package information 10

2 Your juicer 11-12

- 2.1 Overview 11
- 2.2 Technical data. 12

3 Using 13

- 3.1 Initial use 13
- 3.2 Preparation of the fruits. 13

4 Installation 14-15

- 4.1 Installation 14
- 4.2 Taking you juicer apart 15
- 4.3 Hints 15

5 Cleaning and care 16

- 5.1 Cleaning. 16
- 5.2 Filter 16
- 5.3 Other parts. 16

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- Never touch any rotating part of the appliance. Do not attach or detach any components of appliance until it stops completely.
- Never attempt to dismantle the appliance. No warranty claim shall be accepted for damages resulting from erroneous usage.
- Always use your appliance on a balanced, flat, clean and dry surface.
- Check the filter every time you use the appliance. Do not use the appliance whenever you see a crack or damage and take it to the authorised service center.
- Never put your fingers or any other substance into the food channel. Only the pusher should be used for this purpose.

1**Important instructions for safety and environment**

- Only unlock the locking latch after you have switched the appliance off by On/Off switch and the filter has come to a full stop.
- Remove seeds of fruits with big seeds such as peach, apricot, plum and cherry, and peel off the fruits with thick rind or inedible rind.
- To extract more juice, don't push the pusher hastily.
- Check whether voltage specified on the rating plate of the appliance matches the local mains voltage. Only way to disconnect the power of the appliance is to unplug it.
- This appliance should be connected to a maximum 30 mA domestic residual current protection fuse for additional protection. Please contact an electric technician for recommendations.
- Do not immerse the appliance, its power cable or its plug in water or in any other liquid.

1

Important instructions for safety and environment

- Always unplug the power cord of the appliance after using the appliance, assembling/disassembling its parts or cleaning it, leaving the room where the appliance is located or when a failure happens. Do not unplug the appliance by pulling from its power cord.
- Do not squeeze or bend the power cord of the appliance or do not rub it against the corners in order not to damage it. Keep away the power cord from hot surfaces and open flame.
- Do not use an extension with the appliance.
- Never use the appliance if it or its power cord is faulty.
- Beko Small Home Appliances meet applicable safety standards; thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, service centre or a similarly qualified authorised service personnel to avoid any dangers.

1

Important instructions for safety and environment

- Never operate any component of this appliance on or near a gas range, hot plate or hot surfaces such as a heated oven or do not place them on these surfaces.
- Make sure that there is not any danger that the power cable of device is pulled by mistake or anyone trips on it during its use.
- Appliance should always be installed with its power cord in an easily accessible manner.
- Do not operate the appliance for more than 2 minutes at a time when heavy loads and let it cool down sufficiently afterwards by turning the switch knob to "0".
- Do not operate the appliance continuously for more than 10 seconds.
- Clean all components of the appliance carefully which contact the food before first use. For details, refer to "Cleaning and Maintenance" section.
- Operate the appliance empty for 10 seconds and then start to extract the juice.

1

Important instructions for safety and environment

- Use the appliance only with its accessories supplied with it.
- Appliance will switch off automatically for protection purposes when it is excessively strained. Switch off the appliance by moving the on/off switch to "0" position and remove the food that causes the strain. You can use the appliance for juice extraction again after waiting for 10 seconds.
- Always use your appliance on a balanced, flat, clean and dry surface.
- Do not remove the dregs container when the appliance is in operation.
- Do not touch the small cutting blades on the base of the filter.
- Prepare the fruit at the size of the food channel to place them into it, and perform juicing.
- The appliance is constructed to process only common household quantities. Please see details in the "Maximum quantities and processing time" section.

1

Important instructions for safety and environment

- Always keep the appliance out of the reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not leave the appliance unattended when it is in use. It is highly recommended to be very careful when the appliance is being used nearby children and people with limited physical, sensory or mental capacities.

1

Important instructions for safety and environment

1.2 Compliance with WEEE regulation and disposal of the waste product



This product does not contain harmful and forbidden materials described in the “Directive on the Restriction of the Use of Certain Hazardous Substances in Waste Electrical and Electronic Equipment” (WEEE) issued by the T.R. Ministry of Environment and Urbanization. Complies with the WEEE Directive.

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the loading door so that it will be non-functional before disposing of the product.

1.3 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Your juicer

2.1 Overview



All declared values on the product and on the printed leaflets are picked up after laboratory measurements performed according to related standards. These values may differ upon usage and ambient conditions.

2 Your juicer

1. Juice outlet
2. Locking latch
3. Filter container
4. Pusher
5. Food supply channel
6. Transparent filter cover
7. Dregs container
8. Operating button
9. Filter cleaning brush
10. Juice container
11. Power cable
12. Filter



This product conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Technical and design modifications reserved.

2.2 Technical data

Voltage: AC 220-240V, 50/60Hz

Power: 800 W

Isolation class: II

3.1 Initial use

1. Unpack all parts and check if they have any visual damage or not. Contact the authorized service if there is any damage.
2. Before the initial operation, wash those parts of the appliance that will come into contact with fruits in luke-warm detergent water and dry them.

3.2 Preparation of the fruits

1. Remove the seeds (plum, peach, cherry etc.).
2. Remove the rinds (melon, pineapple etc.) Just wash the soft peels and other food (apple, pear, carrot, turnip etc).
3. Remove the rinds of fruits such as oranges or grapefruits, otherwise the juice may taste bitter.
4. Please cut off the hard root parts of carrots, turnips etc. when you are juicing.
5. If the fruits such as apples and etc. does not fit into the supply channel please slice them into pieces.

4 Installation

4.1 Installation

1. Place the dregs container to its seat on the body. Install filter container onto the body so that it will cover the dregs container.
2. Place the filter onto the holder and push downwards to install it in correct position.
3. Place the transparent filter cover. Engage the latches onto the cover and push them against the body to lock the cover.
Locking latch is open
Locking latch is closed.



WARNING: 10 seconds after operating the product at the proper speed (1 or 2) stated in its user manual, put the foods into the feeding channel and start juice extracting. Otherwise, failures may arise in the product that are not covered by the warranty.



WARNING: Your juicer will not work if the lid is unlocked.



WARNING: Never insert your fingers into the food supply channel.



WARNING: Do not operate the juicer without the dregs container fitted.

4. Place the juice container to the juice outlet. And remove the cover.
5. Plug the appliance in and run it in the suitable speed level. Select low speed level for fruits such as peach and apricot. If the fruit is hard such as apple or carrot, select high speed level.
6. When using the pusher, align its groove with the notch inside the food supply channel. Push the food down with pusher.

4 Installation

7. Do not apply too much pressure onto the pusher if the fruits or vegetables are too big or the food supply channel is full. This will affect the juicing performance and even stop the juicer when it is forced too much. Please break the large foods into small pieces that can fit into the supply channel. Place the sliced foods into the supply channel and push lightly with the pusher.
8. The foam separator in the juice container ensures that the juice is free from foam.
9. When juicing hard foods we recommend a maximum quantity of 1.5 kg in one batch with a maximum operation time of 2 minutes. Some hard foods may slow down or stop your juicer. In such a case, switch off the appliance, remove the filter and clean it.
10. If the filter is clogged during usage, switch off the appliance, empty the dregs container and clean the filter.
11. Turn off the appliance by moving the On/Off switch to "0" position after you are finished with juicing process and make sure that the filter comes to a full stop.

4.2 Taking your juicer apart

Reverse the assembly procedure to take the juicer apart.

4.3 Hints

1. Insert soft food slowly to get the most juice.
2. Vitamins disappear – the sooner you drink your juice, the more vitamins you'll get.
3. If you need to store the juice for a few hours put it in the fridge. It will keep better if you add a few drops of lemon juice.
4. Don't drink more than three glasses (230 ml) of juice a day unless you're used to it.
5. Dilute juice for children with an equal amount of water.
6. Juice from dark green (broccoli, spinach etc) or dark red (beetroot, red cabbage etc.) vegetables is extremely strong, so people with diabetes or low blood sugar should avoid drinking too much.

5 Cleaning and care

5.1 Cleaning



WARNING: Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Do not touch the chopping blades with bare hands. The blades are very sharp. Use a brush!

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.



It is easier to clean the appliance right after using it.

3. Switch off your juicer, unplug it and wait until the filter stops before cleaning the appliance.
4. Remove the dirty parts from the body unit in the following order. Open the locking latch and remove the transparent filter cover together with the pusher.
 - Remove the dregs container.
 - Remove the filter together with the filter cover.
5. Some foods such as carrot will discolor the plastic. Wipe the discolored plastic with a cloth dampened in olive oil.

6. Wipe the body unit with a damp cloth and then dry it. Never immerse into water and do not use abrasive detergents. They may damage the body.

5.2 Filter

1. There are sharp blades under the filter. The brush supplied with the product can facilitate filter cleaning. Dry the filter completely after cleaning it.
2. Check the filter regularly for signs of damage. Do not use if the filter is damaged.



We recommend you to perform the filter cleaning with the cleaning brush immediately after juicing process in order to facilitate cleaning.

5.3 Other parts

1. Wash with hot soapy water and then allow them dry completely. Do not wash the parts in dishwasher.
2. Juice outlet is an integral part of the filter container and cannot be removed. Please pay attention to this while cleaning the filter container.

