


Dryer

User Manual

Tørretumbler Brugermanualen

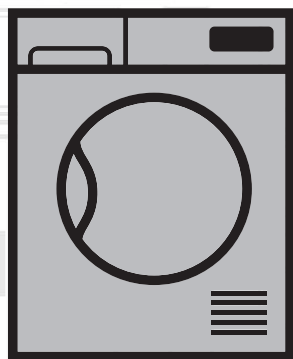

DB 7101 PA

EN | DA

2960311219_EN/200117.1415

beko

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Use this user manual for the model indicated on the cover page.

	Read the instructions.
--	------------------------

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning against electric shock.
	Warning against hot surfaces.
	Warning against fire hazard.
	Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.



This product was manufactured using the latest technology in environmentally friendly conditions.

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

1.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.



The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.



Damaged mains cable should be changed notifying the Authorized Service.



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

1.1.2 Product safety



Superheating of the clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running, this concentration of heat can cause self-combustion and fire so always activate the ventilation programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.



Points to be taken into consideration for fire hazard:

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.



Below specified laundry or items must not be dried in the dryer due to the fire hazard:

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.
 - Clothing cleaned with industrial chemicals.
- Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer.
- Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.



Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.



Use softeners and similar products in accordance with the instructions of their manufacturers.



Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.
- The lint must not be allowed to accumulate around the tumble dryer

1.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Installation Table for Washing Machine and Dryer							
Dryer Depth	Washing Machine Depth						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Can be installed					Can be installed	Cannot be installed
60 cm	Can be installed					Cannot be installed	

1.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

1.4 Child safety

 
- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.



Child-proof lock is on the control panel.
(See Child lock)

- Keep loading door closed even when the dryer is not in use.

1.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

■ This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.8 Technical Specifications

EN	
Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,5 cm
Depth	53 cm
Capacity (max.)	7 kg**
Weight (net)	32,5 kg
Voltage	Check the rating label***
Rated power input	
Model code	

* Min. height: Height with adjustable feet are closed.

Max. height: Height with adjustable feet are opened maximum.


** Dry laundry weight before washing.

*** Type label is located behind the loading door.

	Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.
	Figures in this manual are schematic and may not match the product exactly.
	Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.

2 Your Dryer

2.1 Package Contents

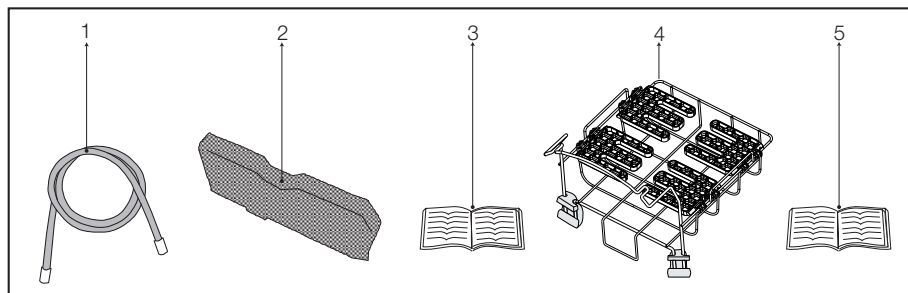

1. Water drain hose *
2. Filter drawer spare sponge*
3. User Manual
4. Drying basket*
5. Drying basket user manual*

*It can be supplied with your machine depending on its model.

3 Installation

Refer to the nearest Authorised Service Agent for installation of your product.

	Preparation of location and electrical installation for the product is under customer's responsibility.
	Installation and electrical connections must be carried out by a qualified personnel.
	Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products will cause risks for your safety.

3.1 Appropriate installation location

- Install the product in an environment which has no risk of freezing and is in a stable and level position.
- Operate your product in a well ventilated, dust-free environment.
- Do not block the air ducts in front of and under the product with materials such as long pile rugs and wooden bands.
- Do not place your product on a long pile rug or on similar surfaces.
- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
- Once the product is installed, it should stay at the same place where its connections have been made. When installing the product, make sure that the rear wall of it does not touch anywhere (tap, socket, etc.) and also pay attention to install the product at a place where it will stay permanently.


	Do not place the product on top of the power cable.
--	---

- Keep at least 1.5 cm distance to walls of other furniture.

3.2 Removing the transportation safety assembly

	Remove the transportation safety assembly before using the product for the first time.
---	--

1. Open the loading door.
2. There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with XX.
3. Pull the nylon towards yourself and remove the transportation safety assembly.

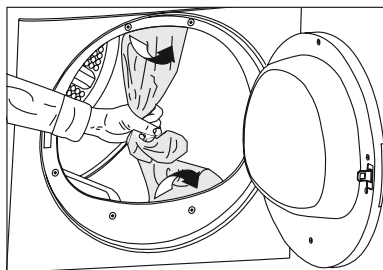


	Make sure that you have removed the transportation safety assembly (nylon+styrofoam pieces) before using the product for the first time. Do not leave any items inside the drum.
---	--

3.3 Under counter installation

- A special part (Part no. 297 360 0100) replacing the top trim must be provided and installed by the Authorised Service Agent in order to use the machine under a counter or in a cupboard. It should never be operated without the top trim.
- Leave at least 3 cm of space between the side and rear walls of the product and the walls of the counter/cupboard when installing your product under a counter or in a cupboard.

3.4 Adjusting the feet

In order to ensure that your machine operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet. Rotate the feet to adjust until the machine stands level and firmly.

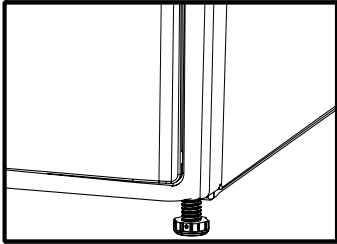

i Never unscrew the adjustable feet from their housings.

3.5 Electrical connection

For specific instructions for electrical connection required during installation (see **1.1.1 Electrical Safety**)

3.6 Transportation of the machine

1. Unplug the machine from the mains.
2. Remove the water drain (if any) and chimney connections.
3. Drain water remained in the machine completely before transportation.

3.7 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service. The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way. The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C.

4 Preparation

4.1 Laundry suitable for drying in the dryer

Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS																					
	Drying Symbols		Suitable for dryer		No Iron		Sensitive / Delicate dry		Do not dry with dryer		Do not dry		Do not dry-clean								
	Drying Settings		At any temperature		At high temperature		At medium temperature		At low temperature		Without heating		Hang to dry		Lay to dry		Hang wet to dry		Lay in shadow to dry		Dry-cleanable
 IRON	Iron -					Iron at high temperature		Iron at medium temperature		Iron at low temperature		Do not iron		Iron without steam							
	Dry or Steam																				
	Maximum temperature				200 °C		150 °C		110 °C												

4.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woolen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

4.3 Preparing laundry for drying

- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.
- Fasten the zippers, hooks and buckles and button sheets.

4.4 Things to be done for energy saving


Following information will help you use the dryer in an ecological and energy-efficient manner.

- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and table clothes dries earlier than thick bathroom towels.
- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add wet laundry while the dryer is in operation

- Clean the lint filter before or after each drying cycle.
- Clean the condenser regularly at least once every month or after every 30 drying cycles.
- Ventilate the room, where the dryer is located, well during drying.

4.5 Correct load capacity

Follow the instructions in the "Programme selection and consumption table". Do not load more than the capacity values stated in the table.

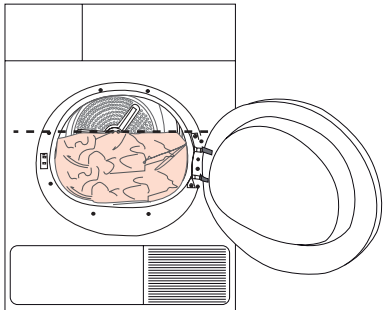

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples:

Laundry	Approximate weights (g)*
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

*Dry laundry weight before washing.

5 Operating the product

5.1 Control panel

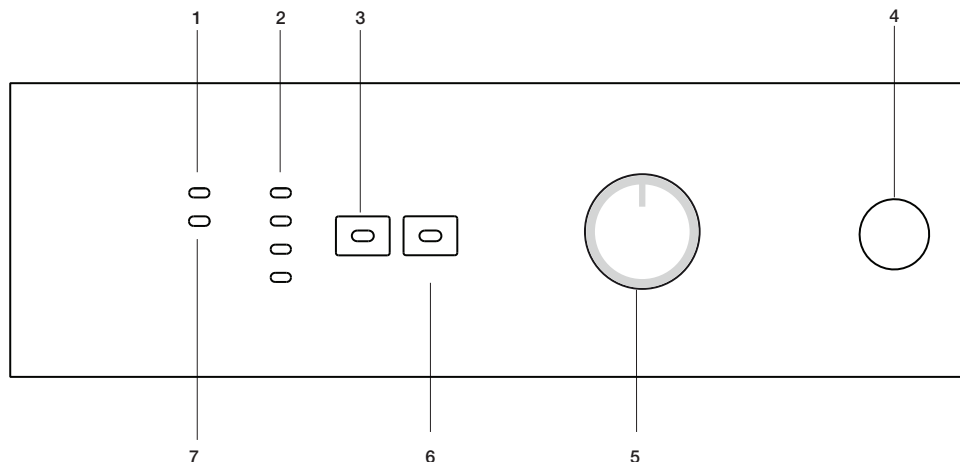

1. Filter cleaning warning light

Warning light turns on when the filter is full.

2. Programme follow-up indicator

Used to follow-up the progress of the current programme.

3. Low temperature

Used to dry in low temperatures.

4. On/Off button

Used to turn on and off the machine.

5. Programme selection knob


Used to select a programme.

6. Start/Pause/Cancel button

Used to start, pause or cancel the programme.

7. Water tank warning light

Warning light turns on when the water tank is full.

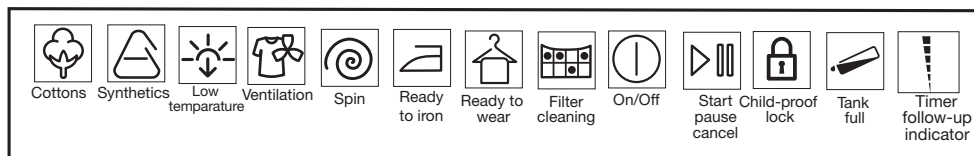

5.2 Preparing the machine

1. Plug in your machine.
2. Place the laundry in the machine.
3. Press the “On/Off” button.



Pressing the “On/Off” button does not necessarily mean that the programme has started. Press “Start/Pause/Cancel” button of the machine to start the programme.

5.3 Timer programme selection

Decide the appropriate time from the table below which includes drying temperature in degrees. Select the desired time with the timer programme selection button.

Extra dry	Dry at high temperature only for cotton laundry. Thick and multi layered laundry (E.g.: towels, linens, jeans) are dried in a way that they do not require ironing before placing in the wardrobe.
Cupboard dry	Normal laundry (E.g.: tablecloths, underwear) are dried in a way that they do not require ironing before placing in the drawers.
Iron Dry	Normal laundry (E.g., Shirts, dresses) are dried ready to be ironed.



For further programme details, see, “Programme Selection Table”

5.4 Main programmes

Anti-creasing

A 2-hour anti creasing programme to prevent laundry from creasing will be activated if you do not take the laundry out after the programme is over. This programme rotates the laundry in 600-second intervals to prevent creasing.

•Ventilation

Only ventilation is performed for 10 minutes without blowing hot air. You can air your clothes that have been kept at closed environments for a long time thanks to this programme to deodorize unpleasant odors.

•Timer programmes

You can select one of the 25 min, 50 min, 70 min, 85 min, 100 min, 121 min, 140 min timer programmes to achieve the final drying level. Dry the cotton laundry at high temperatures and synthetic and easy-care laundry at low temperatures depending on the type of the laundry.



You must press the “Low temperature” button for synthetics

5.5 Programme selection and consumption table

EN					
Programme table					
Programmes		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloreds					
	Cupboard dry	7	1000	% 60	121
			800	% 70	140
		3,5	1000	% 60	70
			800	% 70	85
	Iron dry	7	1000	% 60	100
			800	% 70	121
		3,5	1000	% 60	50
			800	% 70	50-70
Synthetics					
	Cupboard dry	3,5	800	% 40	50
			600	% 50	70
Energy consumption values					
Programs		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cottons cupboard dry*		7 / 3,5	1000	% 60	4,22 / 2,29
Cottons iron dry		7	1000	% 60	3,40
Synthetics cupboard dry		3,5	800	% 40	1,60
Power consumption of the off-mode for the standart cotton programme at full load, PO (W)					0,3
Power consumption of the left-on mode for the standart cotton programme at full load, PL (W)					1,0

	„Cotton cupboard dry programme“ used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.
--	---

* : Energy Label standard programme (EN 61121:2012) All the filters must be cleaned prior to test series.

All values given in the table have been fixed according to EN 61121:2012 Standard. These values may deviate from the table according to the laundry type, laundry spin speed, environmental conditions and voltage fluctuations.

5.6 Auxiliary function

Low temperature

This function allows for drying at lower temperatures and therefore saves energy. Warning LED will light up when you select the function.



You must use this function when you dry your synthetic or delicate laundry.

5.7 Warning indicators



Warning indicators may differ according to the model of your dryer.

Filter cleaning

A warning light will turn on to remind filter cleaning after the programme finishes.



If the filter cleaning warning light lights up continuously, please refer to, "Suggested solutions for problems".

Water tank



Warning LED will light up at the end of the programme or when the tank is full with water. The machine stops operating when this warning LED lights up during a programme running. To restart the machine, please drain the water in the water tank. Press "Start/Pause/Cancel" button to start the programme after you have emptied the water tank. The warning LED goes off and the programme resumes operating.

5.8 Starting the programme

1. Press "Start/Pause/Cancel" button to start the programme.
2. Light of the "Start/Pause/Cancel" button will turn on to indicate that the programme has started.

Timer follow-up indicator

One of the LEDs is on as far as programme runs and shows the approximate remaining time.

5.9 Changing the programme after the programme has started

You can use this feature to dry your laundry in a different programme after your machine has started to run.

For example;

Press and hold the "Start/Pause/Cancel" button for about 3 seconds to select "90" minutes programme instead of "60" minutes program.

Select the "90" minutes programme by rotating the program knob.

Press "Start/Pause/Cancel" button to start the programme.



The program which is selected first will go on even if the programme selection button is moved and another programme mode is selected while the machine is operating. You must cancel the ongoing programme in order to change the drying programme. (See, Ending the programme through canceling)

Adding/removing laundry in standby mode

In order to add or take out laundry after the start-up of the programme;

1. Press the "Start/Pause/Cancel" button to switch the machine to "Pause" mode. Drying process will stop.
2. Open the door at Pause position and close it again after adding or taking out laundry.
3. Press "Start/Pause/Cancel" button to start the programme.




Any laundry added after the drying process was started may cause the already dried clothes in the machine intermingle with wet clothes and the result will be wet laundry after the drying process is over.

5.10 Child-proof lock

There is a childproof lock to prevent any programme interruption due to the pressing of keys while the programme is on. The loading door and all keys except the "On/Off" key on the panel are deactivated when the child-proof lock is active.

In order to activate the childproof lock, press on the "Start/Pause/Cancel" and "Low temperature" buttons simultaneously for 3 seconds.

To start a new programme after the programme is over or to interrupt the programme, the childproof lock should be deactivated. To deactivate the childproof lock, press the same buttons for 3 sec.

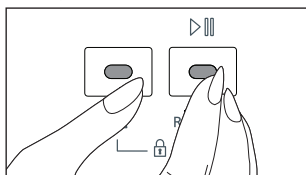

One of the LEDs on the programme follow-up indicator starts flashing when the child-proof lock is activated.



Child-proof lock is deactivated when the machine is restarted by pressing the On/Off button.

5.11 Ending the programme through canceling

The programme which is selected first will keep on going even if the position of the programme selection button is changed. A new programme can be selected and started after "Programme cancel" is activated in order to change the drying programme.

To can cel any selected programme;

- Press "Start/Pause/Cancel" button for about a duration of 3 seconds. The "Filter cleaning" and "Water tank" warning LEDs as well as the "0" warning LED on the programme follow-up indicator will light up at the end of this period for reminding purposes.



As the inside of the machine will be excessively hot when you cancel the programme while the machine is running, activate the ventilation programme to cool it down.

The machine will not start even if the "Start/Pause/Cancel" button is pressed, unless the programme selection knob is returned to the initial programme. The paused programme must be cancelled in order to change the drying programme.

5.12 End of programme

The "Filter cleaning" and "Water tank" warning LEDs as well as the "0" warning LED on the programme follow-up indicator will light up at the end of the programme. The door can be opened and the machine becomes ready for a second cycle. Press the "On/Off" button to shut down the machine.



A 2-hour anti creasing programme to prevent laundry from creasing will be activated if you do not take the laundry out after the programme has come to an end.



Clean the filter after each drying (please see, Filter cleaning).




Drain the water tank after each drying (please see, Water tank)

6 Maintenance and cleaning

6.1 Filter Cartridge / Door Inner Surface

Lint and fibres released from the laundry to the air during the drying cycle are collected in the "Filter Cartridge".

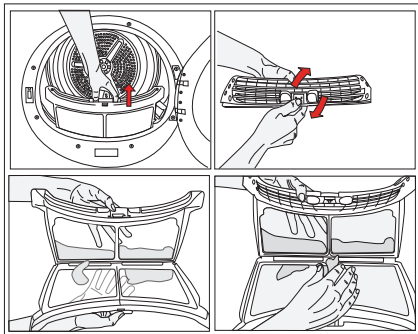

Such fibre and lint are generally formed during wearing and washing.



Always clean the filter and the inner surfaces of the cover after each drying process.



You can clean the filter and filter area by vacuum cleaner.

To clean the filter:

1. Open the loading door.
2. Remove the cover filter by pulling it up and open the filter.
3. Clean lint, fibre, and cotton raveling by hand or with a soft piece of cloth.
4. Close the filter and place it back into its seat.



Clogging may arise on the filter surface after using your machine for some time; if this occurs, wash the filter with water and dry it before using again.



Clean the entire inner surface of the cover and door gasket.

6.2 Water tank;

The moisture in the damp laundry is taken from the laundry and condensed. Drain the water tank after each drying cycle or during drying when "Water tank" warning light turns on.



Condensed water is not drinkable!




Never take out the water tank when the programme is running!


If you forget to drain the water tank, your dryer will stop during the following drying cycles when the water tank is full and the "Water tank" warning light will turn on. If this is the case, press the "Start/Pause/Cancel" button to resume the drying cycle after draining the water tank.

*To drain the water tank:

1-Carefully remove the water tank by opening the kick plate cover/pulling the drawer.

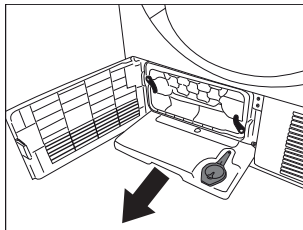

2-Drain the water in the tank

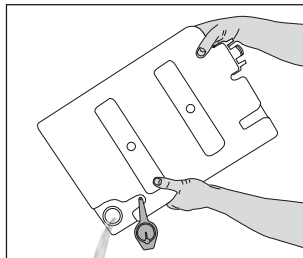

3-If there is lint accumulation in the funnel of the water tank, clean it under running water.

4-Place the water tank into its seat.

6.3 For the condenser;


Hot and humid air in the condenser is cooled with the cold air from the room. Thus, the humid air circulating in your dryer is condensed and then pumped into the tank.




Clean the condenser after every 30 drying cycles or once a month.

To clean the condenser:


1. If a drying process has been carried out, open the door of the machine and wait until it cools down.

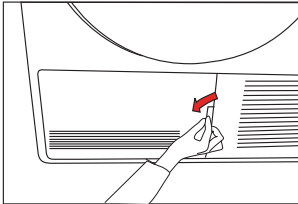


2. Unlock the 2 condenser locks after opening the kick plate.

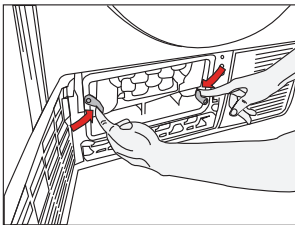


3. Pull out the condenser.

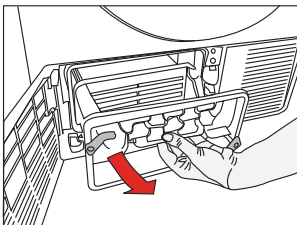


4. Clean the condenser by applying pressurized water with a shower armature and wait until the water drains.

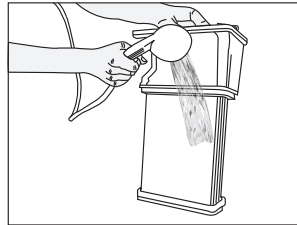

5. Place the condenser in its housing. Fasten the 2 locks and make sure that they are seated securely.

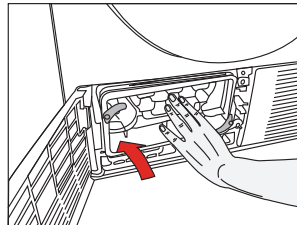

6. Close the kick plate cover.

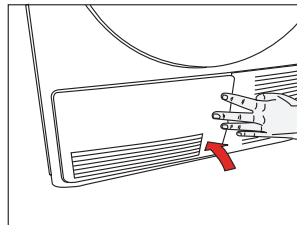

7 Suggested solutions for problems

Drying process takes too much time
• Meshes of the filter may be clogged. Wash with water
Laundry comes out wet at the end of drying.
• Meshes of the filter may be clogged. Wash with water. • Excessive laundry might have been loaded in. Do not load the dryer in excess.
Dryer does not switch on or the programme does not start. Dryer is not activated when set.
• It might have not been plugged in. Make sure that the machine is plugged in. • The loading door may be ajar. Make sure that the loading door is properly closed. • Programme might have not been set or the «Start/Pause/Cancel» button might have not been pressed. Make sure that the programme has been set and it is not in "Pause" mode. • «Childproof lock» might have been activated. Deactivate the childproof lock.
Programme has been interrupted without any cause.
• The loading door may be ajar. Make sure that the loading door is properly closed. • Electricity may be cut off. Press «Start/Pause/Cancel» button to start the programme. • Water may be full. Drain the water in the tank.
Laundry has shrunk, become felted or deteriorated.
• A programme suitable for the laundry type might have not been used. Dry only the laundry which is suitable for drying in dryer after checking the labels on your clothes. • Select a programme with suitable low temperature for the laundry type to dry your clothes.
Drum lightning does not come on. (For models with lamp)
• Dryer might have not been started by using the «On/Off» button. Make sure that the dryer is on. • Bulb may have blown. Call the authorized service to replace the bulb.
"O" LED flashes.
• The 2-hour anti creasing programme to prevent laundry from creasing might have been activated. Turn off the dryer and take out the laundry.
"O" LED is on.
• Programme has come to an end. Turn off the dryer and take out the laundry.
"Filter cleaning" LED is on.
• Filter might have not been cleaned. Clean the cover filter.
"Water comes out the cover"
• Clean the entire inner surface of the cover and door gasket.
"Cover opens spontaneously."
• Push it until you hear that it is closed.
For products with a condenser:
"Water tank" warning LED is on.
• Water may be full. Drain the water in the tank.
"Condenser cleaning" LED is on.
• Condenser might have not been cleaned. Clean the filters in the condenser under the kick plate.



Call an authorized service if the problem persists.

Læs venligst denne brugsanvisning først!

Kære kunde

Tak fordi du foretrækker et Beko produkt. Vi håber, at dit produkt, som er fremstillet med høj kvalitet og teknologi vil give dig de bedste resultater. Vi råder dig til at læse denne vejledning, og den anden ledsagende dokumentation omhyggeligt, før du bruger dit produkt og beholde den som fremtidig reference. Hvis du overdrager produktet til en anden, så giv manualen med. Vær opmærksom på alle detaljer og advarsler angivet i brugermanualen og følg instruktionerne heri.

Brug denne brugsanvisning for modellen, som er angivet på forsiden.



Läs instruktionerna.

Forklaring af symbolerne

I hele denne brugsanvisning følgende symboler anvendt:



Vigtig information eller nyttige tips om brug.



Advarsel til farlige situationer med hensyn til liv og ejendom.



Advarsel mod elektrisk stød.



Advarsel mod varme overflader.



Advarsel mod brandfare.



Produktets emballagematerialer er fremstillet af genbrugsmaterialer i overensstemmelse med vores nationale miljøbestemmelser.

Smid ikke emballagen ud som affald med husholdningsaffaldet eller andet affald, kassere dem på de særlige indsamlingssteder udpeget af de lokale myndigheder.



Dette produkt blev fremstillet med den nyeste teknologi i miljøvenlige omgivelser.

1 Vigtige anvisninger for sikkerhed og miljø

Dette afsnit indeholder sikkerhedsanvisninger, der vil hjælpe med at beskytte mod risiko for personskade eller skade på ejendom. Hvis du ikke følger disse instruktioner, bliver garantien annulleret.

1.1 Generel sikkerhed

- Tørretumbleren kan bruges af børn på og over 8 år og af personer, hvis fysiske, sensoriske eller mentale evner er ikke fuldt udviklet, eller som mangler erfaring og viden, forudsat at de er under opsyn eller uddannet i sikker brug af produktet og de risici, det indeholder. Børn bør ikke lege med produktet. Rengørings- og vedligeholdelsesarbejder bør ikke udføres af børn, medmindre de er under opsyn af en person.
- Børn på mindre end 3 år skal holdes væk medmindre de er under konstant overvågning.
- Justerbare fødder må ikke fjernes. Kløften mellem tørretumbleren og gulvet bør ikke reduceres med materialer såsom tæpper, træ og tape. Dette vil give problemer med tørretumbleren.
- Sørg altid for at få installation og reparationsprocedurer udført af det autoriserede servicecenter. Producenten er ikke ansvarlig for skader, der måtte opstå efter procedurer, der udføres af uautoriserede personer.
- Vask aldrig tørretumbleren ved at sprøjte eller hælde vand på den! Der er risiko for elektrisk stød!

1.1.1 El-sikkerhed



Elektriske sikkerhedsanvisninger skal følges under tilslutning ved installationen.



Apparatet må ikke forsynes via en ekstern kontaktenhed, såsom en timer, eller forbindes til et kredsløb, der jævnligt tændes og slukkes af en hjælpeenhed.

- Slut tørretumbleren til en jordet stikkontakt beskyttet af en sikring på den værdi, der er angivet på typeskiltet. Få jord-installation udført af en autoriseret elektriker. Vores virksomhed er ikke ansvarlig for eventuelle skader, der vil opstå, når tørretumbleren anvendes uden jordforbindelse i overensstemmelse med de lokale regler.
- Spændingen og tilladt sikringsbeskyttelse er angivet på typeskiltet.
- Spændingen angivet på typeskiltet skal være lig med din forsyningsspænding.
- Frakobl tørretumbleren, når den ikke er i brug.
- Frakobl tørretumbleren fra lysnettet under installation, vedligeholdelse, rengøring og reparationer.
- Rør ikke ved opladeren med våde hænder! Tag aldrig stikket ud, ved at trække i kablet, Træk det altid ud, ved at tage fat i stikket.
- Brug ikke forlængerledninger, multi-stik eller adaptere til at forbinde tørretumbleren til strømforsyningen, for at mindske risikoen for brand og elektrisk stød.
- Strømkablet skal være let tilgængeligt efter installationen.



Et beskadiget strømkabel skal skiftes ved at underrette det autoriserede servicecenter.



Hvis tørretumbleren er defekt, må den ikke benyttes, medmindre den er repareret af en autoriseret serviceagent! Der er risiko for elektrisk stød!

1.1.2 Produkt-sikkerhed



Punkter, der skal tages i betragtning ved brandfare:

Det nedenfor angivne vasketøj eller genstande må ikke tørres i tørretumbleren på grund af brandfare.

- Uvasket vasketøj
- Varer tilsmudset med olie, acetone, alkohol, brændselsolie, petroleum, pletfjernere, terpentin, paraffin eller paraffin-fjerner skal vaskes i varmt vand med masser af vaskemiddel, før det tørres i tørretumbler.

Af denne grund skal især de elementer, der indeholder de ovenfor specificerede pletter vaskes meget godt, for at gøre dette bruges passende vaskemiddel og vælg en høj vaske- temperatur.



Nedenfor er angivet vasketøj eller genstande som ikke må tørres i tørretumbleren på grund af brandfare:

- Beklædningsgenstande eller puder forstærket med gummi skum (latex-skum), badehætter, vandtætte tekstiler, materialer med gummiforstærkning og gummiskumpuder.

- Tøj rengjort med industrikemikalier.

Elementer såsom lightere, tændstikker, mønter, metaldele, nåle osv. kan beskadige tromlen eller kan føre til funktionsfejl. Tjek derfor alt det vasketøj, som du vil lægge i din tørretumbler.

Stop aldrig tørretumbleren før programmet afslutter. Hvis du skal gøre dette, skal du fjerne alt vasketøj hurtigt og lægge det ud, for at sprede varmen.



Tøj, der er vasket utilstrækkeligt kan selvantændes, selv efter at tørringen er slut.

- Du skal sørge for tilstrækkelig ventilation for at forhindre gasser, der kommer ud fra enheder, der opererer med andre typer af brændstoffer, herunder åben ild fra at akkumulere i rummet på grund af efter-antændelses-effekten.



Undertøj, der indeholder metalforstærkninger bør ikke tørres i tørretumbleren. Tørretumbleren kan blive beskadiget, hvis metalforstærkninger går løs og knækker under tørringen.



Brug skyllemiddel og lignende produkter i overensstemmelse med instrukserne fra deres producenter.



Rengør fiberfilteret efter hver tørring. Start aldrig tørretumbleren uden fnugfilteret installeret.

- Forsøg aldrig at reparere tørretumbleren selv. Udfør ikke reparations- eller udskiftningsprocedurer på produktet, selv hvis du kender eller har evnen til at udføre den nødvendige procedure, medmindre det klart er foreslået i betjeningsvejledningen eller den officielle servicemanual. Ellers vil du bringe dit liv og andres liv i fare.
- Der må ikke være en aflåseligt, skyde- eller hængslet dør, der kan blokere for åbningen af lågen på det sted, hvor din tørretumbler skal installeres.
- Installer tørretumbleren på steder, der er egnede til brug i hjemmet. (Badeværelse, lukket altan, garage osv.)
- Sørg for at kæledyr ikke kommer ind i tørretumbleren. Kontroller indersiden af tørretumbleren, før du betjener den.
- Læn dig ikke på lugen på tørretumbleren, når den er åben, ellers kan den vælte.
- Fnug må ikke kunne akkumuleres omkring tørretumbleren

1.2 Montering over en vaskemaskine

- Fastholdelsesbeslag skal bruges mellem de to maskiner, når du installerer tørretumbleren oven på en vaskemaskine. Fastholdelsesbeslaget skal installeres af et autoriseret serviceværksted.
- Den samlede vægt af vaskemaskine og tørretumbler - med fuldt indhold, når de er placeret oven på hinanden kommer op på ca. 180 kg. Placer produkterne på et fast gulv, der har tilstrækkelig bæreevne!



Vaskemaskinen kan ikke placeres på tørretumbleren. Vær opmærksom på de ovennævnte advarsler under installationen på din vaskemaskine.

Installationstabel til vaskemaskine og tørretumbler

Tørretumbler dybde	Vaskemaskinedybde						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Kan installeres					Kan installeres	Kan ikke installeres
60 cm	Kan installeres					Kan ikke installeres	

1.3 Tilsigtet brug

- Tørretumbleren er designet til brug i hjemmet. Den er ikke egnet til kommerciel brug, og det må ikke anvendes til andre formål end den tilsigtede anvendelse.
- Brug kun tørretumbleren til tørring af tøj, der er mærket i overensstemmelse hermed.
- Producenten frasiger sig ethvert ansvar opstået fra forkert brug eller transport.
- Levetiden for tørretumbleren, som du har købt, er 10 år. I løbet af denne periode vil originale reservedele være til rådighed til at betjene tørretumbleren korrekt.

1.4 Børnesikkerhed

 
- Emballage er farlig for børnene. Hold emballagematerialer væk fra børn.
- El-produkter er farlige for børnene. Hold børn væk fra produktet, når det er i drift. Lad dem ikke manipulere med tørretumbleren. Brug børnesikringen, for at forhindre børn at manipulere med tørretumbleren.



Børnesikring er på kontrolpanelet. **(Se Børnelås)**

- Hold lågen lukket, selv når tørretumbleren ikke er i brug.

1.5 Overholdelse af WEEE-regulativer og bortskaffelse af affaldsproduktet



Dette produkt er i overensstemmelse med EUs WEEE-direktiv (2012/19/EU). Dette produkt er forsynet med en klassificeringssymbol for affald af elektrisk og elektronisk udstyr (WEEE).

Dette produkt er fremstillet med højskvalitets-dele og materialer, som kan genbruges og er egnet til genbrug. Bortskaf ikke affaldsproduktet sammen med normalt husholdnings - og andet affald ved slutningen af dets levetid. Produktet skal returneres til de korrekte centraler til genanvendelse af elektrisk og elektronisk udstyr. Kontakt venligst de lokale myndigheder for at lære om disse affaldscentraler.

1.6 Overholdelse RoHS-direktivet:

Det produkt, du har købt er i overensstemmelse med EU RoHS-direktiv (2011/65/EU). Det indeholder ikke skadelige eller forbudte stoffer, der er angivet i direktivet.

1.7 Yderligere oplysninger

Produktets emballagematerialer er fremstillet af genbrugsmaterialer i overensstemmelse med vores nationale miljøbestemmelser. Bortskaf ikke emballagen sammen med husholdningsaffald eller andet affald. Indlever emballagen på de indsamlingssteder, der udpeges af de lokale myndigheder.

1.8 Tekniske specifikationer

DA	
Højde (Min. / Max.)	84,6 cm / 86,6 cm*
Bredde	59,5 cm
Dybde	53 cm
Kapacitet (maks.)	7 kg**
Vægt (netto)	32,5 kg
Spænding	Se typemærkat***
Nominel indgangseffekt	
Modelkode	

* Min. højde: Højde med de justerbare fødder lukket.

Max. højde: Højde med de justerbare fødder åbnet maksimalt.

** Tør vasketøjsvægt inden vask.

*** Typeetiket er placeret bag lågen.



Tekniske specifikationer for dette apparat kan ændres uden varsel, hvis det er for at forbedre kvaliteten af produktet.




Figurerne i denne manual er skematiske og svarer måske ikke helt til dit produkt.



Værdierne, der står på etiketterne eller i dokumentationen, er opnået i laboratoriet i overensstemmelse med de relevante standarder. Alt afhængigt af apparatets funktionsmæssige og miljømæssige betingelser kan værdierne variere.

2 Tørretumbleren

2.1 Leveringsomfang

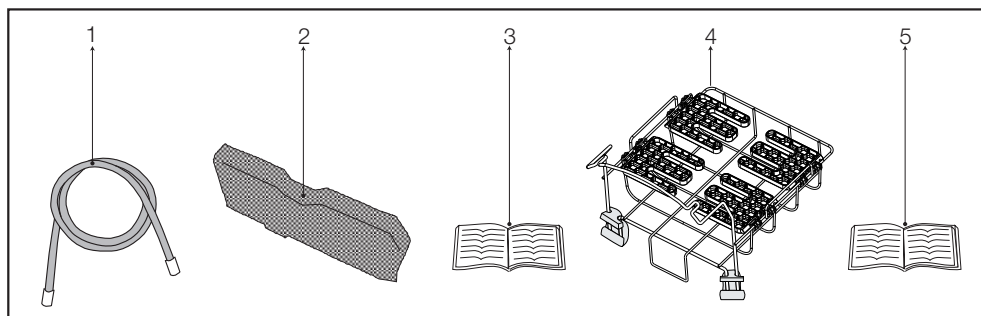

1. Vandafløbsslange *

2. Filtersvamp*

3. Brugervejledning

4. Tørrestativ*

5. Tørrestativ brugervejledning*

*Kan leveres sammen med maskinen afhængigt af modellen.

3 Installation

Henvend dig til den nærmeste autoriserede serviceagent angående installationen af produktet.

 Det er kundens ansvar at klargøre stedet og den elektriske installation af produktet.

 Installation og elektriske tilslutninger skal udføres af kvalificeret personale.

 Se efter, om produktet har fejl, inden installationen. Hvis det har, bør du ikke få det installeret. Beskadigede produkter kan udgøre en risiko for din sikkerhed.

3.1 Passende installationssted

- Installer produktet et sted, hvor der ikke er risiko for frost, og i en stabil og plan position.
- Produktet skal betjenes et sted med god ventilation og støvfri omgivelser.
- Bloker ikke luftkanalerne foran og under produktet med materialer som f.eks. langluvede tæpper og træskinner.
- Undlad at placere produktet på et langluvet tæppe eller lignende overflader.
- Produktet må ikke installeres bag en dør med lås, en skydedør eller en dør med hængsel, som kan ramme produktet.
- Når produktet er installeret, bør det forblive på det samme sted, hvor dets tilslutninger er blevet udført. Når produktet installeres, skal du sørge for, at dens bagside ikke rører noget (vandhane, kontakt, osv.), og vær også opmærksom på, at du bør installere produktet, hvor det vil forblive permanent.


 Undlad at placere produktet oven på strømkablet.

- Hold en afstand på mindst 1,5 cm til andre møblers sider.

3.2 Således fjernes transportsikkerhedsmaterialet

 Fjern transportsikkerhedsmaterialet før produktet tages i brug første gang.

1. Åbn indfyldningslågen.
2. Der er en nylontaske inden i trummen der indeholder et stykke skumplast. Hold det i den del der er markeret med XX.
3. Træk nylonen mod dig selv og fjern transportsikkerhedsmaterialet.

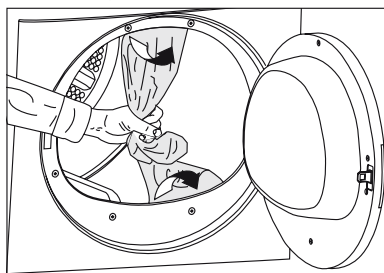

 Sørg for at du har fjernet transportsikkerhedsmaterialet (nylon + skumplaststykker) før produktet tages i brug første gang. Efterlad ikke nogen dele inden i trummen.

3.3 Installation under en disk

- En speciel del (Del nr. 297 360 0100), der erstatter den øverste pynteliste skal leveres og installeres af den autoriserede serviceagent for at kunne bruge maskinen under et bord eller i et skab. Den bør aldrig betjenes uden toplisten.
- Efterlad mindst 3 cm frirum mellem produktets side- og bagvægge og bordets/skabets vægge, når den installeres under et bord eller i et skab.


3.4 Justering af fødder

For at maskinen kører mere støjsvagt og vibrationsfrit, skal den stå jævnt og balanceret på fødderne. Balancer maskinen ved at justere fødderne.

Drej fødderne, maskinen står plant og fast.



Skrue aldrig de justerbare fødder fra hylstrene.

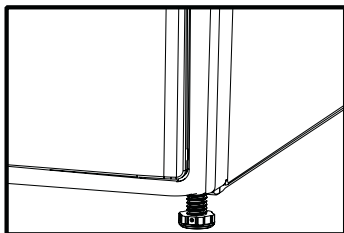

3.5 Elektrisk tilslutning

For specifikke instruktioner for elektrisk forbindelse krævet ved installation (**se 1.1.1**

El-sikkerhed)

3.6 Transport af maskinen

1. Fjern maskinens stik fra netspændingen.
2. Fjern vandafløbet (hvis det er noget) og skorstensforbindelser.
3. Tøm det tilbageværende vand i maskinen helt inden transporten.

3.7 Udskiftning af pæren

I tilfælde af at der bruges en lampe i din tørretumbler.

For at udskifte pære/LED som bruges til at oplyse din tørretumbler, ring til dit autoriserede servicecenter.

Pæren(-erne), som anvendes i dette apparat er uegnet til belysning i boliger. Formålet med denne lampe er at hjælpe brugeren med at lægge vasketøjet ind i tørretumbleren på en bekvem måde. Lamperne i dette apparat, skal kunne tåle ekstreme fysiske forhold, som vibrationer og temperaturer på over 50°C.

4 Forberedelse

4.1 Vasketøj egnet til tørring i tørretumbler

Overhold altid anvisningerne på tøjets tags. Tør kun vasketøj som har en etiket, der angiver, at de er egnet til tørring i en tørretumbler, og sørg for, at du vælger et passende program.

SYMBOLER PÅ VASKEANVISNINGEN													
	Tørring		Velegnet til tørretumbler		Skånsom		Skånsom / lav temperatur		Må ikke tørres i tørretumbler		Må ikke tørres		Må ikke kemisk renses

	Tørringsindstillinger		Alle temperaturer		Høj temperatur		Mellem temperatur		Lav temperatur		Kold		Hængetørring		Liggertørring		Dryptørring		Tørring i skyggen		Kan kemisk renses
--	-----------------------	--	-------------------	--	----------------	--	-------------------	--	----------------	--	------	--	--------------	--	---------------	--	-------------	--	-------------------	--	-------------------

	Strygning -		Strygning ved høj temperatur		Strygning ved mellem temperatur		Strygning ved lav temperatur		Må ikke stryges		Stryges uden damp
	Med eller uden damp										
	Maksimal temperatur	200 °C		150 °C		110 °C					

4.2 Vasketøj uegnet til tørring i tørretumbler



Sarte broderede tekstiler, uld, silke beklædningsgenstande, sarte og værdifulde tekstiler, lufttætte elementer og tylgardiner er ikke egnet til maskintørring.

4.3 Forberedelse af vasketøj til tørring

- Tøjstykker kan være sammenfiltret med hinanden efter vask. Adskil vasketøj før du placerer stykkerne i tørretumbleren.
- Tør beklædningsgenstande med metal tilbehør, såsom lynlås med indersiden udad.
- Fastgør lynlås, hægter og spænder og knapark.

4.4 Sådan opnås energibesparelser


Følgende oplysninger vil hjælpe dig med at bruge tørretumbler på en økologisk og energieffektiv måde.

- Centrifuger dit vasketøj ved en højere hastighed i din vaskemaskine.. Således afkortes tørretiden og energiforbruget reduceres.
- Sortér vasketøjet, afhængigt af dets type og tykkelse. Tør den samme type vasketøj sammen. For eksempel tørrer tynde viskestykker og duge tidligere end tykke håndklæder.
- Følg instruktionerne i brugervejledningen for programvalg.
- Åbn ikke maskinens låge under tørring, medmindre det er nødvendigt. Hvis du er helt sikker på at du skal åbne lågen, så hold den ikke åben i lang tid.
- Tilsæt ikke vådt vasketøj, mens tørretumbleren er i drift
- Rengør fiberfilteret efter hver tørring.
(Se 6.1 Filter kassette / Lågens inderste overflade)

- I modeller med kondensator skal du sørge for at rengøre kondensatoren jævnligt mindst én gang om måneden eller efter 30 tørrecykler. **(Se 6.3 For kondensatoren;)**
- Ventil rummet, hvor tørretumbleren er placeret godt under tørring.

4.5 Korrekt opfyldningskapacitet

Følg instruktionerne i "Programvalg og forbrugstabel". Ilæg ikke mere end den angivne kapacitetsværdi i tabellen.

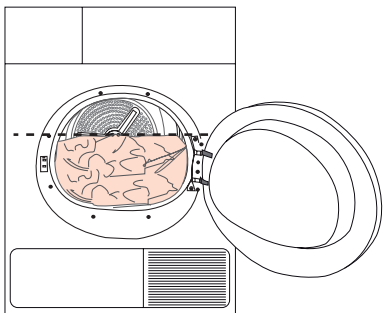

Det anbefales ikke at fylde tørretumbleren med vasketøj, der overstiger det niveau, der er angivet i figuren. Tørreevnen vil blive dårligere, når maskinen er overbelastet. Desuden kan tørretumbleren og vasketøjet blive beskadiget.


Følgende vægte er givet som eksempler.

Vasketøj	Omtrentlig vægte (g) *
Quiltede bomuldstæpper (dobbelte)	1500
Quiltede bomuldstæpper (enkelt)	1000
Lagner (dobbelt)	500
Lagner (enkelt)	350
Store duge	700
Små duge	250
Teservietter	100
Badehåndklæder	700
Håndklæder	350
Bluser	150
Bomuldsskjorter	300
Skjorter	250
Bomuldsjoler	500
Kjoler	350
Jeans	700
Lommetørklæder (10 stk.)	100
T-shirts	125

*Tør vasketøjsvægt inden vask.

5 Betjening af produktet

5.1 Kontrolpanel

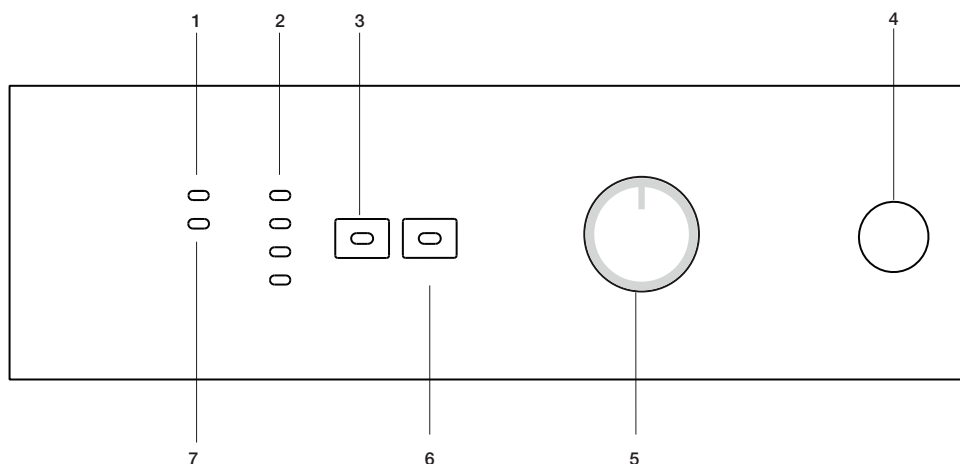

1. Advarselslys for filterrengøring

Advarselslyset bliver tændt, når filteret er fuldt.

2. Programopfølgningsindikator

Bruges til opfølgning af det aktuelle programs status.

3. Lav temperatur

Bruges til tørring i lave temperaturer.

4. Tænd/sluk knap

Bruges til at tænde og slukke for maskinen.

5. Programvælgerknap

Bruges til at vælge et program.

6. Start/pause/annuller knap

Bruges til at starte, pause eller annullere programmet.

7. Advarselslys for vandtank

Advarselslyset bliver tændt, når vandtanken er fuld.



5.2 Forberedelse af maskinen

1. Sæt maskinens stik i kontakten.
2. Placer vasketøjet i maskinen.
3. Tryk på "Tænd/Sluk" knappen.



At trykke på "Tænd/sluk" knappen betyder ikke nødvendigvis, at programmet er startet. Tryk på "start/pause/annuller" knappen for at starte programmet.

5.3 Tidsprogramvalg

Bestem den egnede tid ud fra tabellen nedenfor, der også inkluderer tørretemperatur i grader. Vælg den ønskede tid med tidsprogramvælgerknappen.

Ekstra tørt	Tør kun bomuldsvasketøj ved høje temperaturer. Tykt vasketøj og vasketøj med flere lag (f.eks. håndklæder, linned, cowboybukser) tørres, så de ikke kræver strygning, inden de kommer ind i skabet.
Klar til brug	Normalt vasketøj (f.eks. bordduge, undertøj) tørres, så de ikke kræver strygning, inden de kommer i skufferne.
Stryge tørt	Normalt vasketøj (F.eks. skjorter, kjoler) tørres strygeklart.



For yderligere programdetaljer, se "Programvalg tabel"

5.4 Hovedprogrammer

Anti-krøl

Et 2 timers anti-krøl program, der forhindrer vasketøjet i at krølle, vil blive aktiveret, hvis du ikke tager vasketøjet ud, efter programmet er afsluttet. Dette program roterer vasketøjet i 600 sekunders intervaller for at forhindre krølning.

•Ventilation

Kun ventilation udføres i 10 minutter uden at blæse varm luft. Du kan lufte dit tøj, der har været opbevaret i lukkede omgivelser i lang tid, takket være dette program, for at fjerne ubehagelige lugte.

•Tidsprogrammer

Du kan vælge et af timer programmerne 25 min, 50 min, 70 min, 85 min, 100 min, 121 min, 140 min til at opnå det endelige tørreniveau. Tør bomuldstøjet ved høje temperaturer og syntetisk og strygelet ved lave temperaturer afhængigt af vasketøjstype.



Du skal trykke på "Lav temperatur" knappen for syntetisk tøj

5.5 Programvælger og forbrugstabel

DA					
Programmer		Kapacitet (kg)	Spin­hastighed i vaskemaskine (rpm)	Omtrentlig mængde af resterende fugtighed	Tørringstid (minutter)
Bomuld / Farvet					
	Skabstørt	7	1000	% 60	121
			800	% 70	140
		3,5	1000	% 60	70
			800	% 70	85
	Strygetørt	7	1000	% 60	100
			800	% 70	121
		3,5	1000	% 60	50
			800	% 70	50-70
Syntetiske stoffer					
	Skabstørt	3,5	800	% 40	50
			600	% 50	70
Værdier for energiforbrug					
Programmer		Kapacitet (kg)	Spin­hastighed i vaskemaskine (rpm)	Omtrentlig mængde af resterende fugtighed	Værdier for energiforbrug i kWh
Skabstørt til bomuld*		7 / 3,5	1000	% 60	4,22 / 2,29
Bomuld strygetørt		7	1000	% 60	3,40
Skabstørt til syntetisk		3,5	800	% 40	1,60
Strømförbrug i slukket tilstand for normalt bomuldsprogram ved fuld belastning, PO (W)					0,3
Strømförbrug i aktiveret tilstand for normalt bomuldsprogram ved fuld belastning, PO (W)					1,0

	„Program til skabstørt bomuld“, der anvendes ved fuld og delvis belastning er et almindeligt tørreprogram, hvor oplysningerne på mærket og i oplysningsskemaet angiver, at programmet er velegnet til tørning af normalt vådt bomuldsvasketøj og er det mest effektive program med hensyn til energiförbrug for bomuld.
--	---

*: Energimærkningsprogram (EN 61121:2012)

Alle værdier, der står i tabellen, er fastsat i henhold til EN 61121:2012 Standarden. Disse værdier kan afvige fra tabellen i henhold til vasketøjstype, centrifugeringshastighed, omgivende betingelser og spændingsudsving.

5.6 Ekstra funktioner

Lav temperatur

Denne funktion muliggør tørring ved lavere temperaturer og sparer derfor energi. Advarselslyset vil lyse op, når du vælger den funktion.



Du skal bruge denne funktion, når du tørrer syntetisk eller strygelet tøj.

5.7 Advarselsindikatorer



Advarselsindikatorer kan variere i henhold til tørretumblermodel.

Rengøring af filteret

Et advarselslys vil blive tændt for at minde om rengøring af filteret, når programmet er slut.



Hvis advarslen for rengøring af filter lyser konstant, så læs venligst i "Forslag til løsning af problemer".

Vandtank

Advarselslyset vil lyse op ved afslutningen af programmet, når tanken er fuld af vand. Maskinen stopper med at køre, hvis dette advarselslys lyser under et programforløb. For at genstarte maskinen skal du tømme vandet ud af vandtanken. Tryk på "Start/pause/annuller" knappen for at starte programmet, efter du har tømt vandtanken. Advarselslyset går ud, og programmet genoptager funktionen.

5.8 Start af programmet

1. Tryk på "start/pause/annuller"-knappen for at starte programmet.
2. "Start/pause/annuller" knappen vil lyse for at angive, at programmet er startet.

Timer opfølgningsindikator

En af lamperne er tændt, så længe programmet kører, og viser den omtrentlige resterende tid.

5.9 Ændring af valgene efter programmet er startet

Du kan ændre denne funktion til tørring af tøj i et andet program efter at maskinen er blevet startet.

For eksempel:

Tryk og hold "Start/pause/annuller" knappen nede i omkring 3 sekunder for at vælge "90" minutters programmet i stedet for "60" minutters programmet.

Vælg "90" minutters programmet ved at dreje programknappen.

Tryk på "start/pause/annuller" knappen for at starte programmet.



Det program, der vælges først, vil fortsætte, selv om programvælgerknappen flyttes, og der vælges et andet program, mens maskinen kører. Du skal annullere det kørende program for at ændre tørreprogram. (Se, Afslutning af programmet ved annullering)

Således tilføjes/fjernes vasketøj i standby

For at tilføje eller tage vasketøj ud efter opstart af programmet:


1. Tryk på "Start/Pause/Annuller" - knappen for at skifte til "Pause". Tørringen vil stoppe.
2. Åbn lågen, tilføj eller fjern tøj og luk lågen igen.
3. Tryk på "start/pause/annuller" knappen for at starte programmet.



Vasketøj, der tilføjes, efter tørreprocessen er startet, kan forårsage, at det allerede tørrede tøj i maskinen blander sig med vådt tøj, og resultatet vil være vådt vasketøj, efter tørreprocessen er færdig.

5.10 Børne-lås

Der er en børnelås for at forhindre programafbrydelse som følge af tryk på knapperne, mens programmet er i gang. Indfyldningslågen og alle knapperne undtaget "Tænd/Sluk" - knappen deaktiveres når børnelåsen er aktiveret. For at aktivere børnelåsen skal der trykkes på "start/pause/annuller" og "Lav temperatur" knapperne samtidigt i 3 sekunder. For at kunne starte et nyt program, når programmet er slut, eller for at kunne skride ind i programmet skal børnelåsen deaktiveres. For deaktivering af børnelås trykkes der på de samme knapper i 3 sek.

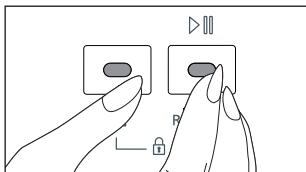

Et af lysene på programopfølgingsindikatoren begynder at blinke, når børnesikringslåsen er aktiveret



Børnesikringslåsen deaktiveres, når maskinen genstartes ved at trykke på Tænd/Sluk knappen.

5.11 Afslutning af programmet ved annullering

Programmet, der vælges først, vil fortsætte, selvom programvælgerknappens position ændres. Et nyt program kan vælges og startes efter at "Programannullering" er aktiveret for at ændre tørreprogrammet. For annullering af et valgt program;

- Tryk på "start/pause/annuller" knappen i 3 sekunder. "Filter rengøring" og "Vandtank" advarselslysene samt "0" advarselslyset på programopfølgings indikatoren vil lyse ved slutningen af denne periode som påmindelse.

A Da maskinen indvendigt vil være meget varm, når du annullerer et program, mens maskinen kører, skal ventilationsprogrammet aktiveres for at køle den ned.

Maskinen vil ikke starte, selv om "Start/ Pause/Annuller" knappen er trykket ned, medmindre programvælgerknappen sættes tilbage til det oprindelige program. Du skal annullere det pauserede program for at ændre tørreprogram.

5.12 Programslut

"Filter rengøring" og "Vandtank" advarselslysene samt "0" advarselslyset på programopfølgings indikatoren vil lyse ved programslut. Lågen kan åbnes, og maskinen bliver klar til en ny vaskeproces.

Tryk på "Tænd/Sluk"-knappen igen for at slukke for maskinen.



Et 2 timers anti-krøl program, der forhindrer vasketøjet i at krølle, vil blive aktiveret, hvis du ikke tager vasketøjet ud, efter programmet er afsluttet.



Rengør filteret efter hver tørring (se "Filter rengøring").




Tøm vandtanken efter hver tørring (se under Vandtank)

6 Vedligeholdelse og rengøring

6.1 Filter kassette / Lågens inderste overflade

Papirstøv og fibre, der afgives fra vasketøjet til luften under tørrecyklussen, samles i "Filterkassetten".

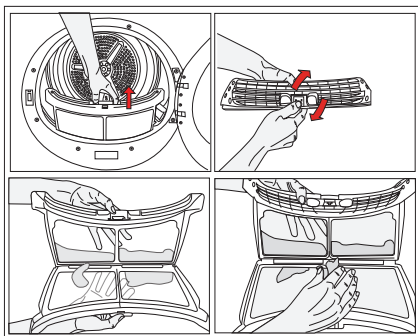

Sådanne fibre og papirstøv dannes generelt ved slid og vask.



Rengør altid filteret og dækslet inderste overflader efter hver tørreproces.



Du kan rengøre filteret og filterområdet med en støvsuger.

For rengøring af filteret:

1. Åbn indfyldningslågen.
2. Tag dækfilteret ud ved at trække det op og åbn filteret.
3. Rengør papirstøv, fibre og bomuldstrævler med hånden eller med en blød klud.
4. Luk filteret og sæt det tilbage på plads.



Der kan opstå tilstopning på filterets overflade efter at have brugt maskinen i nogen tid; hvis dette sker, skal filteret vaskes med vand og tørres, inden det bruges igen.



Rengør hele dækslets inderste overflade og lågepakningen.

6.2 Vandtank;

Fugten i det fugtige vasketøj tages ud af vasketøjet og kondenseres. Tøm vandtanken efter hver tørrecyklus eller under tørring, når "Vandtank" advarselslyset tændes.




Kondensvand er ikke drikkevand!




Tag aldrig vandtanken ud, når programmet kører!

Hvis du glemmer at tømme vandtanken, vil tørretumbleren stoppe under den følgende tørrecyklus, når vandtanken er fuld, og "Vandtank" advarselslyset vil lyse. Hvis det er tilfældet, trykkes "Start/pause/annuller" knappen ind for at genoptage tørrecyklussen, efter vandtanken er tømt. For at tømme vandtanken:

1. Fjern forsigtigt vandtanken ved at åbne sparkepladedækslet/trække skuffen ud.

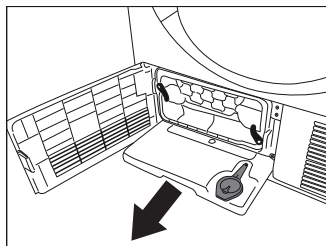

2. Tøm vandet ud ved at åbne vandtankens dæksel.

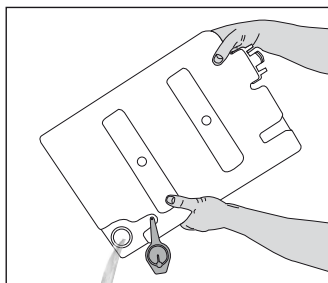

3. Hvis der har samlet sig støv i vandtankens dæksel, skal det rengøres og trykkes i for at lukke.
4. Placer vandtanken på plads.

6.3 For kondensatoren;


Varm og fugtig luft i kondensatoren afkøles med den kolde luft fra rummet. Således kondenseret den fugtige luft, der cirkulerer i tørretumbleren, og derefter pumpes det ind i tanken.




Rengør kondensatoren efter 30 tørrecykler eller en gang om måneden.

For rengøring af kondensatoren:


1. Hvis der har været udført en tørreproces, skal maskinens låge åbnes, og derefter skal man vente, til den køler ned.

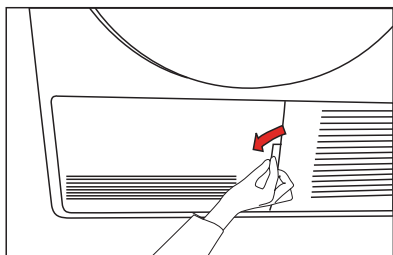


2. Åbn de 2 kondensator låse efter åbning af sparkepladen.

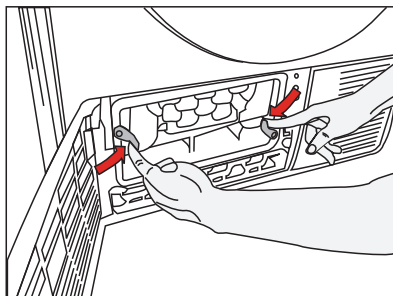


3. Træk kondensatoren ud.

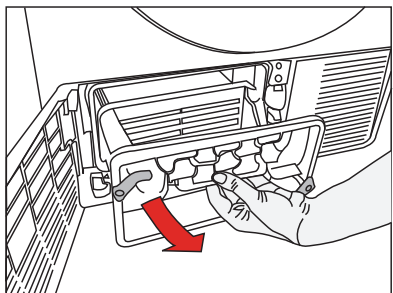


4. Rengør kondensatoren med vand under tryk med et bruserarmatur og vent til vandet tømmes.

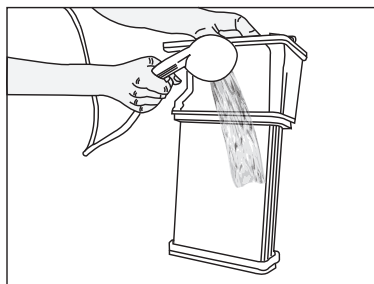

5. Placer kondensatoren i sit cabinet. Fastgør de 2 låse og sørg for, at de er placeret korrekt.

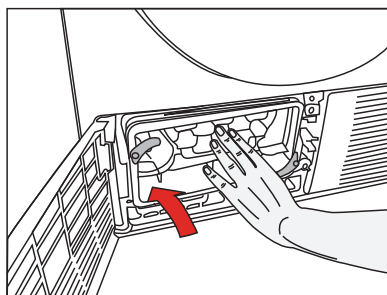

6. Luk sparkepladedækslet.

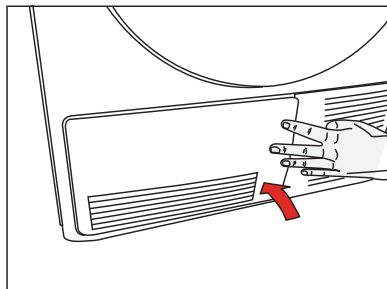

7 Foreslåede løsninger på problemer

Tørreprocessen tager for lang tid

- Filterets trådnæt kan blive tilstoppet. Vask med vand

Der er vådt vasketøj efter en tørreproces.

- Filterets trådnæt kan blive tilstoppet. Vask med vand.
- Der kan være fyldt for meget vasketøj ind. Overfyld ikke maskinen.

Maskinen tænder ikke, eller programmet starter ikke. Maskinen aktiveres ikke, når den indstilles.

- Den er måske ikke sat i stikkontakten. Sørg for, at maskinens stik er sat i kontakten.
- Indfyldningslågen kan stå på klem. Sørg for, at maskinens låge er lukket rigtigt.
- Programmet er måske ikke blevet indstillet, eller "Start/pause/annuller"-knappen er måske ikke trykket ind. Sørg for, at programmet er blevet indstillet og at det ikke er i "Pause" tilstand.
- Børnelåsen er måske blevet aktiveret. Deaktiver børnesikringslåsen.

Programmet er blevet afbrudt uden årsag.

- Indfyldningslågen kan stå på klem. Sørg for, at maskinens låge er lukket rigtigt.
- Strømmen kan være afbrudt. Tryk på "start/pause/annuller"-knappen for at starte programmet.
- Vandet kan være fuldt. Tøm vandet ud af vandtanken.

Vasketøjet er krympet, blevet filtret eller forringet.

- Der er måske anvendt et program, der ikke egnede sig til den type vasketøj. Tør kun det vasketøj, der er egnet for tørring i maskinen efter at have checket mærkaterne på tøjet.
- Vælg et program til tørring af tøjet, der har en passende lav temperatur for den type vasketøj.

Tromlens lys tændes ikke. (For modeller udstyret med en lampe)

- Maskinen er måske ikke blevet startet ved brug af Tænd/Sluk-knappen. Sørg for, at maskinen er tændt.
- Pæren er måske sprunget. Ring til autoriseret service for at få skiftet pæren.

Advarselslys "O" blinker.

- Det 2-timers anti-krøl program, der skal forhindre tøjet i at krølle, er måske blevet aktiveret. Sluk for tørretumbleren og tag vasketøjet ud.

Lyset "O" er tændt.

- Programmet er slut. Sluk for tørretumbleren og tag vasketøjet ud.

Lyset for "Filter rengøring" er tændt.

- Filteret er måske ikke gjort rent. Rengøring af dækfiltret.

"Der kommer vand ud af dækslet"

- Rengør hele dækslets inderste overflade og lågepakningen.

"Dækslet åbner spontant."

- Skub det indtil du kan høre, det er lukket.

For produkter med en kondensator:

"Vandtank"-advarselslyset er tændt.

- Vandet kan være fuldt. Tøm vandet ud af vandtanken.

Lyset for "Kondensator rengøring" er tændt.

- Kondensatoren er måske ikke blevet rengjort. Rengør filtrene i kondensatoren under sparkepladen.



Ring til autoriseret service, hvis problemet fortsætter

Reklamation og servicehåndtering

Produkter solgt til forbruger i Danmark, er underlagt lov om forbruger køp. Om der opstår fejl eller mangler der er omfattet af loven indenfor de givne garantifrister, udbedres disse uden omkostninger. Dækningen forudsætter brug i normal privat husholdning.

Fejl eller skader der er brugsbetingede eller ligger udenfor leverandørens kontrol omfattes ikke af loven. En reparation vil da normalt belastes brugeren.

Grundig dækker ikke.

Fejl eller mangler som er opstået pga.

- Installation i strid med brugervejledning.

- Mangelfuld vedligehold eller behandling i strid med brugervejledning.
- Indgreb og reparationer udført af uautoriseret personel, eller brug af uoriginale reservedele.
- Unormale spændingsvariationer lynnedslag, elektriske forstyrrelser eller evt. uregelmæssigheder i vandforsyningen.

Reservedele.

Information om bestilling af reservedele finder du på:
www.grundig.dk

Ved bestilling af reservedele må modelbetegnelse og serienummer på produktet oplyses. Denne information findes på typeskiltet på produktet.

Anmodning om service.


Grundig har lokale serviceværksteder over hele landet.

Ved tekniske henvendelser må følgende information opgives / fremvises:

- Navn
- Adresse
- Telefon
- Modelbetegnelse
- Serienummer
- Købsdato / Købskvittering
- Fejlbeskrivelse

Grundig Nordic No As
Glynitveien 25
1400 Ski - NO

Tlf +45 70 80 87 77
hvidevareservice@grundig.com
www.grundig.dk

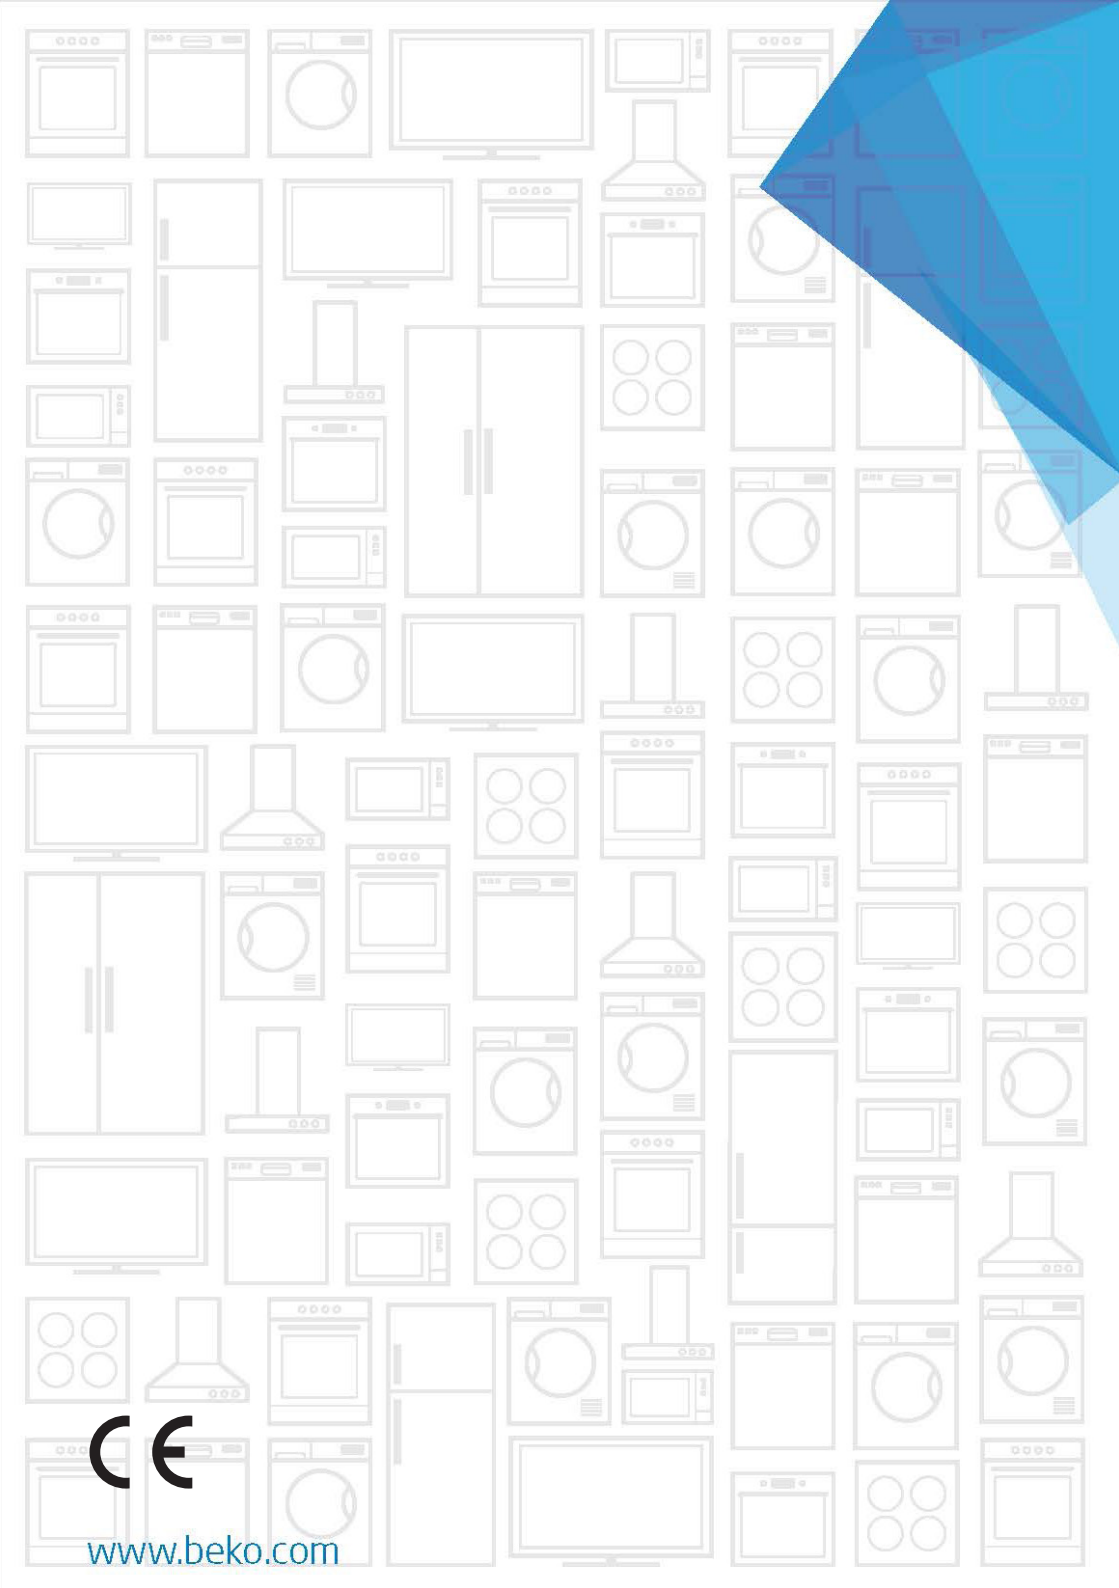

www.beko.com