


**! Attention:** Please read the operating manual prior to operating the machine for the first time.

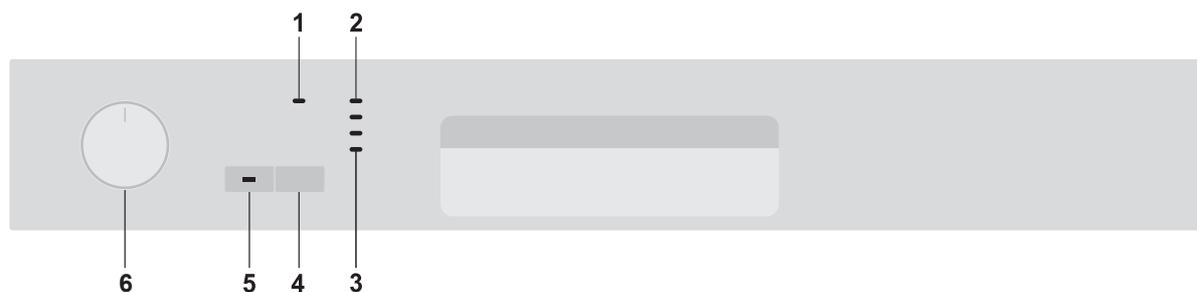

- 1 Salt level indicator light
- 2 "ON" indicator light
- 3 LED progress indicator lights
- 4 Start/Cancel Key
- 5 Half Load (1/2)
- 6 On/Off/Programme selection Key

## How to use your dishwasher:

- Open the water tap.
- Plug to the mains.
- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.
- Use the on / off / program selection key to choose your washing program.
- Start the program with the Start/Cancel button:

### Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the on / off / program selection key to turn the machine off again. When the progress indicator light "programme end" lights up, the programme is complete.
- Close the water tap. Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open. Unload the dishes. Begin with the lower basket.


**Programme Table**

Programme number	1	2	3	4	5
Programme name	Eco *	Intensive	Clean&Shine	Quick&Shine	Mini 30
Cleaning temperature	50 °C	70 °C	65 °C	60 °C	35 °C
Degree of Soiling	Most economical washing programme for the medium soiled daily dishes that are kept waiting.	Suitable for heavily soiled dishes, pots and pans.	Daily washing programme for normally soiled dishes.	Daily washing programme for normally soiled dishes in the fastest way.	Suitable for lightly soiled daily dishes that are scraped or pre-cleaned.
	Medium	High	Medium	Medium	Low
Prewash	+	+	-	-	-
Wash	+	+	+	+	+
Dry	+	+	+	+	-
Duration (min)	192	124	90	58	30
Water (l)	14	17,6	11,8	11,8	11,8
Energy (kWh)	1,02	1,70	1,24	1,32	0,79

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. \* Reference programme for testing institutes. The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.



- 1 Salt level indicator light
- 2 "ON" indicator light
- 3 LED progress indicator lights
- 4 Start/Cancel Key
- 5 Half Load (1/2)
- 6 On/Off/Programme selection Key

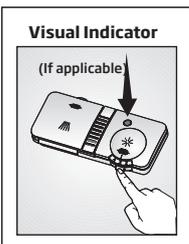

**Rinse aid level indicator light**

If the indicator light comes on, you have to refill rinse aid (If applicable).

You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.

When the colour is light, open the dispenser and refill rinse aid.

**ON/OFF**

Machine will be switched on when you move the Programme Selection key to position "1". "ON" light will illuminate. Machine will be switched off when you move it to "OFF" position. All lights will turn off.

**Program selection Key**

Used to switch on/off the machine and select the washing programmes.

**Half Load (1/2) button**

When there are few dishes, you press this button after pressing the programme selection button. When turning the dishwasher on, the indicator light on the button lights up. This function helps you to save water and energy.

**Start/Cancel key**

You use the key to start the selected program; the light on the key lights up. Stop the program with the Start / Cancel key if you would like to open the door once the dishwasher's washing program is running.



**LED progress indicator lights**

The program sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

**! Warning**

Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will cancel for approximately 35 minutes. Do not worry this is not a fault. The End progress indicator light will come on when finished.

**! Warning**

Do not switch the machine off before End light comes on.

**How to cancel the washing program**

To cancel a program while the machine is operating: Press start/stop key for 3 seconds. The machine will drain the water inside the machine for 45 seconds. The program is cancelled when washing light goes off. Then, you can choose and start a new program.

**! Important:** Depending on the stage of the program you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

**Improper Loading Of Dishware**

