

AUS GUTEM GRUND
GRUNDIG

PROFESSIONAL HAIR DRYER HD 9280



EN





SAFETY

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damage due to improper use!

- Keep the instruction manual for future use. Should a third party be given the appliance, please ensure the instruction manual is included.
- This appliance is intended for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.

- If the appliance is used in the bathroom, it is essential that the power plug is pulled out after use, as water close to the appliance can still constitute a danger, even if the appliance is switched off.
- If not already in use, installing a residual current-operated protective device (RCD) is recommended for additional protection with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your electrician for advice.
- Never place the appliance on soft cushions or blankets during operation.
- Ensure that the air induction and output openings are not covered during operation.
- The appliance is equipped with an overheating protection system.
- Unplug the appliance after use. Do not disconnect the plug by pulling on the cord.
- Never use the appliance if it or the power cord is visibly damaged.

SAFETY

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.
- Our GRUNDIG Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by a service centre to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Always keep the appliance out of the reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by incorrect handling.
- A warm flow of air is required to achieve a perfect result. Please note that a metallised brush can become extremely hot during prolonged or intensive use. To avoid injury, adjust the usage time of the appliance to the accessory being used.

OVERVIEW

Dear customer,

Congratulations on the purchase of your HD 9280 High Professional hair dryer.

Read the following user notes carefully to ensure full enjoyment of your quality Grundig product for many years to come.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years.

For a future worth living.

For a good reason. Grundig.

Controls and parts

See the figure on page 3.

- [A] Slim concentrator nozzle
- [B] Detachable air inlet grille
- [C] Cool Shot
- [D] Temperature level
- [E] Blower level
- [F] Ion connection
- [G] Power cord
- [H] Soft finger volume diffuser

Settings

Your appliance has the following settings :

Ion connection [F]

- **Ionic** : switches the ion supply on and off.

Blower level [E]

- **0** : off
- **1** : gentle air flow
- **2** : strong air flow

Temperature level [D]

- **I** : Cool air
- **II** : Moderate temperature for gently drying and styling
- **III** : high temperature for fast drying

Cool shot [C]

- ***** : interrupts the hot air supply with a cold air flow

OPERATION

Operation

- 1 Towel dry your hair thoroughly after washing.
- 2 If required attach the slim concentrator nozzle **A** or the soft finger volume diffuser **H**.
 - The diffuser ensures more volume as well as maximum positioning on the strand of hair.
- 3 Plug the power cord **G** into the wall socket.

Note

- Check if the mains voltage on the type plate on the handle of the appliance corresponds to your local mains supply.
- 4 Turn on the appliance with switch **E** and set the blower level.
 - 5 Set the temperature level with switch **D**.
 - 6 While drying, you can interrupt the hot air flow by pressing and holding down **C** (Cool Shot).

Note

- The Cool Shot interrupts the hot air with a flow of cold air. This allows you to fix your hairstyle better and more lastingly.
- 7 If required, switch on the ion supply while drying by pressing the **F** button.
 - If the ion supply is switched on, the display lights up blue in the **F** button.
 - 8 After use, switch off the appliance with the **E** button and pull out the power cord **G** from the wall socket.

Caution

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

INFORMATION

Cleaning and care

- 1 Turn the appliance off and unplug the power cord **G** from the wall socket.
- 2 Before cleaning, allow the appliance to cool down. The appliance can become very hot.
- 3 Remember to clean the air inlet grille **B** regularly with a soft brush to remove any hair and dust.
- 4 Clean the housing of the appliance only with a soft damp cloth.

Caution

- Never put the appliance or power cord in water or any other liquid. Do not use any cleaning agents.
- Always allow the appliance to cool down on a heat resistant, safe and flat surface.

Note

- Before using the appliance after cleaning, dry all parts carefully with a soft cloth or paper towel.

Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure that it is unplugged, has completely cooled down and is completely dry.
- Do not wrap the power cord around the appliance.
- Keep the appliance in a cool, dry place.
- Make sure that the appliance is kept out of the reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out the location of the nearest collection point.

Help protect the environment by recycling used products.

Technical data



This product fulfills the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply: 230 - 240 V~, 50 Hz

Power: 2000-2200 W

Technical and design modifications reserved.

FOR A GOOD REASON

GRUNDIG

Grundig Intermedia GmbH
Beuthener Strasse 41
D-90471 Nürnberg

www.grundig.com
7201 1908 6000 15/29