


Refrigerator

User manual

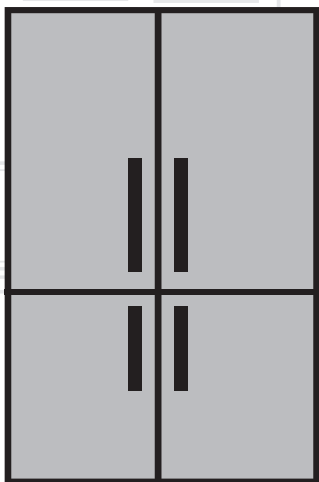

GNE 134601 X

EN | FA |

beko

Please read this manual first!

Dear Customer,

We hope that your product, which has been produced in modern plants and checked under the most meticulous quality control procedures, will provide you an effective service.

For this, we recommend you to carefully read the entire manual of your product before using it and keep it at hand for future references.

This manual

- Will help you use your appliance in a fast and safe way.
- Read the manual before installing and operating your product.
- Follow the instructions, especially those for safety.
- Keep the manual in an easily accessible place as you may need it later.
- Besides, read also the other documents provided with your product.

Please note that this manual may be valid for other models as well.

Symbols and their descriptions

This instruction manual contains the following symbols:



Important information or useful usage tips.



Warning against dangerous conditions for life and property.




Warning against electric voltage.

CONTENTS

1 Your Refrigerator	3	4 Preparation	18
2 Important Safety Warnings	4	5 Using your refrigerator	19
Intended use	4	Indicator Panel.....	19
General safety	4	Door Open Alarm:	22
For products with a	7	Things to do to have the filter usage time calculated automatically	23
water dispenser;.....	7	Sliding Body Shelves	24
Child safety.....	7	Egg tray.....	24
Compliance with WEEE Directive and Disposing of the Waste Product:	7	Crisper	24
Package information.....	7	Chiller compartment	24
HC warning	8	Movable Middle Section	25
Things to be done for energy saving ..	8	Multi Zone Storage Compartment ..	25
Recommenations for freshfood compartment.....	8	Blue light	25
		Sliding Body Shelves With Rear Hangers	26
3 Installation	9	Butter & Cheese Section	26
Points to be considered when re- transporting your refrigerator	9	Using the water spring.....	26
Before operating your refrigerator	9	Spillage Tray	26
Electric connection	9	Minibar	27
Disposing of the packaging	10	Dual cooling system:	28
Disposing of your old refrigerator	10	Freezing fresh food.....	28
Placing and Installation	10	Recommendations for preservation of frozen food	29
Floor balance adjustment	11	Placing the food	29
Adjusting the gap between the upper door	11	Deep-freeze information	29
Installing Water Filter	13		
Connection of the Water Pipe to the Refrigerator	13	6 Maintenance and cleaning	30
Connection of Water Hose to the Jug	14	Protection of plastic surfaces	30
Connection of the Water Pipe to the Cold Water Mains Line	15		
Prior to first use of Water Dispenser.	17	7. Troubleshooting	31

1 Your Refrigerator

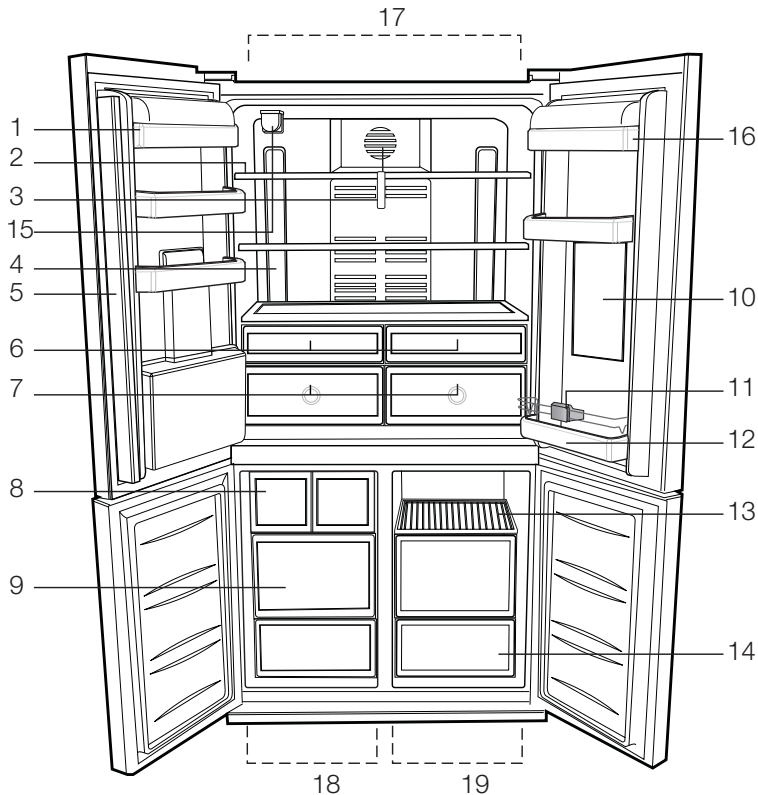

- | | |
|-------------------------------------|--------------------------------------|
| 1- Fridge compartment door shelves | 10- Minibar |
| 2- Fridge compartment glass shelves | 11- Bottle holder |
| 3- Diffuser cover | 12- Bottle shelf |
| 4- Illumination lens | 13- Food storage compartment shelves |
| 5- Movable middle section | 14- Food storage compartments |
| 6- Chiller compartment | 15- Water Filter |
| 7- Crisper | 16- Dairy compartment |
| 8- Icematic | 17- Fridge compartment |
| 9- Frozen food storage compartments | 18- Freezer compartment |
| | 19- Multi Zone |

i Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

2 Important Safety Warnings

Please review the following information. Failure to observe this information may cause injuries or material damage. Otherwise, all warranty and reliability commitments will become invalid.

Original spare parts will be provided for 10 years, following the product purchasing date.

Intended use

This product is intended to be used

- indoors and in closed areas such as homes;
- in closed working environments such as stores and offices;
- in closed accommodation areas such as farm houses, hotels, pensions.
- It should not be used outdoors.


General safety

- When you want to dispose/scrap the product, we recommend you to consult the authorized service in order to learn the required information and authorized bodies.
- Consult your authorized service for all your questions and problems related to the refrigerator. Do not intervene or let someone intervene to the refrigerator without notifying the authorised services.
- For products with a freezer compartment; Do not eat cone ice cream and ice cubes immediately after you take them out of the freezer compartment! (This may cause

frostbite in your mouth.)

- For products with a freezer compartment; Do not put bottled and canned liquid beverages in the freezer compartment. Otherwise, these may burst.
- Do not touch frozen food by hand; they may stick to your hand.
- Unplug your refrigerator before cleaning or defrosting.
- Vapor and vaporized cleaning materials should never be used in cleaning and defrosting processes of your refrigerator. In such cases, the vapor may get in contact with the electrical parts and cause short circuit or electric shock.
- Never use the parts on your refrigerator such as the door as a means of support or step.
- Do not use electrical devices inside the refrigerator.
- Do not damage the parts, where the refrigerant is circulating, with drilling or cutting tools. The refrigerant that might blow out when the gas channels of the evaporator, pipe extensions or surface coatings are punctured causes skin irritations and eye injuries.
- Do not cover or block the ventilation holes on your refrigerator with any material.
- Electrical devices must be repaired by only authorised persons. Repairs performed by incompetent persons create a risk for the user.



- In case of any failure or during a maintenance or repair work, disconnect your refrigerator's mains supply by either turning off the relevant fuse or unplugging your appliance.
- Do not pull by the cable when pulling off the plug.
- Ensure highly alcoholic beverages are stored securely with the lid fastened and placed upright.
- Never store spray cans containing flammable and explosive substances in the refrigerator.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are attended by a person who will be responsible for their safety or who will instruct them accordingly for use of the product
- Do not operate a damaged refrigerator. Consult with the service agent if you have any concerns.
- Electrical safety of your refrigerator shall be guaranteed only if the earth system in your house complies with standards.
- Exposing the product to rain, snow, sun and wind is dangerous with respect to electrical safety.
- Contact authorized service when there is a power cable damage to avoid danger.
- Never plug the refrigerator into the wall outlet during installation. Otherwise, risk of death or serious injury may arise.
- This refrigerator is intended for only storing food items. It must not be used for any other purpose.
- Label of technical specifications is located on the left wall inside the refrigerator.
- Never connect your refrigerator to electricity-saving systems; they may damage the refrigerator.
- If there is a blue light on the refrigerator, do not look at the blue light with optical tools.
- For manually controlled refrigerators, wait for at least 5 minutes to start the refrigerator after power failure.
- This operation manual should be handed in to the new owner of the product when it is given to others.
- Avoid causing damage on power cable when transporting the refrigerator. Bending cable may cause fire. Never place heavy objects on power cable. Do not touch the plug with wet hands when plugging the product

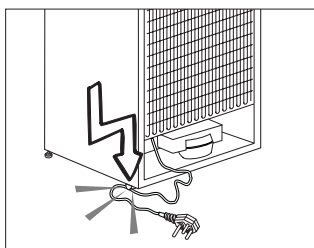

- Do not plug the refrigerator if the wall outlet is loose.
- Water should not be sprayed on inner or outer parts of the product for safety purposes.
- Do not spray substances containing inflammable gases such as propane gas near the refrigerator to avoid fire and explosion risk.
- Never place containers filled with water on top of the refrigerator; in the event of spillages, this may cause electric shock or fire.
- Do not overload the refrigerator with food. If overloaded, the food items may fall down and hurt you and damage refrigerator when you open the door.
- Never place objects on top of the refrigerator; otherwise, these objects may fall down when you open or close the refrigerator's door.
- As they require a precise temperature, vaccines, heat-sensitive medicine and scientific materials and etc. should not be kept in the refrigerator.
- If not to be used for a long time, refrigerator should be unplugged. A possible problem

in power cable may cause fire.

- The plug's tip should be cleaned regularly with a dry cloth; otherwise, it may cause fire.
- Refrigerator may move if adjustable legs are not properly secured on the floor. Properly securing adjustable legs on the floor can prevent the refrigerator to move.
- When carrying the refrigerator, do not hold it from door handle. Otherwise, it may be snapped.
- When you have to place your product next to another refrigerator or freezer, the distance between devices should be at least 8cm. Otherwise, adjacent side walls may be humidified.
- The product shall never be used while the compartment which is located at the top or back of your product and in which electronic boards are available (electronic board box cover) (1) is open.

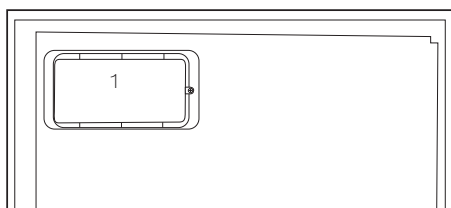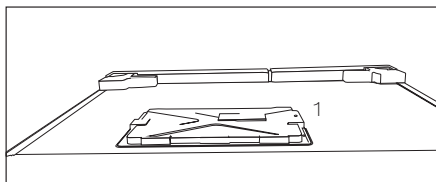

For products with a water dispenser;

- Pressure for cold water inlet shall be maximum 90 psi (6.2 bar). If your water pressure exceeds 80 psi (5.5 bar), use a pressure limiting valve in your mains system. If you do not know how to check your water pressure, ask for the help of a professional plumber.
- If there is risk of water hammer effect in your installation, always use a water hammer prevention equipment in your installation. Consult Professional plumbers if you are not sure that there is no water hammer effect in your installation.
- Do not install on the hot water inlet. Take precautions against the risk of freezing of the hoses. Water temperature operating interval shall be 33°F (0.6°C) minimum and 100°F (38°C) maximum.
- Use only potable water.

Child safety

- If the door has a lock, the key should be kept away from reach of children.
- Children must be supervised to prevent them from tampering with the product.

Compliance with WEEE Directive and Disposing of the Waste Product:



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the door, if any, so that it will be non-functional before disposing of the product.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Do not forget...

Any recycled substance is an indispensable matter for nature and our national asset wealth.

If you want to contribute to the re-evaluation of the packaging materials, you can consult to your environmentalist organizations or the municipalities where you are located.

HC warning

If your product's cooling system contains R600a:

This gas is flammable. Therefore, pay attention to not damaging the cooling system and piping during usage and transportation. In the event of damage, keep your product away from potential fire sources that can cause the product catch a fire and ventilate the room in which the unit is placed.

Ignore this warning if your product's cooling system contains R134a.

Type of gas used in the product is stated in the type label which is on the left wall inside the refrigerator.

Never throw the product in fire for disposal.

Things to be done for energy saving

- Do not leave the doors of your refrigerator open for a long time.
- Do not put hot food or drinks in your refrigerator.
- Do not overload your refrigerator so that the air circulation inside of it is not prevented.
- Do not install your refrigerator under direct sunlight or near heat emitting appliances such as ovens, dishwashers or radiators. Keep your refrigerator at least 30cm away from heat emitting sources and at least 5cm from electrical ovens.
- Pay attention to keep your food in closed containers.
- For products with a freezer compartment; You can store maximum amount of food items in the freezer when you remove the shelf or drawer of the freezer. Energy consumption value stated for your refrigerator has been determined by removing freezer shelf or drawer and under maximum



load. There is no harm to use a shelf or drawer according to the shapes and size of food to be frozen.

- Thawing frozen food in fridge compartment will both provide energy saving and preserve the food quality.

Reccomendations for freshfood compartment

* OPTIONAL

- Please do not let any foodstuff to come to contact with the temperature sensor in freshfood compartment. In order to maintain freshfood compartment at ideal storage temperature, the sensor must not be blocked by foodstuffs.
- Do not place hot foodstuff in your appliance.

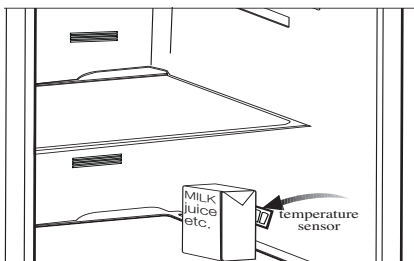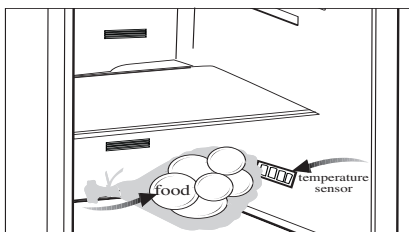

3 Installation

- i** Please remember that the manufacturer shall not be held liable if the information given in the instruction manual is not observed.

Points to be considered when re-transporting your refrigerator

1. Your refrigerator must be emptied and cleaned prior to any transportation.
2. Shelves, accessories, crisper and etc. in your refrigerator must be fastened securely by adhesive tape against any jolt before repackaging.
3. Packaging must be tied with thick tapes and strong ropes and the rules of transportation printed on the package must be followed.

i Always remember...



Every recycled material is an indispensable source for the nature and for our national resources.

If you wish to contribute to recycling the packaging materials, you can get further information from the environmental bodies or local authorities.

Before operating your refrigerator

Before starting to use your refrigerator check the following:

1. Is the interior of the refrigerator dry and can the air circulate freely in the rear of it?
2. Insert the 2 plastic wedges onto the rear ventilation cover as illustrated in the following figure. To do this, remove the screws on the product and use the screws given in the same pouch. Plastic wedges will provide the required distance between your refrigerator and the wall in order to allow the air circulation.

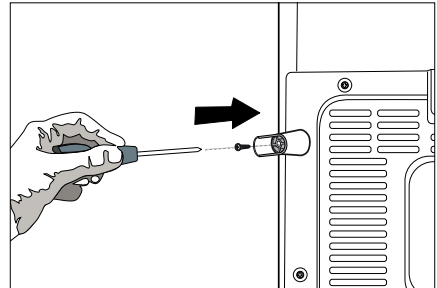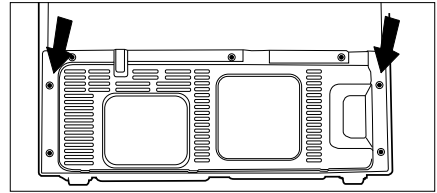

3. Clean the interior of the refrigerator as recommended in the "Maintenance and cleaning" section.
4. Plug the refrigerator into the wall outlet. When the door is open the respective interior light will come on.
5. You will hear a noise as the compressor starts up. The liquid and gases sealed within the refrigeration system may also give rise to noise, even if the compressor is not running and this is quite normal.
6. Front edges of the refrigerator may feel warm. This is normal. These areas are designed to be warm to avoid condensation.

Electric connection

Connect your refrigerator to a grounded socket which is being protected by a fuse with the appropriate capacity.

Important:

- ⚠** The connection must be in compliance with national regulations.
- ⚠** The power cable plug must be easily accessible after installation.

- ⚠ Voltage and allowable fuse protection are specified in the “Technical Specifications” section.
- ⚠ The specified voltage must be equal to your mains voltage.
- ⚠ Extension cables and multiway plugs must not be used for connection.
- ⚠ A damaged power cable must be replaced by a qualified electrician.
- ⚠ The appliance must not be operated before it is repaired! There is danger of electric shock!

Disposing of the packaging

- ⚠ The packing materials may be dangerous for children. Keep the packing materials out of the reach of children or dispose them of by classifying them in accordance with the waste instructions. Do not dispose them of along with the normal household waste.

The packing of your refrigerator is produced from recyclable materials.

Disposing of your old refrigerator

Dispose of your old machine without giving any harm to the environment.

- ⚠ You may consult your authorized dealer or waste collection center of your municipality about the disposal of your refrigerator.
- ⚠ Before disposing of your refrigerator, cut out the electric plug and, if there are any locks on the door, make them inoperable in order to protect children against any danger.

Placing and Installation

- ⚠ Caution: Never plug the refrigerator into the wall outlet during installation. Otherwise, risk of death or serious injury may arise.

⚠ If the entrance door of the room where the refrigerator will be installed is not wide enough for the refrigerator to pass through, than call the authorised service to have them remove the doors of your refrigerator and pass it sideways through the door.


1. Install your refrigerator to a place that allows ease of use.
2. Keep your refrigerator away from heat sources, humid places and direct sunlight.
3. There must be appropriate air ventilation around your refrigerator in order to achieve an efficient operation. If the refrigerator is to be placed in a recess in the wall, there must be at least 5 cm distance with the ceiling and at least 5 cm with the wall.

If the floor is covered with a carpet, your product must be elevated 2.5 cm from the floor.


4. Place your refrigerator on an even floor surface to prevent jolts.
5. Do not keep your refrigerator in ambient temperatures under 10°C.

Floor balance adjustment

- ⚠ If your refrigerator is unbalanced;
 ⚠ First unplug the product. The product must be unplugged when making the balance adjustment. There is the risk of electric shock.

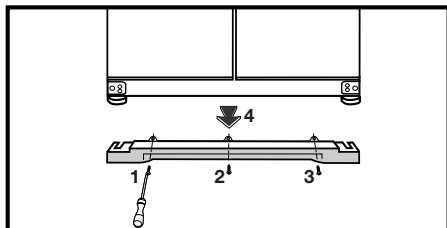


1- Ventilation cover is removed by unscrewing its screws as illustrated in the figure before the procedure. You can balance your refrigerator by turning the front legs of it as illustrated in the figure. The corner where the leg exists is lowered when you turn in the direction of black arrow and raised when you turn in the opposite direction. Taking help from someone to slightly lift the refrigerator will facilitate this process.

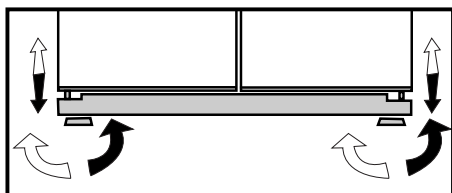

2. After the balance issue is remedied, install back the ventilation cover and fasten the screws.


3. Remove the screws fastening the lower ventilation cover using a Philips screwdriver.

Adjusting the gap between the upper door

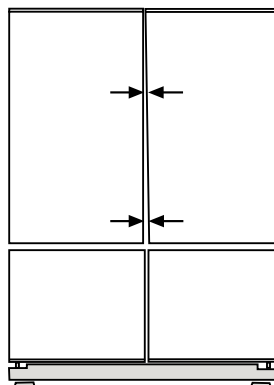



❗ You can adjust the gap between the fridge compartment doors as illustrated in the figures.

Door shelves should be empty when adjusting the door height.

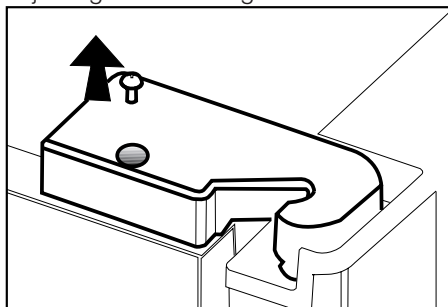


❗ Using a screwdriver, remove the screw of upper hinge cover of the door you want to adjust.

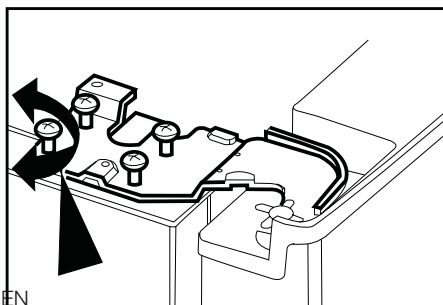


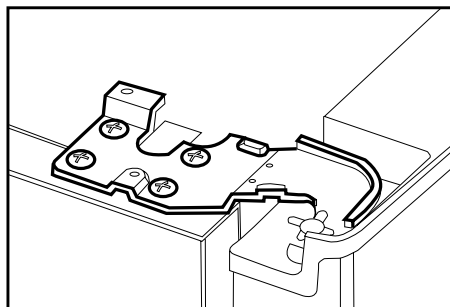

i Adjust the door appropriately as you desire by loosening the screws.

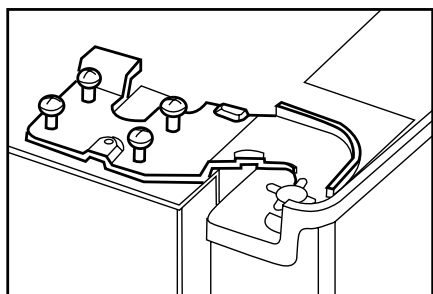

i Fix the door you have adjusted by tightening the screws without changing the position of the door.

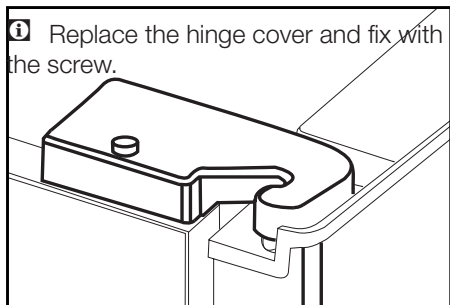

i Replace the hinge cover and fix with the screw.

Installing Water Filter

(in some models)

Two different water sources may be connected to the refrigerator for water supply: the mains cold water supply and water in a jug.

Installation Requirements


A pump should be used for jug water usage.

Check that the parts stated below are supplied with your appliance.

1. Union for connection of the water pipe to the rear of the appliance. (If it does not fit, provide it from the nearest authorized service.)
2. 2 pieces of pipe clips (In case required to secure the water pipe)

Note: Since the following parts are not required in use with a jug, they may not be found in the product you purchased.

3. 5-meter long water pipe (1/4 inch in diameter)
4. Cold mains water valve with mesh filter (Tap Adapter)
5. Water Filter or externally connectable filter to be fitted to the bracket inside the fridge compartment.

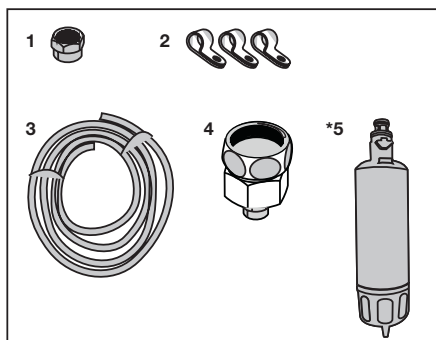

Place where the external filter is going to be fitted should be determined first. (Applies to the filter being used outside the refrigerator.) Then, determine the distance between the filter and the refrigerator and required hose lengths from the filter to the refrigerator water inlet.

Water filter must be hold upright as shown in the figure. It is important to properly attach the filter to water inlet and water outlet points.

After attaching the filter, do not use first 3-4 glasses of water.


Connection of the Water Pipe to the Refrigerator

1. After installing the union onto the water pipe, insert the water pipe to the refrigerator inlet valve by pressing downwards firmly.

2. Fix union as seen in the opposite figure, by squeezing by hand on the refrigerator inlet valve.

(a- Water Pipe, b-Union, c-Valve)

i Note 1: You should not need to tighten the union with a tool to achieve water tight assembly. In case of a leak use a spanner or a pair of pliers to tighten the union.


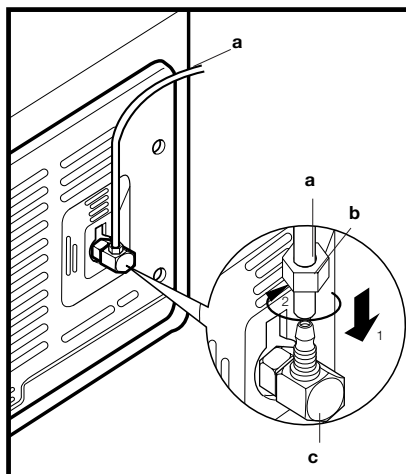


Connection of Water Hose to the Jug

(in some models)

To connect water to the refrigerator from a jug, a pump is needed. Follow the instructions below after connecting one end of the water pipe coming out of the pump to the refrigerator as described on the previous page.

1. Finish the connection by pushing the other end of the water pipe into the water pipe inlet of the pump as shown in the figure.

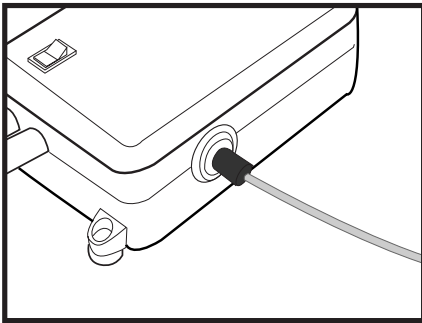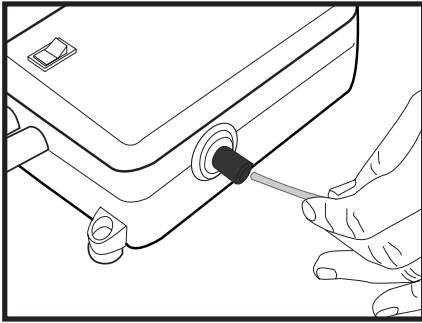


2. Put and fix the pump hose into the jug as shown in the figure.
3. After completing the connection, plug in and run the pump.

To provide an efficient operation of the pump, wait for 2-3 minutes after starting the pump.

i You may refer to the user manual of the pump while making the water connection.

i There is no need to use water filter in case a jug is used.

i Pump must be used when jug will be used.

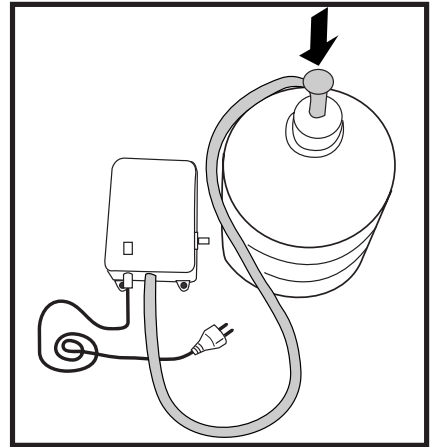

Connection of the Water Pipe to the Cold Water Mains Line

(in some models)

If you want to use your refrigerator by connecting it to the cold water mains line,




you will have to connect a standard 1/2" valve connection fitting to the cold water supply in your house. In case this valve is not present or in case you are not sure, consult a qualified plumber.

1. Separate the union from the tap adaptor. (Figure A)
2. Install the tap adaptor to 1/2" valve fitting as shown in the figure. (Figure B)
3. After inserting the water pipe to the union, install it to the tap adaptor and insert to the tap as shown in the figure. (Figure C)
4. Tighten the union manually. In case of a leak use a spanner or a pair of pliers to tighten the union.

⚠ Caution: Secure the water pipe to suitable points by means of the pipe clips supplied to avoid any damage or displacement or accidental disconnection.


⚠ Caution: After turning on the water valve, make sure that there is no leakage at both connection points of the water pipe. In case of a leak, turn off the valve immediately and tighten all joints again using a spanner or a pair of pliers.

⚠ Caution: Make sure that standard 1/2" valve fitting fed by cold mains water supply is available and is turned off fully.

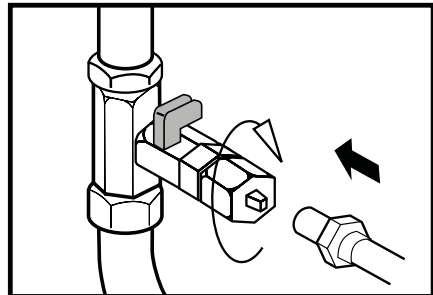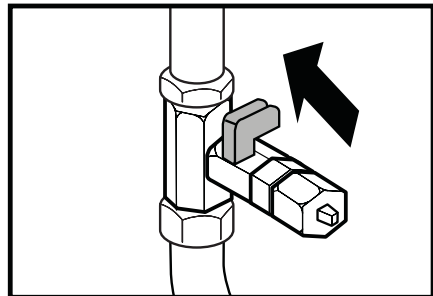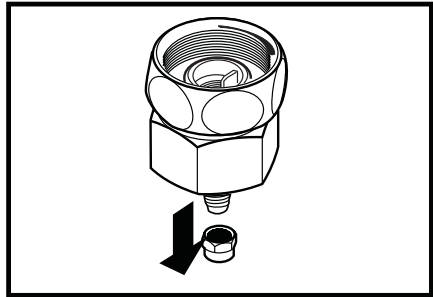


To fit the water filter follow the instructions below referring to figures supplied:



1. Press ice cancel button on the display.

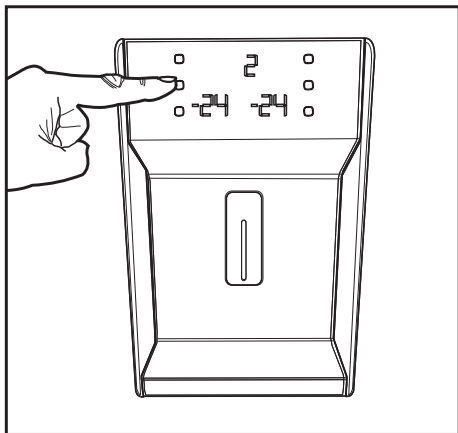

2. Remove the filter cover in the fridge compartment by pulling it forward.

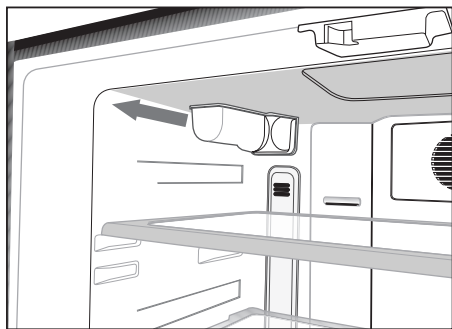

3. Take out the water filter by-pass cover by rotating it downwards.

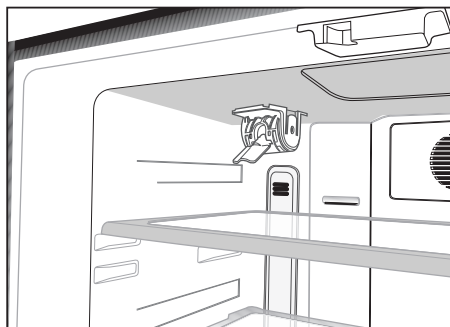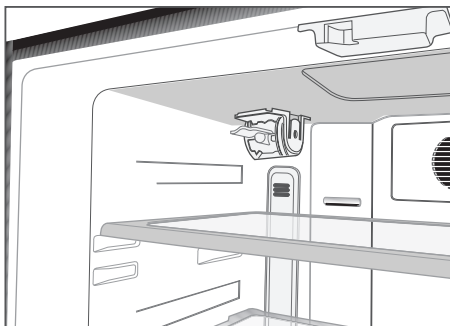

⚠ Caution: Make sure that the "Ice off" mode is active before taking out the by-pass cover.

Note: It is normal that a few drops of water drip after the cover has been taken out.

4. Remove the lid on top of the water filter to place it as shown in the figure and turn upwards to lock it.
5. Press ice cancel button on the display again to exit from this mode.



Water filter should be replaced every 6 months.

If you want to have the filter change time calculated automatically and receive a warning at the end of usage time, please read "Calculating the Filter Usage Time Automatically" section.

The water filter must be removed as shown in the figure when it is going to be replaced or when it will no longer be used and by-pass cover must be attached. It must be made sure that Ice Off mode is active before taking it out.

⚠ Caution: Water filter cleans some foreign particles in the water. It does not purify water from microorganisms.

⚠ Caution: Ice Off button must always be pressed during replacement of the water filter or installing the by-pass cover.

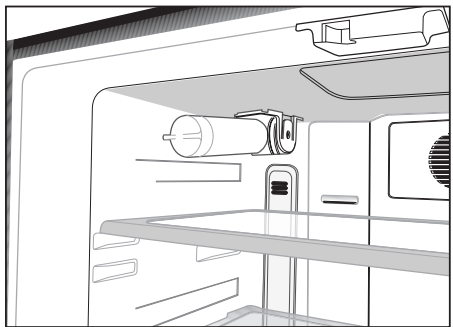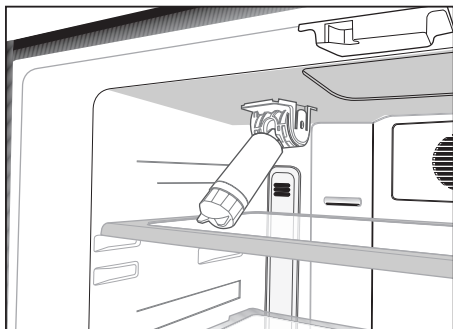

Prior to first use of Water Dispenser

i Water mains pressure must not be below 1 bar.

i Water mains pressure must not be above 8 bars.

i Pumps must be used in case the supply water pressure drops below 1 bar or if a jug is going to be used.

i Water system of the refrigerator must be connected to the cold water line. It must not be connected to hot water line.

i No water may be obtained in the initial operation of the refrigerator. This is caused by the air in the system. To discharge air from the system, press Dispenser latch for periods of 1 minute until water comes from the Dispenser. Water flow may be irregular in the beginning. Irregular water flow will be normalized after the air in the system is discharged.

i At the initial startup of the refrigerator approx. 12 hours must pass before cold water can be obtained.

i Water mains pressure must be between 1-8 bars for the operation of Ice/Water Dispenser smoothly. For this, check that 1 glass of water (100 cc) can be filled in 10 seconds.

i The first 10 glasses of water should not be consumed.

i Approximately the first 30 cubes of ice to be obtained from the Ice Dispenser must not be used.

i Always use the water filter when a jug is not being used.


4 Preparation

- i** Your refrigerator should be installed at least 30 cm away from heat sources such as hobs, ovens, central heater and stoves and at least 5 cm away from electrical ovens and should not be located under direct sunlight.
- i** The ambient temperature of the room where you install your refrigerator should at least be 10°C. Operating your refrigerator under cooler conditions than this is not recommended with regard to its efficiency.
- i** Please make sure that the interior of your refrigerator is cleaned thoroughly.
- i** If two refrigerators are to be installed side by side, there should be at least 2 cm distance between them.
- i** When you operate your refrigerator for the first time, please observe the following instructions during the initial six hours.
 - The door should not be opened frequently.
 - It must be operated empty without any food in it.
 - Do not unplug your refrigerator. If a power failure occurs out of your control, please see the warnings in the "Recommended solutions for the problems" section.
- i** Original packaging and foam materials should be kept for future transportations or moving.

5 Using your refrigerator

Indicator Panel

This touch-control indicator panel allows you to set the temperature without opening the door of your refrigerator. Just touch the relevant button with your finger to set the temperature.

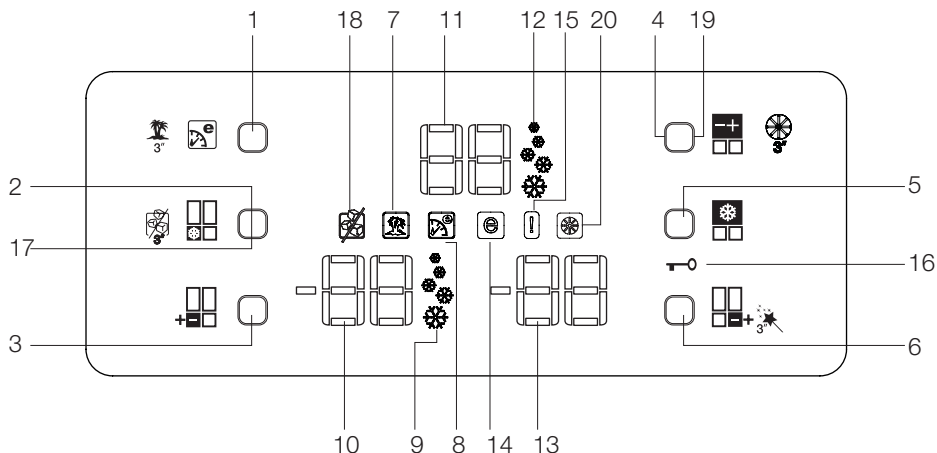

- | | |
|--|--|
| 1. Eco-Extra / Vacation Button | 11. Fridge Compartment Temperature Indicator |
| 2. Fast Freeze Button | 12. Quick Cool Function Indicator |
| 3. Freezer Compartment Temperature Setting Button | 13. Multi Zone Compartment Temperature Indicator |
| 4. Fridge Compartment Temperature Setting Button | 14. Economy Mode Indicator |
| 5. Quick Cool Button | 15. Error Status Indicator |
| 6. Multi Zone Compartment Temperature Setting Button | 16. Key Lock Indicator |
| 7. Vacation Function Indicator | 17. Ice Cancel Button |
| 8. Eco-Extra Function Indicator | 18. Ice Off indicator |
| 9. Fast Freeze Function Indicator | 19. Cancel Filter Change Warning Button |
| 10. Freezer Compartment Temperature Indicator | 20. Filter Change Warning Indicator |

i Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

1. Eco Extra/Vacation Button

Press this button briefly to activate the Eco Extra function. Press and hold this button for 3 sec. to activate the Vacation function. Press this button again to deactivate the selected function.

2. Fast Freeze Button

Press this button briefly to activate the Fast Freeze function. Press this button again to deactivate the selected function.

3. Freezer Compartment Temperature Setting Button

Press this button to set the temperature of the freezer compartment to -18, -20, -22, -24, -18... respectively. Press this button to set the desired temperature for the Freezer Compartment.

4. Fridge Compartment Temperature Setting Button

Press this button to set the temperature of the fridge compartment to 8, 6, 4, 2, 8... respectively. Press this button to set the desired temperature for the Fridge Compartment.

5. Quick Cool Button

Press this button briefly to activate the Quick Cool function. Press this button again to deactivate the selected function.

6. Multi Zone Compartment Temperature Setting Button

You can set the Multi Zone Compartment either as a Freezer or a Cooler. Press and hold this button for a long time (3 sec) to set the Multi Zone Compartment as a Freezer or a Cooler. This compartment is set as a Freezer Compartment at factory.

If the Multi Zone Compartment is set as a Freezer, then the temperature of the Multi Zone Compartment will change as -18, -20, -22, -24, -18... respectively each time you press this button. If the Multi Zone Compartment is set as a Fridge, then the temperature of the Multi Zone Compartment will change as 10, 8, 6, 4, 2, 0, -6, ... respectively each time you press this button.

7. Vacation Function Indicator

Indicates that the vacation function is active. If this function is active, "- -" appears on the indicator of the fridge compartment and no cooling is performed in the fridge compartment. Other compartments will be cooled in accordance with the temperature set for them.

Press the relevant button again to deactivate this function.

8. Eco Extra Function Indicator

It indicates that the Eco-Extra function is active. If this function is active, your refrigerator will automatically detect the least usage periods and energy-efficient cooling will be performed during those times. Economy indicator will be active while energy-efficient cooling is performed.

Press the relevant button again to deactivate this function.

9. Quick Freeze Function Indicator

It indicates that the Fast Freeze function is active. Use this function when you place fresh food into the freezer compartment or when you need ice. When this function is active, your refrigerator will run for a certain period of time.

Press the relevant button again to deactivate this function.

10. Freezer Compartment Temperature Indicator

It indicates the temperature set for Freezer Compartment.

11. Fridge Compartment Temperature Indicator

Indicates the temperature set for Fridge Compartment.

12. Quick Cool Function Indicator

Indicates that the Quick Cool function is active. Use this function when you place fresh food into the fridge compartment or when you need to cool your food quickly. When this function is active, your refrigerator will run for 2 hours without stopping.

Press the relevant button again to deactivate this function.

13. Multi Zone Compartment Temperature Indicator

It indicates the temperature set for Multi Zone compartment.

14. Economy Mode Indicator

Indicates that the refrigerator is running in energy-efficient mode. Freezer Compartment temperature
This indicator will be active if the function is set to -18 or the energy efficient cooling is being performed due to Eco-Extra function.

15. Error Status Indicator

If your refrigerator does not cool adequately or if there is a sensor failure, this indicator will be activated. When this indicator is active, Freezer Compartment Temperature indicator will display "E" and Fridge Compartment Temperature Indicator will display numbers such as "1,2,3...". These numbers on the indicator provides information about the error to the service personnel.

16. Key Lock Indicator

Use this function if you do not want your refrigerator temperature setting changed. Press Quick Cool Button and Flexi Zone Compartment Temperature Setting Button simultaneously for a long time (3 sec) to activate this feature.

Press the relevant buttons again to deactivate this function.

17. Ice Cancel Button

To stop ice formation, ice cancel button is pressed for 3 seconds. When ice cancel is selected, no water will be sent to the ice box. Despite this, some ice may be leftover in the ice box which may be taken from there. To restart ice formation, ice cancel button has to be pressed for 3 seconds.

18. Ice Cancel Indicator

If you do not want to get ice from the refrigerator, you need to use this function. You may use this function by pressing the ice cancel button for 3 seconds.

19. Cancel Filter Change Warning Button

Filter of your refrigerator must be replaced every 6 months. Your refrigerator calculates this time automatically and the filter change warning indicator illuminates when the filter usage time has elapsed. Press Cancel filter change warning button for 3 seconds to allow the refrigerator to calculate the new filter time automatically after changing the filter.

20. Cancel Filter Change Warning Indicator

When the filter usage time has elapsed, filter change warning indicator starts to illuminate.


Door Open Alarm:

In case of leaving any of the Fridge Compartment or Flexi Zone Compartment doors open minimum for 1 minute, audible Door Open Alarm will be activated and heard. Just press any button on the indicator or close the open door to silence the alarm.



Things to do to have the filter usage time calculated automatically

(For products connected to the mains water line and equipped with filter)

1- After plugging the refrigerator in, press A and B buttons together to activate the key lock.

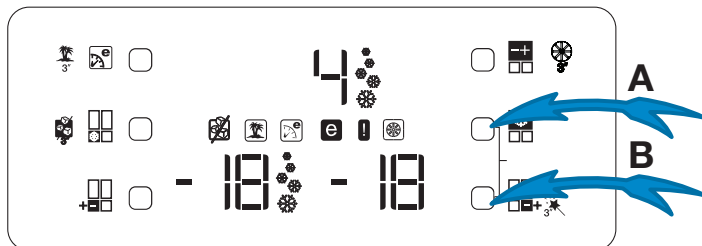

2- Then press Eco-Extra (1), Fridge Compartment Temperature Setting (4), Quick Cool (5) and Freezer Compartment Temperature Setting (3) buttons respectively.

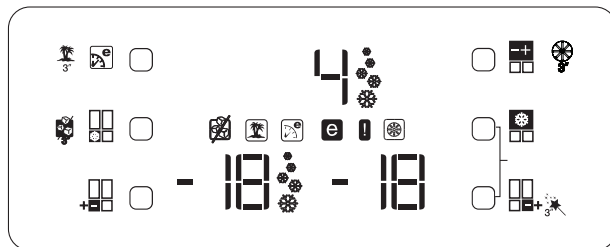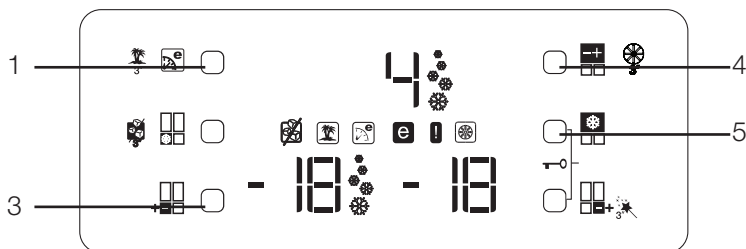

If button configuration is pressed in the correct order, key lock symbol will go off, buzzer will be activated shortly, and Filter change warning indicator illuminates. Press cancel filter change warning button (Item 19 in display descriptions) after changing the filter to have the filter usage time calculated automatically.

i If the filter usage time is being calculated automatically, filter change warning indicator will illuminate in a few seconds after the product is plugged in.

i **Automatic filter usage time calculation is not active ex factory. It must be activated in products equipped with a filter.**

i **Repeat the same procedure in products whose automatic filter usage time calculation is activated in order to deactivate the filter usage time calculation.**

Egg tray

You can install the egg holder to the desired door or body shelf.


Never store the egg holder in the freezer compartment

Sliding Body Shelves

Sliding body shelves can be pulled by slightly lifting up from the front and moved back and forth. They come to a stop point when pulled towards front to allow you reach the foods placed at the back of the shelf; when it is pulled after slightly lifted upwards at the second stop point, the body shelf will be released.


The shelf should be hold tightly from the bottom as well in order to prevent it from tipping over. The body shelf is placed on the rails at the sides of the refrigerator body by bringing it to one lower or one upper level.

The body shelf should be pushed backwards to seat it completely.

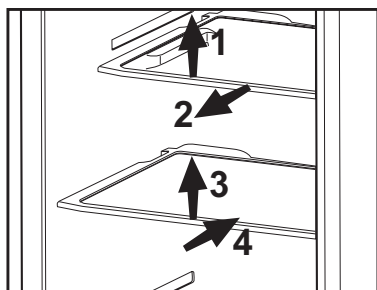


Crisper

Crisper of your refrigerator is designed specially to keep your vegetables freshly without losing their humidity. For this purpose, cool air circulation occurs around the crisper in general. Remove the door shelves that align with the crisper before removing the crispers. You can remove the crispers as illustrated in the figure.

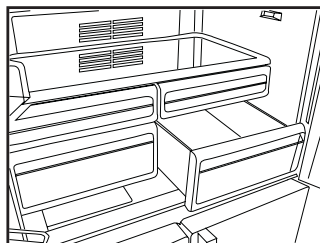

Chiller compartment

Chiller compartments enable the foods to be frozen become ready for freezing. You can also use these compartments to store your food at a temperature a few degrees below the fridge compartment. You can increase the inner volume of your refrigerator by removing any of the chiller compartments. To do this, pull the compartment towards yourself; the compartment will lean against the stopper and stop. This compartment will be released when you lift it about 1 cm and pull it towards yourself.

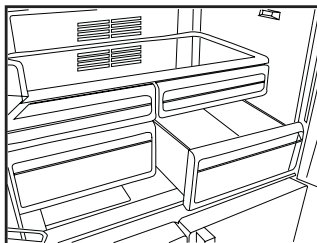

Movable Middle Section

Movable middle section is intended to prevent the cold air inside your refrigerator from escaping outside.

1- Sealing is provided when the gaskets on the door presses on the surface of the movable middle section while the fridge compartment doors are closed.

2- Another reason that your refrigerator is equipped with a movable middle section is that it increases the net volume of the fridge compartment. Standard middle sections occupy some non-usable volume in the refrigerator.


3- Movable middle section is closed when the left door of the fridge compartment is closed.

4- It must not be opened manually. It moves under the guidance of the plastic part on the body while the door is closed.

Multi Zone Storage Compartment

The Multi Zone Storage Compartment of your refrigerator may be used in any desired mode by adjusting it to fridge (2/4/6/8 °C) or freezer (-18/-20/-22/-24) temperatures. You can keep the compartment in the desired temperature with the Multi Zone Storage Compartment Temperature Setting Button. The temperature of the Multi Zone Storage Compartment may be set to 0 and 10 degrees in addition to the fridge compartment temperatures and to -6 degrees in addition to the freezer compartment temperatures. 0 degree is used to store the deli products longer, and -6 degrees is used to keep the meats up to 2 weeks in an easily cuttable condition.

❗ The feature of switching to a Fridge or Freezer compartment is provided by a cooling element located in the closed section (Compressor Compartment) behind the refrigerator. During operation of this element, sounds similar to the sound of seconds heard from an analog clock may be heard. This is normal and is not fault cause.

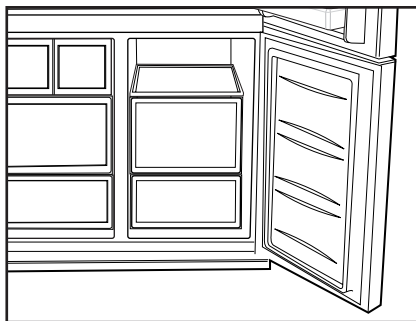


Blue light

Foodstuff stored in the crispers that are enlightened with a blue light continue their photosynthesis by means of the wavelength effect of blue light and thus, preserve their freshness and increase their vitamin content.




Sliding Body Shelves With Rear Hangers

Sliding body shelves with rear hangers can be moved back and forth. Height of these shelves can be adjusted by removing and then installing them to upper or lower positions. Raise the shelf up slightly and pull towards yourself to remove it.

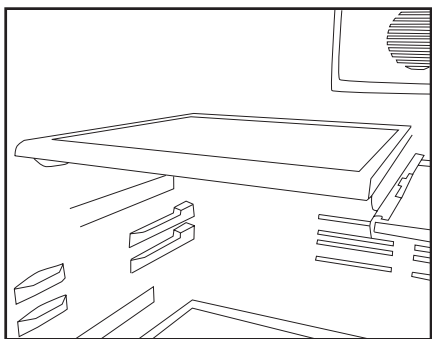

Butter & Cheese Section

You can store food such as butter, cheese, and margarine in this section which has a lid.

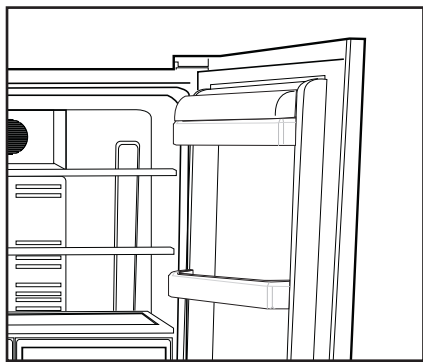


Using the water spring

Warnings


It is normal for the first few glasses of water taken from the dispenser to be warm.

In cases where the water dispenser has not been used frequently, sufficient amount of water must be drained from the dispenser to get fresh water.

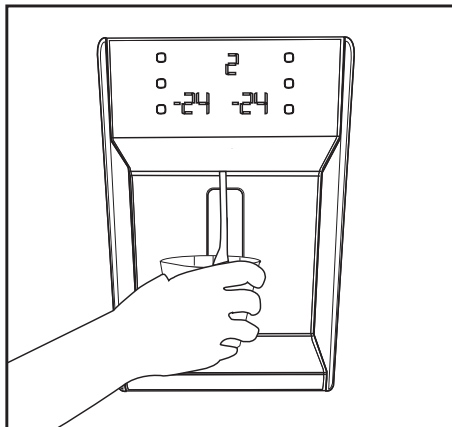

Spillage Tray

Water drops that drip during use, accumulates in the spillage tray. You can remove spillage tray by pulling it to yourself or pressing on its edge (depending on the model). You can remove the water with a sponge or a soft cloth.

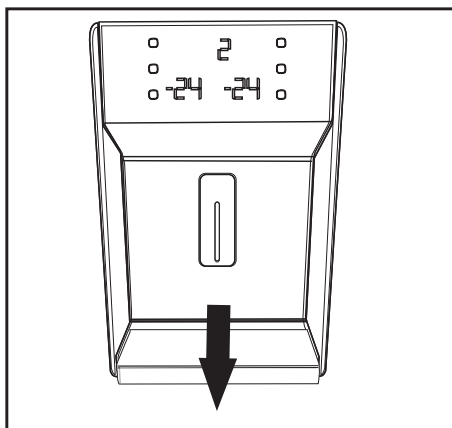

Minibar





Minibar door provides you extra comfort when using your refrigerator. The door shelf in the refrigerator can be accessed without opening the refrigerator door; thanks to this feature, you can easily pick from the refrigerator the foods and drinks which you frequently consume. Since you do not have to open the refrigerator door frequently, you will have decreased the power consumption of refrigerator.

To open the minibar door, press by your hand on the minibar and pull back to open.

When the door of minibar is open, you may use the inner face of the door as a table on which you may put your bottles and glasses for a short time as shown in the figure.

⚠ Caution: Never do things that may put pressure on the door such as sitting on, climbing up or hanging to the table and do not place heavy objects on it. This may cause damage on the refrigerator or personal injuries.

⚠ Caution: Never perform cutting on the Minibar door and be careful that the door is not damaged by pointed objects.

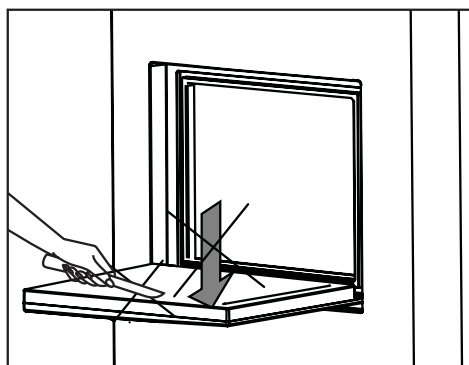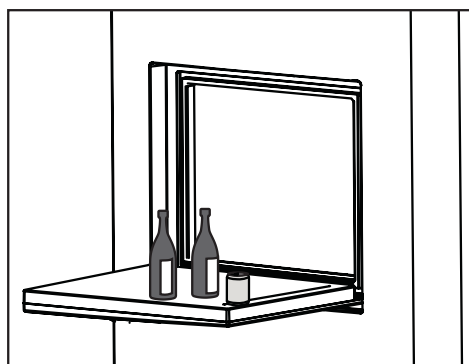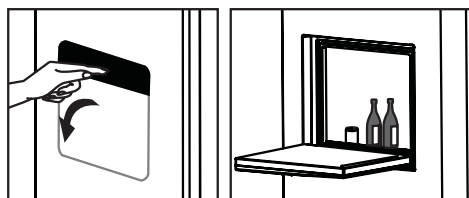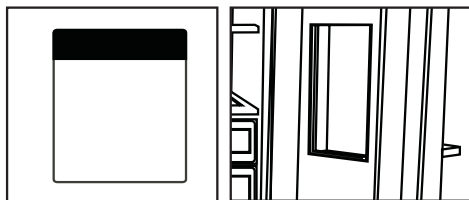

Dual cooling system:

Your refrigerator is equipped with two separate cooling systems to cool the fresh food compartment and freezer compartment. Thus, air in the fresh food compartment and freezer compartment do not get mixed. Thanks to these two separate cooling systems, cooling speed is much higher than other refrigerators. Odours in the compartments do not get mixed. Also additional power saving is provided since the defrosting is performed individually.

Freezer Compartment Adjustment	Fridge Compartment Adjustment	Explanations
-18°C	4°C	This is the normal recommended setting.
or -24°C -22,-20	4°C	These settings are recommended when the ambient temperature exceeds 30°C.
Quick Freeze	4°C	Use when you wish to freeze your food in a short time. Your refrigerator will return to its previous mode when the process is over.
-18°C or colder	2°C	If you think that your fridge compartment is not cold enough because of the hot conditions or frequent opening and closing of the door
-18°C or colder	Quick Fridge	You can use it when your fridge compartment is overloaded or if you wish to cool down your food rapidly. It is recommended that you activate quick .fridge function 4-8 hours before placing the food

Freezing fresh food

- It must be preferred to wrap or cover the food before placing them in the refrigerator.
- Hot food must cool down to the room temperature before putting them in the refrigerator.
- The foodstuff that you want to freeze must be fresh and in good quality.
- Foodstuff must be divided into portions according to the family's daily or meal based consumption needs.
- The foodstuff must be packaged in an airtight manner to prevent them from drying even if they are going to be kept for a short time.
- Materials to be used for packaging must be tear-proof and resistant to cold, humidity, odor, oils and acids and they must also be airtight. Moreover, they must be well closed and they must be made from easy-to-use materials that are suitable for deep freeze usage.
- Frozen food must be used immediately after they are thawed and they should never be re-frozen.
- Please observe the following instructions to obtain the best results.
 1. Do not freeze too large quantities of food at one time. The quality of the food is best preserved when it is frozen right through to the core as quickly as possible.

2. Placing warm food into the freezer compartment causes the cooling system to operate continuously until the food is frozen solid.
3. Take special care not to mix already frozen food and fresh food.

Recommendations for preservation of frozen food

- Prepacked commercially frozen food should be stored in accordance with the frozen food manufacturer's instructions for a *** ** *** (4 star) frozen food storage compartment.
- To ensure that the high quality achieved by the frozen food manufacturer and the food retailer is maintained, the following should be remembered:
 1. Put packages in the freezer as quickly as possible after purchase.
 2. Ensure that contents are labeled and dated.
 3. Do not exceed "Use By", "Best Before" dates on the packaging.

Defrosting

The freezer compartment defrosts automatically.

Placing the food

Freezer compartment shelves	Various frozen food such as meat, fish, ice cream, vegetables .and etc
Egg tray	Egg
Fridge compartment shelves	Food in pans, covered plates and closed containers
Fridge compartment door shelves	Small and packaged food or drinks (such as milk, fruit juice and (beer
Crisper	Vegetables and fruits

Freshzone compartment	Delicatessen products (cheese, butter, salami (.and etc
-----------------------	---

Deep-freeze information

Food must be frozen as rapidly as possible when they are put in a refrigerator in order to keep them in good quality.

It is possible to keep the food for a long time only at -18°C or lower temperatures.

You can keep the freshness of food for many months (at -18°C or lower temperatures in the deep freeze).

WARNING! ⚠

- Foodstuff must be divided into portions according to the family's daily or meal based consumption needs.
- Foodstuff must be packaged in an airtight manner to prevent them from drying even if they are going to be kept for a short time.

Materials necessary for packaging:

- Cold resistant adhesive tape
- Self adhesive label
- Rubber rings
- Pen

Materials to be used for packaging the foodstuff must be tear-proof and resistant to cold, humidity, odor, oils and acids.

Foodstuff to be frozen should not be allowed to come in contact with the previously frozen items to prevent their partial thawing.

Frozen food must be used immediately after they are thawed and they should never be re-frozen.

6 Maintenance and cleaning

- ⚠ Never use gasoline, benzene or similar substances for cleaning purposes.
- ⚠ We recommend that you unplug the appliance before cleaning.
- ⚠ Never use any sharp abrasive instrument, soap, household cleaner, detergent and wax polish for cleaning.
- ℹ Use lukewarm water to clean the cabinet of your refrigerator and wipe it dry.
- ℹ Use a damp cloth wrung out in a solution of one teaspoon of bicarbonate of soda to one pint of water to clean the interior and wipe it dry.
- ⚠ Make sure that no water enters the lamp housing and other electrical items.
- ⚠ If your refrigerator is not going to be used for a long period of time, unplug the power cable, remove all food, clean it and leave the door ajar.
- ℹ Check door seals regularly to ensure they are clean and free from food particles.
- ⚠ To remove door racks, remove all the contents and then simply push the door rack upwards from the base.

- ⚠ Never use cleaning agents or water that contain chlorine to clean the outer surfaces and chromium coated parts of the product. Chlorine causes corrosion on such metal surfaces.
- ⚠ Do not use sharp, abrasive tools, soap, household cleaning agents, detergents, kerosene, fuel oil, varnish etc. to prevent removal and deformation of the prints on the plastic part. Use lukewarm water and a soft cloth for cleaning and then wipe it dry.

Protection of plastic surfaces

- ℹ Do not put the liquid oils or oil-cooked meals in your refrigerator in unsealed containers as they damage the plastic surfaces of your refrigerator. In case of spilling or smearing oil on the plastic surfaces, clean and rinse the relevant part of the surface at once with warm water.

Check this list before contacting the service. Doing so will save you time and money. This list includes frequent complaints that are not related to faulty workmanship or materials. Certain features mentioned herein may not apply to your product.

The refrigerator is not working.

- The power plug is not fully settled. >>> Plug it in to settle completely into the socket.
- The fuse connected to the socket powering the product or the main fuse is blown. >>> Check the fuses.
- The product is not plugged in. >>> Make sure the power cord is plugged in.
- The temperature setting is incorrect. >>> Select the appropriate temperature setting.
- The power is out. >>> The product will continue to operate normally once the power is restored.

Condensation on the side wall of the cooler compartment (MULTI ZONE, COOL, CONTROL and FLEXI ZONE).

- The door is opened too frequently >>> Take care not to open the product's door too frequently.
- The environment is too humid. >>> Do not install the product in humid environments.
- Foods containing liquids are kept in unsealed holders. >>> Keep the foods containing liquids in sealed holders.
- The product's door is left open. >>> Do not keep the product's door open for long periods.
- The thermostat is set to too low temperature. >>> Set the thermostat to appropriate temperature.

Compressor is not working.

- In case of sudden power failure or pulling the power plug off and putting back on, the gas pressure in the product's cooling system is not balanced, which triggers the compressor thermic safeguard. The product will restart after approximately 6 minutes. If the product does not restart after this period, contact the service.
- Defrosting is active. >>> This is normal for a fully-automatic defrosting product. The defrosting is carried out periodically.

The refrigerator's operating noise is increasing while in use.

- The product's operating performance may vary depending on the ambient temperature variations. This is normal and not a malfunction.

The refrigerator runs too often or for too long.

- The new product may be larger than the previous one. Larger products will run for longer periods.
- The room temperature may be high. >>> The product will normally run for long periods in higher room temperature.
- The product may have been recently plugged in or a new food item is placed inside. >>> The product will take longer to reach the set temperature when recently plugged in or a new food item is placed inside. This is normal.
- Large quantities of hot food may have been recently placed into the product. >>> Do not place hot food into the product.
- The doors were opened frequently or kept open for long periods. >>> The warm air moving inside will cause the product to run longer. Do not open the

doors too frequently.

- The freezer or cooler door may be ajar. >>> Check that the doors are fully closed.
- The product may be set to temperature too low. >>> Set the temperature to a higher degree and wait for the product to reach the adjusted temperature.
- The cooler or freezer door washer may be dirty, worn out, broken or not properly settled. >>> Clean or replace the washer. Damaged / torn door washer will cause the product to run for longer periods to preserve the current temperature.

The freezer temperature is very low, but the cooler temperature is adequate.

- The freezer compartment temperature is set to a very low degree. >>> Set the freezer compartment temperature to a higher degree and check again.

The cooler temperature is very low, but the freezer temperature is adequate.

- The cooler compartment temperature is set to a very low degree. >>> Set the freezer compartment temperature to a higher degree and check again.

The food items kept in cooler compartment drawers are frozen.

- The cooler compartment temperature is set to a very low degree. >>> Set the freezer compartment temperature to a higher degree and check again.

The temperature in the cooler or the freezer is too high.

- The cooler compartment temperature is set to a very high degree. >>> Temperature setting of the cooler compartment has an effect on the temperature in the freezer compartment. Wait until the temperature of relevant parts reach the sufficient level by

changing the temperature of cooler or freezer compartments.

- The doors were opened frequently or kept open for long periods. >>> Do not open the doors too frequently.
- The door may be ajar. >>> Fully close the door.
- The product may have been recently plugged in or a new food item is placed inside. >>> This is normal. The product will take longer to reach the set temperature when recently plugged in or a new food item is placed inside.
- Large quantities of hot food may have been recently placed into the product. >>> Do not place hot food into the product.

Shaking or noise.

- The ground is not level or durable. >>> If the product is shaking when moved slowly, adjust the stands to balance the product. Also make sure the ground is sufficiently durable to bear the product.
- Any items placed on the product may cause noise. >>> Remove any items placed on the product.

The product is making noise of liquid flowing, spraying etc.

- The product's operating principles involve liquid and gas flows. >>> This is normal and not a malfunction.

There is sound of wind blowing coming from the product.

- The product uses a fan for the cooling process. This is normal and not a malfunction.

There is condensation on the product's internal walls.

- Hot or humid weather will increase icing and condensation. This is normal and not a malfunction.
- The doors were opened frequently or kept open for long periods. >>> Do not open the doors too frequently; if open, close the door.
- The door may be ajar. >>> Fully close the door.

There is condensation on the product's exterior or between the doors.

- The ambient weather may be humid, this is quite normal in humid weather. >>> The condensation will dissipate when the humidity is reduced.

The interior smells bad.

- The product is not cleaned regularly. >>> Clean the interior regularly using sponge, warm water and carbonated water.
- Certain holders and packaging materials may cause odour. >>> Use holders and packaging materials without free of odour.
- The foods were placed in unsealed holders. >>> Keep the foods in sealed holders. Micro-organisms may spread out of unsealed food items and cause malodour. Remove any expired or spoilt foods from the product.

The door is not closing.

- Food packages may be blocking the door. >>> Relocate any items blocking the doors.
- The product is not standing in full upright position on the ground. >>> Adjust the stands to balance the product.
- The ground is not level or durable. >>> Make sure the ground is level and sufficiently durable to bear the product.

The vegetable bin is jammed.

- The food items may be in contact with the upper section of the drawer. >>>

Reorganize the food items in the drawer.

If The Surface Of The Product Is Hot.

- High temperatures may be observed between the two doors, on the side panels and at the rear grill while the product is operating. This is normal and does not require service maintenance! Be careful when touching these areas.

**WARNING:**

If the problem persists after following the instructions in this section, contact your vendor or an Authorised Service. Do not try to repair the product.

• هوا ممکن است رطوبت داشته باشد. این کاملاً در هوای مرطوب نرمال است. وقتی که رطوبت کم است، تراکم محو میشود.
بوی بد در داخل یخچال
• داخل یخچال باید تمیز گردد. داخل یخچال را با یک اسفنج و آب گرم یا آب کرینات تمیز کنید. • برخی از مواد ظروف یا بسته بندی ممکن است ایجاد بو نمایند. از ظروف مختلف با مارکهای مختلف بسته بندی استفاده کنید.
درب یا درب ها بسته نیستند
• بسته های مواد غذایی ممکن است از بسته شدن درب جلوگیری کنند. بسته هایی را که مانع بستن درب میشوند جابجا کنید. • یخچال ممکن است در وضعیت کاملاً عمودی روی زمین نباشد و ممکن است بهنگام حرکت آرام تکان بخورد. پیچ های تنظیم را بالانس کنید. • کف هموار و محکم نمی باشد. مطمئن شوید که کف هموار و قادر به تحمل وزن یخچال باشد.
محل نگهداری سبزیجات گیر کرده است.
• مواد غذایی ممکن است به سقف کشوها تماس داشته باشد. مواد غذایی را در کشو مجدداً منظم کنید.
چنانچه سطح محصول داغ باشد
• هنگام کار کردن محصول ممکن است دمای فضای بین دو در، در پانلهای جانبی و گرید عقبی بالا رود. این امر عادی است و سرویس و نگهداری دستگاه لازم نیست! هنگام دست زدن به این مناطق احتیاط کنید.

• دمای یخچال در یک دمای بسیار بالا تنظیم شده است. تنظیم یخچال روی فریزر اثر دارد. • دمای یخچال یا فریزر را تا رسیدن به سطح کافی دمای یخچال یا فریزر تغییر دهید. • درب ممکن است نیمه باز باشد. درب را کاملاً ببندید. • ممکن است حجم زیادی از مواد غذایی داغ در یخچال گذاشته شده باشد. منتظر بمانید تا یخچال یا فریزر به دمای دلخواه برسند. • دوشاخه یخچال ممکن است اخیراً به برق وصل شده باشد. پایین آوردن کامل دمای یخچال باعث اندازه یخچال زمان می برد.
صدایی شبیه صدای تیک تاک ساعت آنالوگ از یخچال به گوش می رسد.
• این صدا توسط شیر سلونونیدی یخچال ایجاد می شود. شیر سلونونیدی برای اطمینان عبور ماده خنک کننده از بخشی که باید درجه حرارت سرمایش یا انجماد آن تنظیم شود به کار می افتد و عملکردهای خنک کنندگی را انجام می دهد. این مسئله عادی است و عیب دستگاه محسوب نمی شود.
مقدار نویز وقتی که یخچال کار میکند افزایش می یابد.
• مشخصات عملکرد یخچال ممکن است منوط به دمای محیط تغییر کند. این نرمال است و نقص محسوب نمیگردد.
لرزش یا نویز
• کف هموار نیست یا ضعیف است. یخچال وقتی که به آهستگی حرکت میکند، تکان می خورد. مطمئن شوید که کف هموار، محکم و قادر به تحمل وزن یخچال باشد. • نویز ممکن است بخاطر موادی که در یخچال قرار داده شده است بوجود آید. این اقلام را باید از بالا یخچال برداشت.
صدای نویز مانند ریختن مایع یا اسپری است.
• جریان مایع و گاز بر اساس اصول کارکرد یخچال رخ می دهد. این نرمال است و نقص محسوب نمیگردد.
صدای نویز مانند صدای وزش باد است.
• فعال کننده هوا (فن) اجازه میدهد تا استفاده از آن سرمای موثر یخچال را بوجود آورد. این نرمال است و نقص محسوب نمیگردد.
تراکم در داخل دیواره های یخچال.
• هوای مرطوب و داغ یخ زدن و تراکم را افزایش میدهد. این نرمال است و نقص محسوب نمیگردد. • درب ها نیمه باز می باشند. مطمئن شوید که درها کاملاً بسته باشند. • درب ها ممکن است متناوباً باز مانده باشند یا برای یک مدت طولانی باز گذاشته شده باشند. تناوب باز کردن درب را کمتر کنید.
رطوبت در خارج یخچال یا بین درب ها رخ میدهد.

لطفا این لیست را قبل از فراخواندن سرویسکار بررسی کنید. ممکن است در زمان و هزینه صرفه جویی کند. این لیست شامل شکایات متداول است که ناشی از عملکرد یا استفاده ناقص از دستگاه می باشد. برخی از ویژگیهای شرح داده شده ممکن است در دستگاه شما وجود نداشته باشد.

• یخچال جدید شما ممکن است عریض تر از یخچال قبلی باشد. این کاملاً نرمال است. یخچال های بزرگ برای یک مدت طولانی تر کار میکنند. • درجه حرارت محیط اتاق ممکن است بالا باشد. این مسئله کاملاً عادی است. • دوشاخه برق یخچال ممکن است اخیراً وصل شده یا یخچال بتازگی بارگیری شده باشد. پایین آوردن دمای کامل یخچال ممکن است بمدت چندین ساعت بیشتر طول بکشد. • ممکن است حجم زیادی از مواد غذایی داغ در یخچال گذاشته شده باشد. مواد غذایی داغ موجب کارکرد یخچال تا رسیدن به دمای ایمن یخچال می شود. • درب ها ممکن است متناوباً باز شده باشند و یا برای مدت طولانی نیمه باز مانده باشند. هوای گرم که وارد یخچال شده است باعث میشود که یخچال برای مدت طولانی تری کار کند. تنلوب باز کردن درب را کمتر کنید. • درب محفظه یخچال یا فریزر ممکن است نیمه باز باقیمانده باشد. بررسی کنید که درها درست بسته شده باشند. • یخچال در یک دمای بسیار پایین تنظیم شده است. دمای یخچال را در یک درجه گرمتر تنظیم کنید و منتظر بمانید تا به آن درجه برسد. • آب بندی درب یخچال یا فریزر ممکن است کثیف ، فرسوده و یا شکسته شده و یا در جایش نشسته باشد. لاستیک آب بندی را تمیز یا تعویض نمایید. لاستیک صدمه دیده یا شکسته موجب میشود تا یخچال برای مدت طولانی تری کار کند تا بتواند درجه دما را حفظ کند.
دمای فریزر بهنگامیکه دمای یخچال کافی است بسیار پایین است. • دمای فریزر در یک دمای بسیار پایین تنظیم شده است. دمای فریزر را در یک درجه گرمتر تنظیم کنید و چک نمایید.
دمای یخچال بهنگامیکه دمای فریزر کافی است بسیار پایین است. • دمای یخچال در یک دمای بسیار پایین تنظیم شده است. دمای یخچال را در یک درجه گرمتر تنظیم کنید و چک نمایید.
مواد غذایی نگه داشته شده در محفظه گشوهای یخچال فریز می شوند. • دمای یخچال در یک دمای بسیار پایین تنظیم شده است. دمای یخچال را در یک درجه گرمتر تنظیم کنید و چک نمایید.
دما در یخچال یا فریزر بسیار بالا است.

یخچال کار نمی کند
• آیا دوشاخه برق یخچال بطور صحیح وصل شده است؟ دوشاخه را در پریز بزنید. • آیا فیوز پریزی که یخچال به آن وصل شده یا فیوز اصلی نسخته است؟ فیوز را باز بینی کنید.
تراکم در کناره های دیواره محفظه یخچال. (مالتی زون، کنترل سرمایش و فلکسی زون)
• شرایط بسیار سرد درجه حرارت محیط باز و بسته کردن متناوب درب یخچال. شرایط بسیار مرطوب محیط. نگهداری مواد غذایی محتوی مایع در ظروف درباز. نیمه باز گذاشتن درب. • ترموستات را به یک درجه سردتر تغییر دهید. • زمان باز ماندن درب را کاهش دهید یا کمتر از آن استفاده پی در پی کنید. • مواد غذایی را با روکش در ظروف درباز با جنس مناسب بپوشانید. • تراکم را با استفاده از یک پارچه خشک پاک کنید و چک نمایید که آیا استانداردگی میکنند.
کمپرسور کار نمی کند
• حفاظت حرارتی کمپرسور در خلال قطع شدن ناگهانی برق یا کشیدن و زدن دوشاخه به برق فروکش خواهد کرد چراکه فشار یخچال در سیستم سرمایشی یخچال هنوز بالانس نشده است. • یخچال شما تقریباً ۶ دقیقه بعد شروع بکار خواهد کرد. لطفاً اگر یخچال در انتهای این زمان کار نکرد سرویسکار را فراخوانید. • یخچال در جریان دیفر است است. این برای یک یخچال با دیفر است کردن اتوماتیک کامل نرمال است. جریان دیفر است بصورت دوره ای رخ میدهد. • دوشاخه برق یخچال در پریز نمی باشد. مطمئن شوید که دوشاخه برق محکم در پریز دیوار جا زده شده است. • آیا دمای تنظیمات بطور صحیح انجام گرفته است؟ برق وجود ندارد. برق کار خود را را فراخوانید.
یخچال متناوباً یا برای یک مدت طولانی کار میکند.

⚠ هرگز از بنزین یا مواد مشابه آن برای تمیز کردن استفاده نکنید.

⚠ توصیه می‌کنیم که دوشاخه دستگاه را قبل از تمیز کردن از پریز بیرون بکشید.

ⓘ هرگز برای تمیز کردن یخچال از ابزار تیز یا مواد خشن. تمیزکننده خانگی و واکس پولیش استفاده نکنید.

ⓘ از آب گرم برای تمیز کردن کابینت دستگاه استفاده کرده و بعد خشک کنید.

ⓘ و با آن با حلقه‌های فلزی یا فلزهای دیگر تمیز کردن را ادامه دهید. هرگز از سیم‌های فلزی یا فلزهای دیگر برای تمیز کردن استفاده نکنید. از آب گرم و پارچه ای نرم برای تمیز کردن خشک کردن استفاده کنید.

ⓘ از حلقه‌های فلزی یا فلزهای دیگر برای تمیز کردن استفاده نکنید. از آب گرم و پارچه ای نرم برای تمیز کردن خشک کردن استفاده کنید.

ⓘ با استفاده از یک پارچه که آغشته به محلولی که با مقدار یک قاشق چایخوری در یک پاینت آب تهیه شده است برای پاک کردن داخل یخچال استفاده کنید و بعد آن را خشک کنید.

⚠ مطمئن شوید که آب داخل محفظه لامپ و سایر اقلام الکتریکی نگردهد.

⚠ اگر از یخچال برای مدت طولانی استفاده نمی‌کنید، دوشاخه آن را از برق بکشید و کلیه مواد غذایی را از آن

خارج کرده و درب آن را نیمه باز رها کنید.

ⓘ واشتر آب بندی دور درب را مرتباً برای تمیز بودن و عاری بودن از بقایای غذا چک کنید.

ⓘ برای برداشتن سینی‌های درب، تمام محتویات را بردارید و سپس به آرامی سینی درب را از پایه به سمت بالا ببرید.

ⓘ هرگز از مواد تمیز کننده یا آبی که حاوی کلرین باشد برای تمیز کردن سطوح خارجی و بخش‌های روکش شده با کروم دستگاه استفاده نکنید. کلرین باعث خوردگی روی سطوح فلزی می‌شود.

ⓘ از ابزارهای تیز و ساینده یا صابون، مواد تمیز کننده خانگی، مواد شوینده، بنزین، واکس و دیگر مواد استفاده نکنید، در غیر اینصورت ممکن است بر چسب‌های روی قسمت‌های پلاستیکی کنده شود و تغییر شکل ایجاد شود. از آب گرم و پارچه ای نرم برای تمیز کردن و خشک کردن استفاده کنید.

حفاظت سطوح پلاستیکی

ⓘ روغن‌های مایع یا غذاهای روغن دار پخته شده را در

یخچال در ظروف غیر آب بندی شده نگذارید چرا که



آنها به سطوح پلاستیکی یخچال صدمه می‌زنند. در

صورت ترشح یا آلودگی روغن روی سطوح پلاستیکی، آن


قسمت را فوری با یک تکه پارچه آغشته به آب گرم پاک کنید.

مینی بار


در مینی باز به شما راحتی بیشتر در هنگام استفاده از یخچال را ارائه می کند. به این در می توان بدون باز کردن در یخچال دسترسی پیدا کرد؛ بخاطر این ویژگی می توانید به سادگی مواد غذایی و نوشیدنی که به طور مرتب مصرف می کنید را از یخچال بردارید. چون نیازی به باز کردن مکرر در یخچال وجود ندارد، مصرف برق یخچال پایین خواهد آمد.

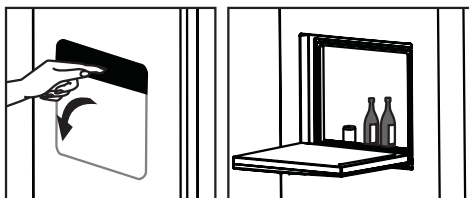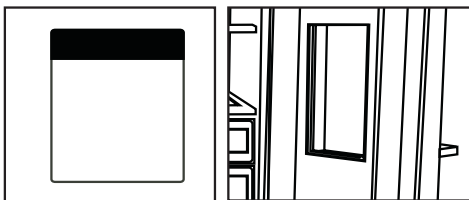

برای باز کردن در مینی بار، روی در مینی بار فشار وارد کنید و آن را برای باز کردن به عقب بکشید.

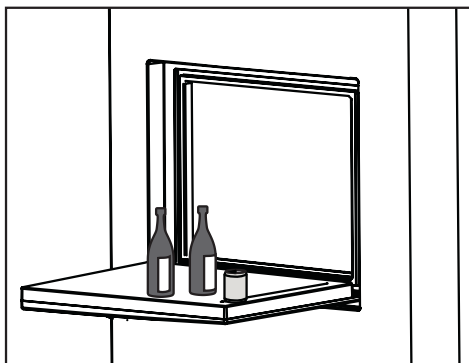

هنگامی که در مینی بار باز شود، می توانید از سطح داخلی در به عنوان میزی استفاده کرده و بطریها و لیوانها را برای مدت کوتاه، به صورتی که در تصویر نمایش داده شده است، روی آن قرار دهید.

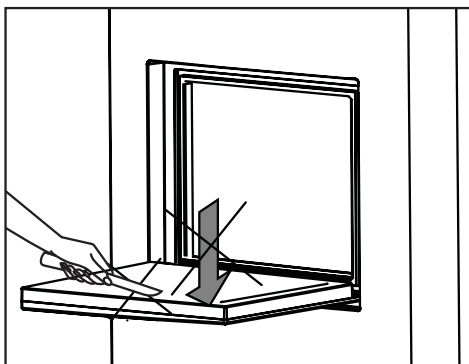


⚠ احتیاط: هرگز کاری نکنید که روی در فشار وارد شود، مانند نشستن روی در، بالا رفتن یا آویزان شدن از در و اشیاء سنگین را هم روی آن قرار ندهید. این کار ممکن است باعث آسیب رسیدن به یخچال و یا ایجاد جراحات فردی شود.

⚠ احتیاط: هرگز چیزی را روی در مینی بار برش ندهید و دقت کنید که اشیاء نوک تیز به در آسیب نرسانند.


طبقات کشویی بدنه با قلابهای پشت

طبقات کشویی بدنه با قلابهای پشت را می توان به جلو و عقب حرکت داد. ارتفاع این طبقات را می توان با برداشتن و سپس نصب کردن آنان در وضعیت بالا یا پایین، تنظیم نمود. طبقه را کمی به بالا بلند کنید و آن را به طرف خود بکشید تا جدا شود.

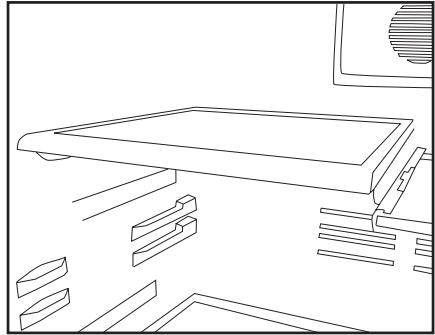

بخش کره و پنیر


می توانید موادی مانند کره، پنیر و مارگارین را در بخش که دارای در می باشد، نگهداری کنید.

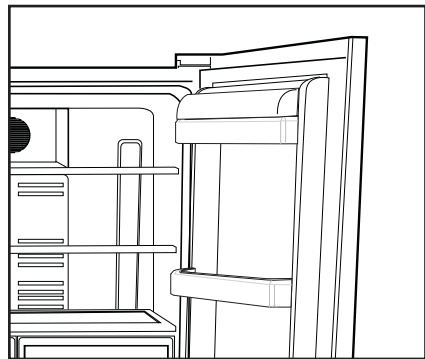

استفاده از توزیع کننده آب اخطارها


اگر چند لیوان اول آب دستگاه توزیع کننده گرم باشد، این عمل عادی است.

در مواردی که توزیع کننده آب بطور مکرر استفاده نشده باشد، آب به مقدار کافی باید از توزیع کننده تخلیه شود تا آب تازه از دستگاه دریافت کرد.

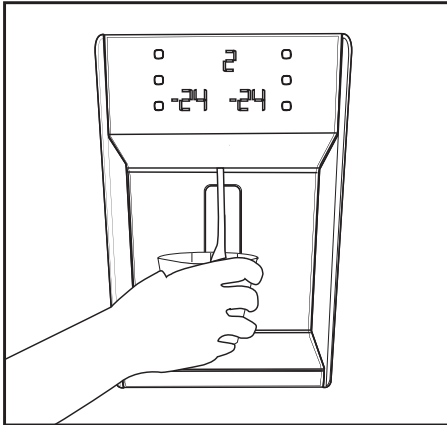


سینی ریزش

قطرات آب که در حین استفاده می ریزند در سینی ریزش جمع خواهند شد. می توانید سینی چکه را با کشیدن به طرف خود یا فشار دادن بر روی لبه جدا کنید (بر اساس مدل). می توانید آب جمع شده را با یک ابر یا پارچه نرم جمع آوری کنید.

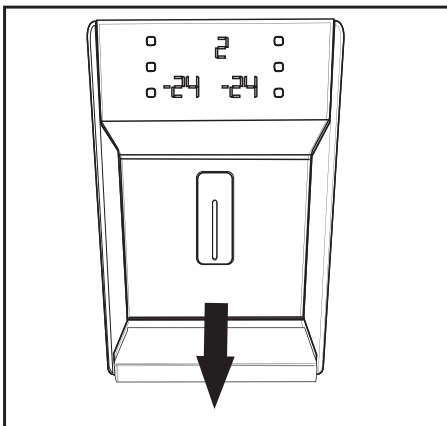

بخش میانی متحرک

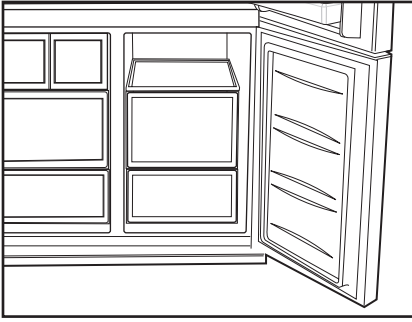

بخش متحرک وسط برای جلوگیری از خروج هوای سرد داخل یخچال به خارج تعبیه شده است.

1- هنگامی که واشر روی در روی سطح بخش متحرک میانی فشار وارد می کند و در حالی که درهای بخش یخچال بسته می باشند، آب بندی ایجاد خواهد شد.

2- دلیلی دیگری که از بخش متحرک وسط در یخچال استفاده شده است این است که این بخش حجم خالص بخش یخچال را افزایش می دهد. بخشهای وسط استاندارد برخی از حجم یخچال را اشغال می کنند.

3- بخش متحرک میانی هنگامی که در سمت چپ بخش یخچال بسته باشد، بسته خواهد شد.

4- نباید به صورت دستی باز شود. این بخش با استفاده از قطعه پلاستیکی روی بدنه هنگامی که در بسته شود، حرکت خواهد کرد.


فقسه های ذخیره کردن محفظه چند گانه

بخش ذخیره مالتی زون یخچال شما را می توان در حالت دلخواه با تنظیم در درجه حرارت های یخچال (2/4/6/8 درجه سانتی گراد) یا فریزر (18/-/20/-/22/-/24-) مورد استفاده قرار داد. می توانید دمای محفظه را با استفاده از ”دکمه تنظیم درجه حرارت محفظه مالتی زون“ روی درجه حرارت دلخواه تنظیم کنید. درجه حرارت محفظه نگهداری مالتی زون را می توان بین 0 تا 10 درجه علاوه بر درجه حرارت های یخچال و تا 6- درجه علاوه بر درجه حرارت های محفظه فریزر نگاه داشت. 0 درجه برای نگهداری طولانی تر محصولات غذایی و 6- درجه برای نگهداری گوشت تا 2 هفته در وضعیت قابل برش مورد استفاده قرار می گیرد.

④ ویژگی تغییر وضعیت به بخش فریزر یا بخش یخچال توسط یک قطعه خنک کننده که در بخش پشت دستگاه (بخش کمپرسور) قرار گرفته است ارائه می شود. در حین کار، صوتی شبیه صدای تیک تیک ساعت ممکن است به گوش رسد. این مسئله عادی است و عیب دستگاه محسوب نمی شود.

روشنایی آبی

مواد غذایی نگهداری شده در محل نگهداری سبزیجات با روشنایی نور آبی به عمل فتوسنتز با طول موج موثر نور آبی ادامه می یابد و بنابراین محتویات درونی این محل تازه و ویتامین های مربوطه افزایش می یابند.

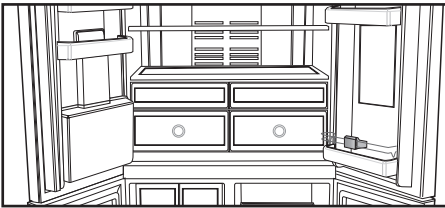


سینی تخم مرغ

شما می‌توانید نگهدارنده تخم مرغ را به درب مورد نظر یا بدنه طبقه نصب کنید. هرگز نگهدارنده تخم مرغ را در محفظه فریزر نگاه ندارید.


طبقات کشویی داخل یخچال

طبقات کشویی داخل یخچال را می‌توان با اندکی بلند کردن از جلو و حرکت دادن به جلو و عقب بیرون کشید. این طبقات هنگامی که به جلو کشیده شوند به یک نقطه توقف می‌رسند و به شما اجازه می‌دهند تا به مواد غذایی قرار داده شده در پشت طبقه دسترسی داشته باشید؛ هنگامی که کمی بلند شود و به جلو کشیده شود و به نقطه توقف دوم برسد، طبقه آزاد می‌شود. طبقه را باید از ته محکم نگاه داشت تا از برگشتن آن جلوگیری بعمل آید. بدنه طبقه روی ریلهایی در کناره های بدنه یخچال قرار گرفته است و با پایین آوردن یا بالا بردن به سطوح بالاتر جابجا می‌شود. بدنه طبقه باید به طرف عقب فشار داده شود تا بطور کامل در جای خود قرار گیرد.

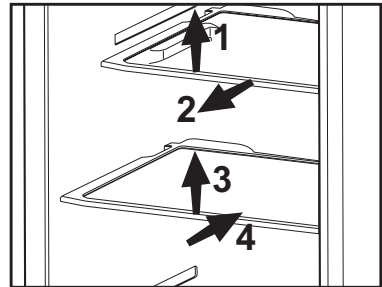


محل نگهداری سبزیجات

بخش سبزیجات یخچال شما بطور ویژه برای تازه نگاه داشتن سبزیجات شما بدون از دست دادن رطوبتشان طراحی شده است. برای این منظور، گردش هوای سرد در اطراف محفظه نگهداری سبزیجات انجام داده می‌شود. طبقات در که با بخش نگهداری سبزیجات در یک امتداد قرار گرفته اند را قبل از جدا کردن بخش نگهداری سبزیجات بردارید. می‌توانید بخش نگهداری سبزیجات را به صورت که در شکل نمایش داده شده است جدا کنید.

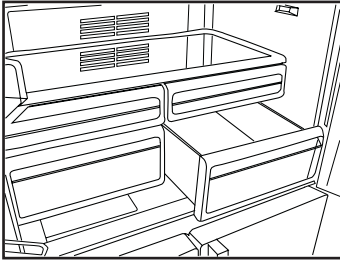

محفظه سردکن


محفظه سردکن می‌تواند غذایی که باید منجمد شود را برای انجماد آماده سازد. همچنین می‌توانید این قسمتها را برای نگهداری مواد غذایی در درجه حرارتی کمتر از درجه حرارت یخچال، استفاده کنید. می‌توانید حجم داخل یخچال را با برداشتن بخش خنک کننده دلخواه افزایش دهید. برای انجام این کار، بخش مورد نظر را به طرف خود بکشید، محفظه روی متوقف کننده خم می‌شود و متوقف می‌گردد. این بخش هنگامی که آن را حدود 1 سانتی متر بلند کنید آزاد خواهد شد و سپس آن را به طرف خود بکشید.

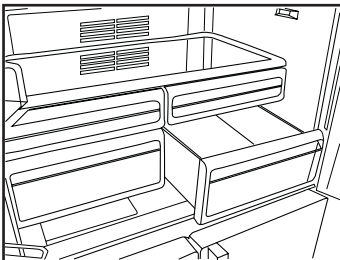



کارهایی که باید انجام داد تا زمان استفاده فیلتر به صورت اتوماتیک محاسبه شود

(برای محصولاتی که لوله آب وصل شده اند و به فیلتر مجهز می باشند)

1- بعد از وصل کردن دوشاخه یخچال، دکمه های A و B را همراه با یکدیگر فشار دهید تا قفل کلید فعال شود.

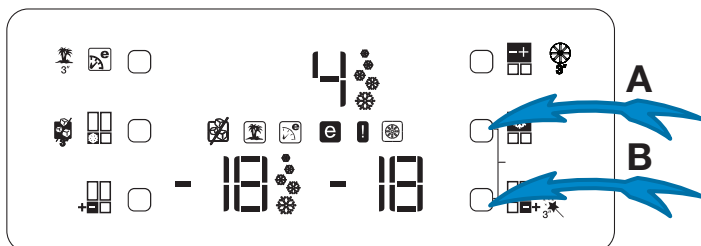

2- سپس به ترتیب دکمه های اکوسترا (1)، تنظیم درجه حرارت بخش یخچال (4)، خنک کردن سریع (5) و تنظیم درجه حرارت بخش فریزر را فشار دهید.

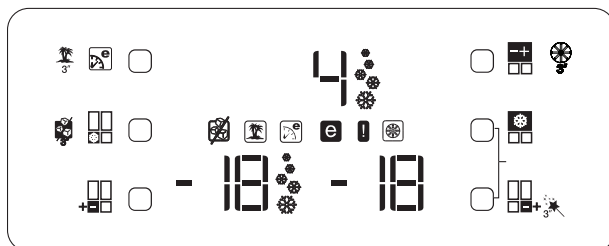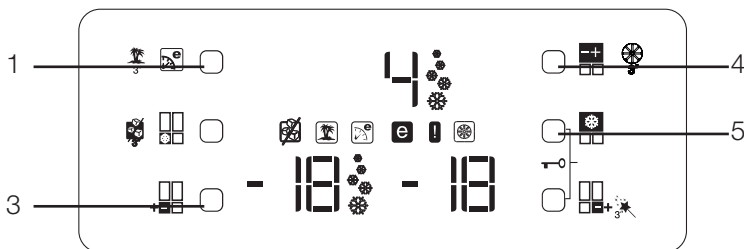

اگر دکمه ها به ترتیب خاص فشار داده شده باشند، علامت کلید قفل خاموش خواهد شد، بوق برای مدت کوتاهی فعال می شود و نشانگر هشدار تعویض فیلتر روشن می شود. دکمه لغو هشدار تغییر فیلتر را (مورد 19 در توضیحات صفحه نمایش) بعد از اینکه زمان استفاده از فیلتر به صورت اتوماتیک تنظیم شد، فشار دهید.

① اگر زمان استفاده از فیلتر به صورت اتوماتیک محاسبه شده باشد، نشانگر هشدار تغییر فیلتر بعد از اینکه دستگاه به برق وصل شد برای چند ثانیه روشن خواهد شد.

① محاسبه اتوماتیک زمان استفاده از فیلتر در کارخانه فعال نشده است. آن را باید در محصولات مجهز به فیلتر فعال نمود.

① همین روش را در مورد محصولاتی که محاسبه اتوماتیک زمان استفاده از فیلتر فعال شده است انجام دهید تا زمان استفاده از فیلتر را محاسبه کنید.

17. دکمه لغو یخ

جهت توقف از ساخته شده یخ، دکمه لغو یخ باید برای 3 ثانیه فشار داده شود. هنگامی که لغو یخ انتخاب شده باشد، آبی به جعبه یخ فرستاده خواهد شد. علی رغم این مسئله، ممکن است قدری یخ در جعبه یخ باقی بماند که می توانید آن را بعداً از آنجا بردارید. جهت شروع مجدد ساخته شدن یخ، دکمه لغو یخ باید برای 3 ثانیه فشار داده شود.

18. نشانگر لغو یخ

اگر نخواهید یخچال یخ درست کند باید از این عملکرد استفاده کنید. می توانید از این عملکرد با فشار دادن دکمه لغو به مدت 3 ثانیه استفاده کنید.

19. دکمه لغو هشدار تغییر فیلتر

فیلتر یخچال شما باید هر 6 ماه یکبار تعویض شود. یخچال شما این زمان را به صورت اتوماتیک محاسبه خواهد کرد و نشانگر تغییر فیلتر هنگام به پایان رسیدن زمان استفاده از فیلتر روشن خواهد شد. دکمه لغو هشدار تعویض فیلتر را به مدت 3 ثانیه فشار دهید تا یخچال بتواند زمان تعویض فیلتر جدید را بعد از تعویض فیلتر به صورت اتوماتیک محاسبه نماید.

20. نشانگر لغو هشدار تغییر فیلتر

هنگامی که زمان استفاده فیلتر به پایان رسیده باشد، نشانگر هشدار فیلتر روشن خواهد شد.

هشدار باز بودن درب

چنانچه در بخش یخچال یا درهای بخش فلکسی زون حداقل برای 1 دقیقه باز بمانند، صدای بوق هشدار فعال خواهد شد و به صدا در خواهد آمد. فقط کافی است که یکی از دکمه های روی نشانگر را فشار دهید یا در را ببندید تا صدای بوق قطع شود.

9. نشانگر عملکرد فریز سریع

این نشانگر فعال بودن عملکرد فست فریز را نشان می دهد. هنگامی که غذای تازه را در بخش فریزر قرار می دهید یا هنگامی که به یخ نیاز دارید از این عملکرد استفاده کنید. هنگامی که این عملکرد فعال باشد، یخچال شما برای یک دوره زمانی خاص بدون وقفه کار خواهد کرد.

دکمه مربوطه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

10. نشاندهنده دمای محفظه فریزر

این نشان می دهد که دما برای محفظه فریزر تنظیم می باشد.

11. نشاندهنده دمای محفظه یخچال

این نشان می دهد که دما برای محفظه یخچال تنظیم شده است.

12. نشانگر عملکرد خنک کردن سریع

این نشانگر فعال بودن خنک کنندگی سریع را نشان می دهد. هنگامی که غذای تازه را در بخش یخچال قرار می دهید یا هنگامی که نیاز دارید مواد غذایی را سریع خنک کنید از این عملکرد استفاده کنید. هنگامی که این عملکرد فعال باشد، یخچال شما برای 2 ساعت بدون وقفه کار خواهد کرد.

دکمه مربوطه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

13. دکمه تنظیم حرارت بخش فلکسی زون

نشاندهنده این است که درجه حرارت تنظیم شده برای بخش ذخیره فلکسی زون انجام داده شده است.

14. نشاندهنده حالت اقتصادی

نشاندهنده این است که یخچال در حالت صرفه جویی انرژی در حال کار است. درجه حرارت محفظه فریزر این نشانگر در صورتی فعال خواهد بود که این عملکرد روی -18 یا روی خنک کنندگی با صرفه جویی در انرژی به خاطر فعال بودن عملکرد اکوسترا تنظیم شده باشد.

15. نشاندهنده وضعیت خطا

اگر یخچال به اندازه کافی خنک نشود یا اگر حسگر خراب شود این نشانگر فعال خواهد شد. هنگامی که این نشانگر فعال باشد، نشانگر درجه حرارت بخش فریزر "E" را نمایش خواهد داد و نشانگر درجه حرارت بخش یخچال اعدادی مانند "1,2,3..." را نمایش خواهد داد. این اعداد در نشانگر اطلاعاتی در مورد خطایی که رخ داده است را به پرسنل سرویس ارائه خواهد نمود.

16. نشاندهنده قفل کلید

از این عملکرد هنگامی استفاده کنید که نمی خواهید تنظیم درجه حرارت یخچال تغییر داده شود. دکمه Quick Cool (خنک کنندگی سریع) و دکمه تنظیم درجه حرارت بخش فلکسی زون را همزمان به مدت طولانی (3 ثانیه) نگاه دارید تا این ویژگی فعال گردد.

دکمه های مربوطه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

1. دکمه اکو اکسترا/تعطیلات

اگر بخش ذخیره فلکسی زون به عنوان فریزر تنظیم شود، هر بار که این دکمه را فشار دهید درجه حرارت بخش فلکسی زون به صورت 18-، 20-، 22-، 18-... تغییر خواهد کرد. اگر بخش ذخیره فلکسی زون به عنوان یخچال تنظیم شود، هر بار که این دکمه را فشار دهید درجه حرارت بخش فلکسی زون به صورت 10، 8، 6، 4، 2، 0، -6... تغییر خواهد کرد.

دکمه Eco Extra را برای مدت کوتاه جهت فعال کردن عملکرد فشار دهید. این دکمه را برای 3 ثانیه فشار دهید و نگه دارید تا عملکرد تعطیلات فعال شود. این دکمه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

2. دکمه فریز سریع

این دکمه را برای مدت کوتاه فشار دهید تا عملکرد انجماد سریع فعال شود. این دکمه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

3. دکمه تنظیم درجه حرارت محفظه فریزر

این دکمه را به ترتیب برای تنظیم درجه حرارت محفظه فریزر در درجه حرارتهای 18-، 20-، 22- و 24-، 18... فشار دهید. این دکمه را فشار دهید تا درجه حرارت دلخواه بخش فریزر را انتخاب کنید.

4. دکمه تنظیم درجه حرارت محفظه یخچال

این دکمه را به ترتیب برای تنظیم درجه حرارت محفظه یخچال به ترتیب در درجه حرارتهای 8، 6، 4، 2، 8... فشار دهید. این دکمه را فشار دهید تا درجه حرارت دلخواه بخش یخچال را انتخاب کنید.

5. دکمه خنک کردن سرد

این دکمه را برای مدت کوتاه فشار دهید تا عملکرد خنک کردن سریع فعال شود. این دکمه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

6. دکمه تنظیم درجه حرارت بخش فلکسی زون

می توانید محفظه فلکسی را به عنوان فریزر یا خنک کننده تنظیم کنید. این دکمه را برای مدت طولانی (3 ثانیه) فشار داده و نگه دارید تا محفظه ذخیره فلکسی زون را به عنوان فریزر یا خنک کننده تنظیم کنید. این بخش در کارخانه به عنوان بخش فریزر تنظیم شده است.

7. نشانگر عملکرد تعطیلات

این نشانگر فعال بودن عملکرد تعطیلات را نشان می دهد. اگر این عملکرد فعال باشد، "-" در بخش نشانگر یخچال نمایش داده می شود و هیچ نوع خنک کنندگی در بخش یخچال انجام داده نخواهد شد. سایر بخشها مطابق درجه حرارتی که برای آنان تنظیم شده است کار خواهند کرد.

دکمه مربوطه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.


8. نشاندهنده عملکرد اکسترا اکو

این نشانگر فعال بودن عملکرد اکسترا اکو را نشان می دهد. اگر این عملکرد فعال باشد، یخچال شما به صورت اتوماتیک آخرین دوره استفاده را شناسایی خواهد کرد و خنک کنندگی با صرفه جویی در انرژی در این زمانها انجام داده خواهد شد. نشانگر اقتصادی هنگام اجرای خنک کنندگی با صرفه جویی در انرژی فعال خواهد شد.

دکمه مربوطه را مجدداً فشار دهید تا عملکرد انتخاب شده غیر فعال شود.

پانل نشانگر

پانل کنترل لمسی به شما اجازه می دهد تا درجه حرارت را بدون باز کردن در یخچال تنظیم کنید. فقط کافی است که دکمه مربوطه را با انگشت فشار دهید تا درجه حرارت را تنظیم کنید.

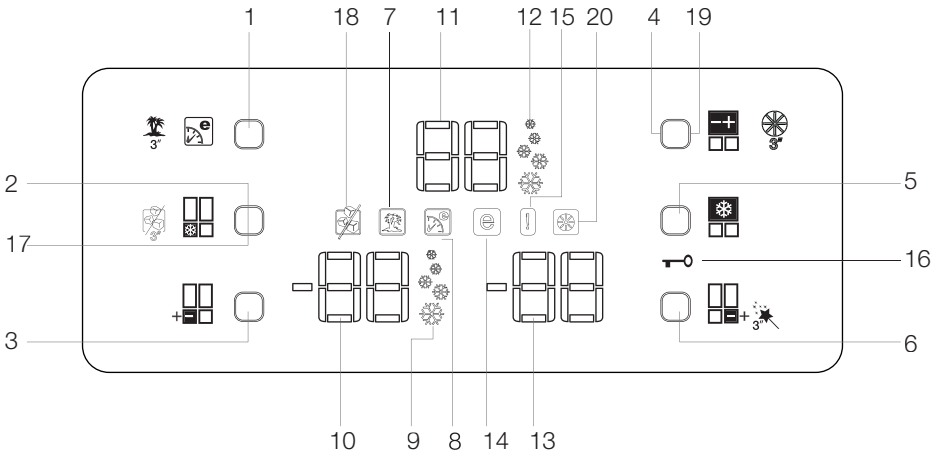

- | | |
|--------------------------------------|-------------------------------------|
| 1. دکمه اکو اکسترا/تعطیلات | 11. نشاندهنده دمای محفظه یخچال |
| 2. دکمه فریز سریع | 12. نشانگر عملکرد خنک کردن سرد |
| 3. دکمه تنظیم درجه حرارت محفظه فریزر | 13. نشانگر درجه حرارت بخش فلکسی زون |
| 4. دکمه تنظیم درجه حرارت محفظه یخچال | 14. نشاندهنده حالت اقتصادی |
| 5. دکمه خنک کردن سرد | 15. نشاندهنده وضعیت خطا |
| 6. دکمه تنظیم درجه حرارت بخش فلکسی | 16. نشاندهنده قفل کلید |
| 7. نشانگر عملکرد تعطیلات | 17. دکمه لغو یخ |
| 8. نشاندهنده عملکرد اکسترا اکو | 18. نشاندهنده خاموش بودن یخ |
| 9. نشانگر عملکرد فریز سریع | 19. دکمه لغو هشدار تغییر فیلتر |
| 10. نشاندهنده دمای محفظه فریزر | 20. نشانگر هشدار تغییر فیلتر |



❶ اشکالی که در این راهنمای دستورالعمل ترسیم شده اند ممکن است مطابق با دستگاه شما نباشند. اگر قطعات مورد مشاهده مشمول دستگاهی که شما خریده اید نمی باشد میتواند برای مدل های دیگر باشد.

- i** یخچال شما باید در محلی با حداقل 30 سانتیمتر فاصله از منابع گرمازا مثل بخاری دیواری، اجاق، شوفاژ و فر و با 5 سانتیمتر فاصله از اجاق های برقی نصب گردد و نباید در معرض مستقیم اشعه آفتاب قرار گیرد.
- i** دمای محیط اتاق که یخچال در آن قرار گرفته است باید حداقل 10 درجه سانتیگراد باشد. راه اندازی یخچال در شرایط محیطی سردتر از این با توجه به راندمان یخچال توصیه نمی گردد.
- i** لطفا مطمئن شوید که داخل یخچال شما کاملا تمیز می باشد.
- i** اگر دو یخچال کنار یکدیگر قرار می گیرند باید حداقل 2 سانتیمتر از هم دیگر فاصله داشته باشند.
- i** وحتیکه یخچال برای بار اول راه اندازی می شود، لطفا موارد زیر را در خلال کارکرد شش ساعت اول رعایت نمایید.
 - درب نباید متواپا باز گردد.
 - باید بدون قرار دادن مواد غذایی و خالی کار کند.
 - یخچال را بیش از حد بارگیری نکنید. اگر برق قطع گردید، لطفا به قسمت اخطار ها " کارهایی که باید قبل از فراخواندن سرویس مجاز انجام دهید" مراجعه کنید.
- i** بسته بندی اصلی و مواد فومی باید برای حمل و نقل یا جابجایی آتی نگهداری گردد.

فیلتر آب باید مانند حالتی که در تصویر نمایش داده شده است در زمان معین یا هنگامی که دیگر از آن استفاده نمی شود باید تعویض شود و قاب بای پاس باید وصل شود. باید قبل از بیرون کشیدن مطمئن شوید که حالت "Ice off" (خاموش بودن تولید یخ) فعال است.

⚠ احتیاط: فیلتر آب برخی از ذرات خارجی در آب را تصفیه کرده و آب را تمیز می کند. این فیلتر میکرو ارگانیزمهای آب را تصفیه نمی کند.



⚠ احتیاط: دکمه خاموش کردن یخ باید همیشه در حین تعویض فیلتر آب یا نصب کاور بای پاس فشار داده شود.

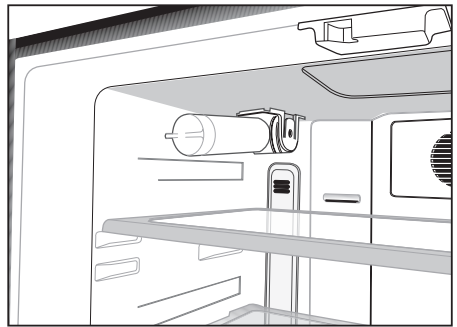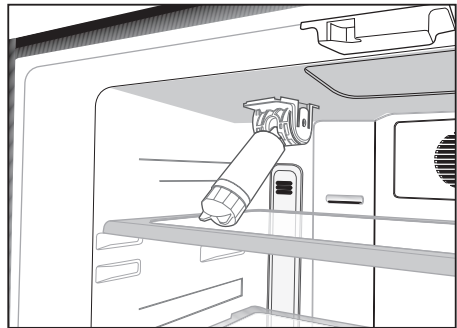



قبل از اولین بار استفاده از شیر آب

- ❶ فشار آب لوله اصلی نباید زیر 1 بار باشد.
- ❶ فشار آب لوله اصلی نباید بالای 8 بار باشد.
- ❶ در صورتی که فشار آب لوله کمتر از 1 بار باشد یا اگر قصد استفاده از مخزن آب را داشته باشید، باید از پمپ استفاده کنید.
- ❶ سیستم آب یخچال باید به لوله آب اصلی وصل باشد. نباید شیر آب را به لوله آب داغ وصل کرد.
- ❶ در ابتدای کار یخچال نمی توانید از آب استفاده کنید. این بخاطر هوای موجود در سیستم می باشد.
- برای تخلیه هوا از سیستم، اهرم توزیع کننده را بمدت 1 دقیقه فشار دهید تا آب از توزیع کننده بیرون بیاید.
- جریان آب ممکن است در ابتدا نامنظم باشد. جریان آب نامنظم بعد از تخلیه هوای سیستم منظم می شود.
- ❶ در زمان شروع به کار یخچال حدود 12 ساعت باید کار کند تا بتوانید از آب یخ آن استفاده کنید.
- ❶ فشار آب لوله باید بین 1-8 بار باشد تا توزیع کننده آب/یخ بطور عادی کار کند. برای این کار، 1 لیوان آب (100 سی سی) باید در عرض 10 ثانیه پر شود.
- ❶ 10 لیوان آب اول را نباید استفاده کرد.
- ❶ حدود 30 تکه یخ اول که از توزیع کننده یخ خارج می شود را نباید مصرف نمایید.
- ❶ همیشه هنگامی که از مخزن استفاده نمی کنید، از فیلتر آب استفاده کنید.

3. قاب بای باس فیلتر آب را با چرخاندن به طرف پایین بیرون بکشید.
1. دکمه لغو یخ در نمایشگر را فشار دهید.

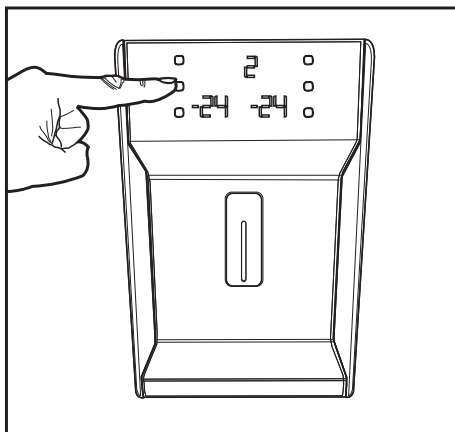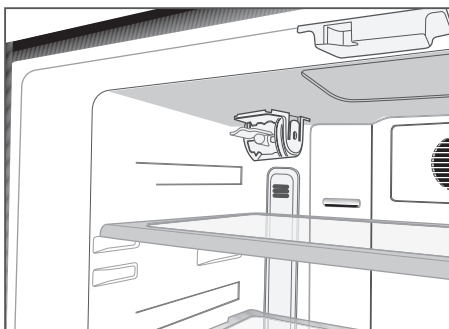

2. قاب فیلتر در محفظه یخچال را با کشیدن به طرف خود بردارید.

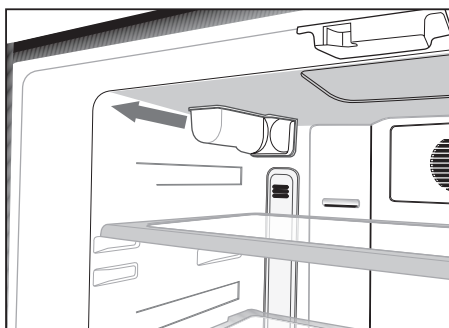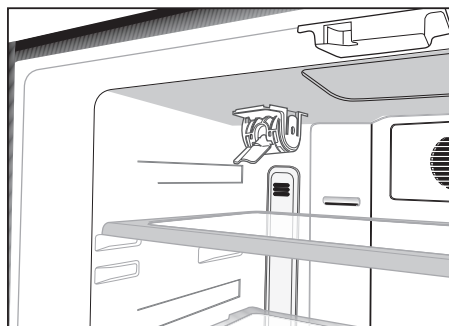


- ⚠ احتیاط: مطمئن شوید که قبل از باز کردن کاور بای پای، حالت "Ice off" (خاموش بودن تولید یخ) فعال می باشد.
- توجه: چکیدن چند قطره آب بعد از جدا کردن کاور عادی می باشد.
4. در روی فیلتر آب را به صورتی که در شکل نمایش داده شده است بردارید و به طرف بالا بچرخانیده تا قفل شود.
5. دکمه لغو یخ در نمایشگر را دوباره فشار دهید تا از این حالت خارج شوید.
- فیلتر آب باید هر 6 ماه یکبار تعویض شود.
- اگر بخواهید زمان تعویض فیلتر به طور اتوماتیک محاسبه شود و در پایان زمان استفاده هشدار را دریافت کنید، لطفاً به بخش «محاسبه اتوماتیک زمان تعویض» مراجعه کنید.

اتصال لوله آب به لوله آب سرد اصلی

(در برخی از مدلها)

اگر بخواهید از یخچال خود با اتصال آن به لوله آب سرد خانه استفاده کنید مراحل زیر را انجام دهید.

باید یک شیر نیم اینچ را به لوله آب سرد خانه وصل کنید. در صورتی که این شیر موجود نباشد یا در حالتی که مطمئن نیستید با یک لوله کش متخصص تماس بگیرید.

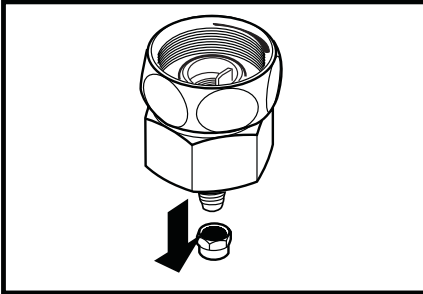



1. مهره را از تبدیل شیر باز کنید. (شکل A)
2. تبدیل شیر را به شیر نیم اینچ به صورتی که در تصویر نمایش داده شده است وصل کنید. (شکل B)
3. بعد از جا زدن لوله آب در مهره، آن را به صورتی که در شکل نمایش داده شده است به تبدیل شیر وصل کنید. (شکل C)

4. مهره را با دست ببندید. در صورت نشست آب با یک آچار لوله گیر یا انبردست مهره را سفت کنید.

⚠ احتیاط: لوله آب را به نقاط مناسب با استفاده از بست لوله وصل کنید تا از آسیب رسیدن یا جابجا شدن یا قطعی تصادفی جلوگیری بعمل آید.

⚠ احتیاط: بعد از باز کردن شیر آب، مطمئن شوید که نشستی در نقاط اتصال لوله آب وجود ندارد. در صورت وجود نشستی، شیر آب را فوراً ببندید و تمامی اتصالات را با استفاده از یک آچار لوله گیر یا انبردست محکم کنید.

⚠ احتیاط: مطمئن شوید که آب در شیر استاندارد لوله کشی 2/1 اینچ به شیر آب سرد، موجود است و کاملاً بسته شده است.

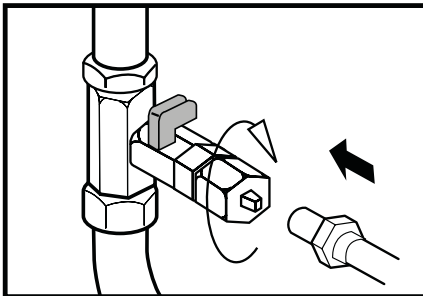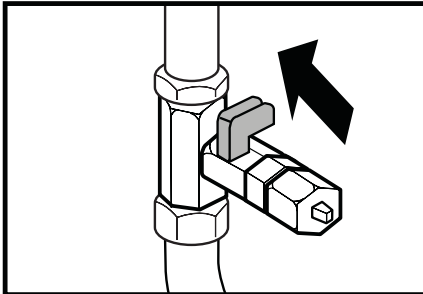


اتصال شیلنگ آب به مخزن

(در برخی از مدلها)

برای وصل کردن آب یخچال از طریق مخزن به یک پمپ نیاز دارید. بعد از وصل کردن یک سر لوله آب که از پمپ خارج می شود به یخچال به روشی که در مرحله قبل شرح داده شد، دستورالعملهای زیر را دنبال کنید.

1. اتصال را با فشار دادن سر دیگر لوله آب به وروی لوله آب پمپ به صورتی که در تصویر نمایش داده شده است تکمیل کنید.

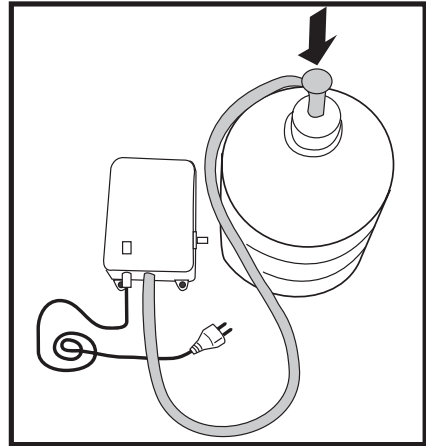

2. شیلنگ پمپ به مخزن را به صورتی که در تصویر نمایش داده شده است، نصب و محکم کنید.



3. بعد از انجام اتصالات، دستگاه را به برق وصل کنید و پمپ را به کار اندازید.

برای عملکرد موثر پمپ 2 تا 3 دقیقه بعد از بکار انداختن پمپ صبر کنید.

i هنگام انجام اتصالات آب می توانید دفترچه راهنمای کاربر پمپ مراجعه کنید.

i در صورتی که از مخزن آب استفاده شود، نیازی به استفاده از فیلتر آب نیست.

i هنگام استفاده از مخزن باید از پمپ استفاده کنید.

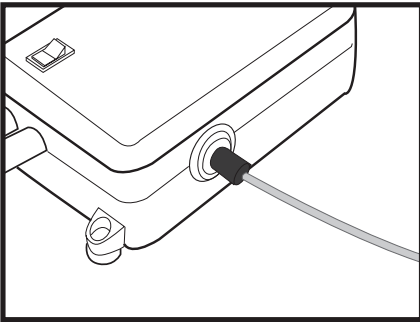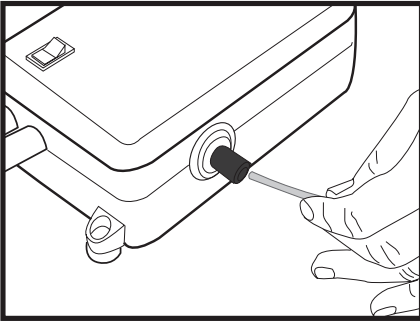

نصب فیلتر آب

(در برخی از مدلها)

دو نوع منبع آب را می توان به عنوان ورودی آب یخچال استفاده کرد: آب سرد از لوله آب شهری و آب درون یک منبع.

نیازمندیهای نصب

برای استفاده از یک منبع آب باید از یک پمپ استفاده کنید.

بررسی کنید که قطعات قید شده در زیر همراه با دستگاه شما ارائه شده باشند.

1. مهره اتصال لوله آب به پشت دستگاه (اگر مهره بزرگ یا کوچک بود، آن را از نزدیکترین مرکز خدمات مجاز تهیه کنید).

2. بست لوله 2 قطعه (در صورتی که باید لوله آب را محکم کرد)

توجه: چون قطعات زیر برای استفاده از منبع آب لازم نمی باشند، ممکن است هنگام خرید با دستگاه ارائه نشوند.

3. لوله آب 5 متری (قطر 4/1 اینچ)

4. شیر آب سرد با فیلتر توری (تبدیل شیر)

5. فیلتر آب با فیلتر وصل شده خارجی باید در پایه داخل بخش یخچال نصب شود.

محلی که فیلتر خارجی باید در آنجا نصب شود را قبلاً تعیین کنید. (در مورد فیلترهایی که بیرون از یخچال استفاده می شوند اعمال می گردد.) سپس فاصله بین فیلتر و یخچال را تعیین کنید و طول شیلنگ از فیلتر به ورودی آب یخچال را هم تعیین کنید.

فیلتر آب باید مانند تصویر به صورت عمودی قرار داده شوند. نصب صحیح فیلتر به ورودی آب و نقاط خروجی آب مهم می باشد.

بعد از وصل کردن فیلتر، از 3 تا 4 لیوان اول آب استفاده نکنید.



اتصال لوله آب به یخچال


1. بعد از سوار کردن مهره روی لوله آب، لوله آب را در شیر ورودی یخچال با فشار به طرف پایین جا بزنید.

2. مهره ای را به صورتی که در شکل روبرو نمایش داده شده است با فشار دست در شیر ورودی یخچال جا بزنید.


(a- لوله آب، b- مهره، c- شیر)

❗ نکته 1: نباید مهره را با ابزاری محکم کنید که محل نصب نشست نکند. در صورت نشست آب با یک آچار لوله گیر یا انبردست مهره را سفت کنید.

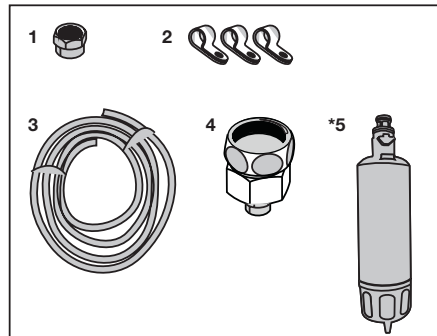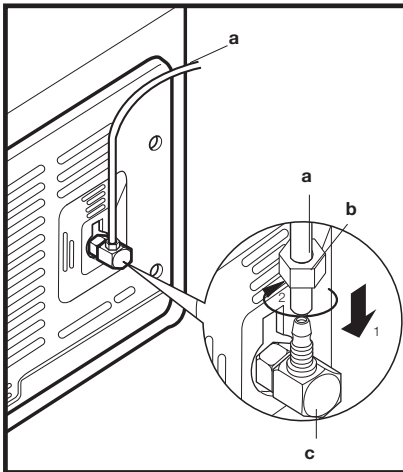


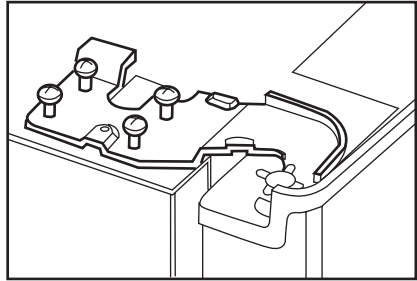



۱ دری که تنظیم کرده اید را با محکم کردن پیچها بدون تغییر دادن وضعیت در ثابت نمایید.

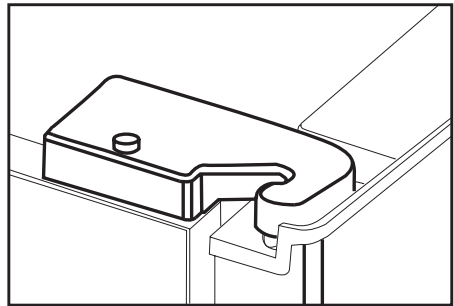

۱ قاب لولا را در جای خود قرار دهید و با پیچ ببندید.

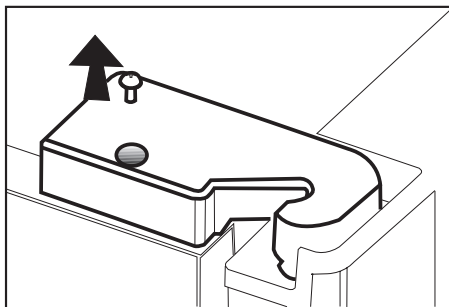


1 با استفاده از یک پیچ گوشتی، پیچ لولای بالای دری که می خواهید تنظیم کنید را باز کنید.

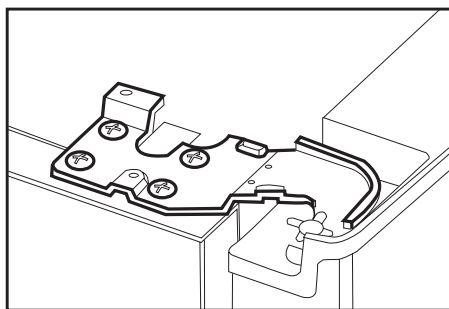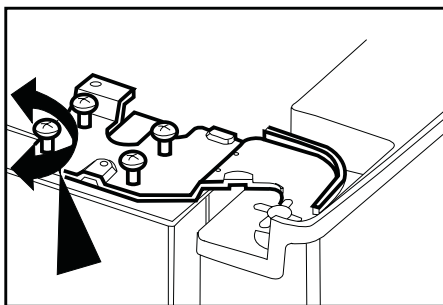

1 در را با شل کردن پیچهایش به صورت مناسب تنظیم کنید.


شما می‌توانید یخچال را با چرخاندن پایه های جلویی به گونه ای که در شکل نشان داده شده است بالانس کنید. هنگامی پایه پایین میاید که آن را در جهت پیکان سیاه بچرخانید و هنگامی بلند میشود که در جهت عکس آن را بچرخانید. گرفتن کمک از شخصی که کمی یخچال را بلند کند این کار را تسهیل میکند.

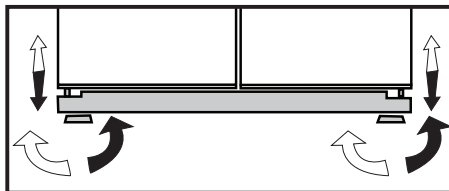

2. بعد از اینکه بالانس دستگاه برقرار شده، قاب تهویه پشت را وصل کنید و پیچهای آن را ببندید.

3. پیچهای محکم کردن قاب تهویه پایین را با استفاده از یک پیچ گوشتی چهارسو باز کنید.

تنظیم فاصله در بالا

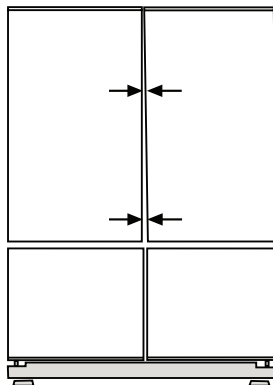

1 می‌توانید فاصله در های محفظه یخچال را به صورتی که در شکل نمایش داده شده است تنظیم کنید. طبقه های در باید هنگام تنظیم ارتفاع در خالی شوند.

⚠ این دستگاه را نباید قبل از تعمیر کردن بکار انداخت!
خطر برق گرفتگی وجود دارد!


دور انداختن بسته بندی

⚠ مواد بسته بندی ممکن است برای بچه ها خطرناک باشد. مواد بسته بندی را دور از دسترس کودکان نگه داری کنید یا آنها را با طبقه بندی کردن بر اساس دستورالعمل دفع زباله دور بیندازید. این مواد را مانند زباله خانگی دور نیاندازید.
بسته بندی یخچال شما از مواد قابل بازیافت تولید شده است.

تنظیم تعادل روی زمین

⚠ اگر یخچال شما بالانس نیست؛

⚠ اول دوشاخه برق را از پریز بیرون بکشید. این محصول باید هنگامی تراز کردن دستگاه به برق وصل نباشد. خطر برق گرفتگی وجود دارد.

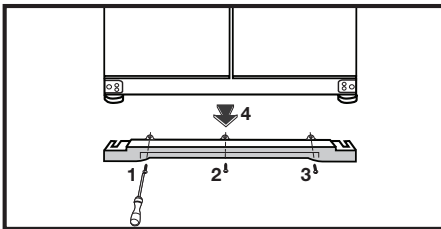

1. قاب تهویه با باز کردن پیچهای آن به روشی که در شکل قبل نمایش داده شده است انجام می شود.

قرار دادن در محل و نصب



⚠ احتیاط: هرگز دوشاخه یخچال را بهنگام نصب به پریز برق نزنید. در غیر این صورت، ریسک جانی یا صدمات جدی بدنیاال خواهد داشت.

⚠ اگر درب ورودی اتاقی که میخواهید یخچال را در آن قرار دهید به اندازه کافی عریض نیست تا یخچال از آن عبور کند، از سرویس مجاز بخواهید که درب ها را از یخچال شما باز کند و یکطرفه از میان درب آن را عبور دهد.

1. یخچال را در محلی قرار دهید که براحتی بتوانید از آن استفاده کنید.

2. یخچال را دور از منابع گرمازا، محل های مرطوب و اشعه مستقیم آفتاب قرار دهید.

3. برای عملکرد موثر یخچال، تهویه کافی و مناسب باید در اطراف یخچال در نظر گرفته شود. اگر یخچال در فرورفتگی دیوار قرار میگیرد، حداقل 5 سانتیمتر فاصله از سقف و 5 سانتیمتر از دیوار باید در نظر گرفته شود.

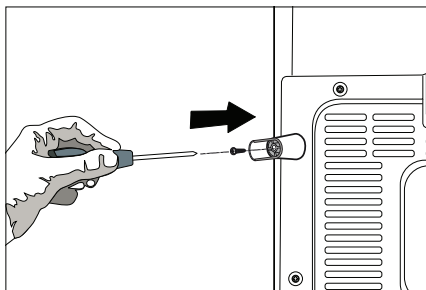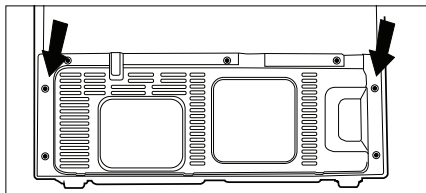

1 لطفاً بخاطر داشته باشید که اگر موارد مندرج در کتابچه راهنما رعایت نگردد کارخانه مسئول نخواهد بود.

نکاتی که هنگام انتقال دوباره یخچال باید در نظر گرفته شود

1. یخچال شما باید قبل از حمل و نقل ، خالی و تمیز شده باشد.
2. طبقات، متعلقات، محل نگهداری سبزیجات و غیره داخل یخچال شما برای جلوگیری از تکان خوردن باید با نوار چسب قبل از بسته بندی محکم بسته شوند.
3. بسته بندی باید با نوار چسب کاغذی ضخیم و طناب محکم انجام پذیرد و مقررات مندرج در کتابچه راهنما رعایت شود.

1 همیشه به یاد داشته باشید...

هر مواد باز یافتی یک منبع ضروری برای طبیعت و منابع ملی ما است.

اگر می خواهید در باز یافت مواد بسته بندی مشارکت کنید، می توانید اطلاعات بیشتری از مقامات محلی یا محیط زیست خود کسب کنید.

قبل از کار کردن با یخچال

قبل از راه اندازی دستگاه برای استفاده موارد زیر را بررسی کنید:

1. آیا داخل یخچال خشک است و هوا می تواند آزادانه در پشت آن به گردش درآید؟
2. عدد گوه پلاستیکی را در قاب تهویه پشت به روش نمایش داده شده در شکل زیر جا بزنید. برای انجام این کار، پیچهای روی دستگاه را باز کرده و از پیچهایی که در همان کیسه قرار داده شده اند استفاده کنید. گوه های پلاستیکی فاصله لازم بین یخچال و دیوار را بوجود می آورند تا هوا بتواند گردش کند.

اتصالات برقی

یخچال را با یک پریز ارت دار که توسط یک فیوز حفاظت شده است و دارای ظرفیت مناسب است به برق وصل کنید.

مهم:

⚠ اتصال باید مطابق مقررات کشوری باشد.

⚠ دوشاخه برق باید بعد از نصب به آسانی در دسترس باشد.

⚠ ولتاژ و فیوز حفاظتی مجاز در بخش "مشخصات" قید شده است.

⚠ ولتاژ تعیین شده باید برابر با ولتاژ برق منزل باشد.



⚠ از کابلهای اتصال و دوشاخه های چند راهه نباید برای اتصال استفاده کرد.

⚠ یک کابل برق صدمه دیده را نباید یک بار مجاز تعویض نماید.

توصیه های مربوط به محفظه مواد غذایی تازه

یرایتخا *

- لطفا اجازه ندهید مواد غذایی تازه با حسگر درجه حرارت در بخش مواد غذایی تازه تماس داشته باشد.
- برای حفظ درجه حرارت مناسب در بخش مواد غذایی تازه حسگر نباید با مواد غذایی تماس داشته باشد.
- غذای داغ را در یخچال قرار ندهید.

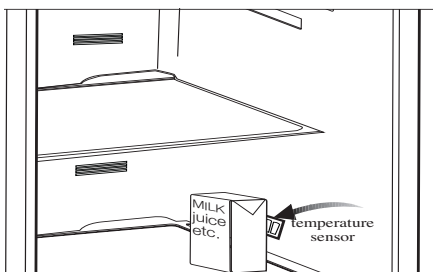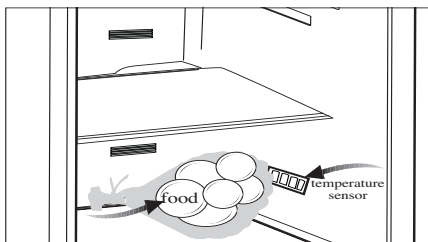

- آب کردن یخ مواد غذایی منجمد در بخش یخچال هم باعث صرفه جویی در مصرف انرژی شده و هم کیفیت مواد غذایی را حفظ می کند.

هشدار HC

اگر دستگاه شما حاوی ماده خنک کننده R600a می باشد موارد زیر را در نظر بگیرید:

این گاز قابل اشتعال است. بنابراین، توجه داشته باشید که سیستم سرمایش و لوله ها در خلال استفاده و حمل و نقل صدمه نبینند. در صورت صدمه دیدن، دستگاه را در معرض آتش قرار ندهید، دستگاه باید از منابع بالقوه آتشزا که موجب آتش گرفتن می شود دور باشد و هوای اتاقی که دستگاه در آن قرار دارد باید تهویه گردد.

در صورتی که دستگاه شما حاوی R134a است این هشدار را نادیده بگیرید.

نوع گاز استفاده شده در این دستگاه در پلاک مدل دستگاه که در داخل یخچال در دیوار سمت چپ قرار گرفته است، قید شده است. برای دفع دستگاه هرگز آن را در آتش نیاندازید.

کارهایی که برای صرفه جویی انرژی باید انجام داد.

- در های یخچال را برای مدت طولانی باز نگذارید.
- مواد غذایی یا نوشیدنی داغ در یخچال نگذارید.
- یخچال را بیش از اندازه بارگیری نکنید بطوریکه از گردش هوای داخل آن جلوگیری شود.
- یخچال را در معرض اشعه مستقیم آفتاب یا در مجاورت وسایل گرمازا مثل اجاق یا ماشین ظرفشویی یا رادیاتور قرار ندهید.
- توجه کنید که مواد غذایی را در ظروف دربسته نگهداری کنید.
- در محصولاتی که دارای بخش فریزر می باشند؛ هنگامی که طبقه یا کشوی فریزر را بردارید می توانید حداکثر مقدار مواد غذایی را در آن ذخیره کنید. مقدار انرژی مصرفی قید شده در یخچال شما بر اساس برداشتن طبقه یا کشوی فریزر و تحت حداکثر میزان بار تعیین شده است. استفاده از کشو یا طبقه بر اساس اندازه و شکل مواد غذایی که باید منجمد شود، خطری ندارد.

جلوگیری از بروز آبچکش استفاده کنید. اگر مطمئن نیستید مشکل آبچکش پیدا می کند یا خیر، با یک لوله کش متخصص صحبت کنید.

ورودی آب گرم نصب نکنید. رای جلوگیری از یخ زدن شیرهای آب، مراقب باشید. دمای آب مورد استفاده باید حداقل 33 درجه فارنهایت (0.6 درجه سانتی گراد) و حداکثر 100 درجه فارنهایت (38 درجه سانتی گراد) باشد.


- فقط از آب آشامیدنی استفاده کنید.

ایمنی کودکان

- اگر در دارای قفل باشد، کلید را باید از دسترس کودکان دور نگاه داشت.
- باید بر کار کودکان نظارت کرد تا یخچال را دستکاری نکنند.

پیروی از مقررات WEEE و دور انداختن محصول

این محصول مطابق با بخشنامه EU (WEEE 2012/19) می باشد. این دستگاه در بر دارنده نماد طبقه بندی برای ضایعات تجهیزات الکتریکی و الکترونیکی می باشد (WEEE).



این دستگاه توسط قطعات و مواد دارای کیفیت بالا ساخته شده است که می توان آنان را مجدداً استفاده کرد و برای بازیافت مناسب می باشند. بنابراین دستگاه را در پایان عمر دستگاه مانند زباله های خانگی دور نیاندازید. آن را به محل تحویل بازیافت محصولات برقی و الکترونیکی ببرید. لطفاً با مقامات محلی برای پیدا کردن نزدیکترین مراکز جمع آوری تماس بگیرید.


تطابق با بخشنامه RoHS:

دستگاهی که خریداری کرده اید مطابق با بخشنامه EU (RoHS 2011/65) می باشد. این دستگاه حاوی مواد مضر و ممنوع مشخص شده در بخشنامه نمی باشد.

اطلاعات بسته بندی

مواد بسته بندی این محصول از مواد قابل بازیافت مطابق بر مقررات ملی محیط زیست ما ساخته شده اند. مواد بسته بندی را همراه با زباله خانگی یا سایر زباله ها دور نیاندازید. آنها را به نقاط جمع آوری مواد بسته بندی که توسط مقامات محلی تعیین شده است ببرید.

هرگز اشیاء سنگین را روی کابل برق قرار ندهید. با دستان خیس دوشاخه دستگاه را به پریز وصل نکنید.

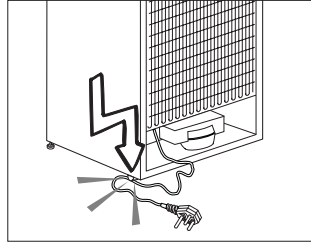

- دوشاخه یخچال را در صورتی که پریز برق شل باشد یا خراب باشد به پریز وصل نکنید.
- به خاطر مسائل ایمنی آب نباید به طور مستقیم روی قطعات داخلی یا خارجی دستگاه پاشیده شود.

مواد حاوی گازهای قابل اشتعال مانند گاز پروپان را در مجاورت دستگاه اسپری نکنید تا از خطر آتش سوزی و انفجار جلوگیری بعمل آورید.

هرگز ظروف پر شده از آب را در بالای یخچال قرار ندهید در غیر این صورت برق گرفتگی یا آتش سوزی به وجود خواهد آمد.



- یخچال خود را بیش از حد پر نکنید. در صورتی که در یخچال بیش از حد مواد قرار دهید، مواد غذایی ممکن است سقوط کرده و به شما و یخچال به هنگام باز کردن در صدمه بزنند. هرگز اشیاء را در بالای یخچال قرار ندهید. این اشیاء ممکن است هنگام باز و بسته کردن در یخچال سقوط کنند.

محصولاتی که نیاز به کنترل دقیق درجه حرارت دارند مانند واکسن، داروهای حساس به حرارت، مواد علمی و غیره را نباید در یخچال نگهداری کرد.

- اگر برای مدت طولانی از یخچال استفاده نمی کنید، دوشاخه آن را از پریز بیرون بکشید. اگر سیم برق آسیب دیده باشد، ممکن است باعث آتش سوزی شود.
- یخچال را می توانید در صورتی که پایه

های قابل تنظیم روی کف زمین قرار نگرفته باشند، جابجا کنید. تنظیم کردن صحیح پایه های قابل تنظیم روی کف زمین می تواند از حرکت دستگاه جلوگیری بعمل آورد.

- هنگام حمل دستگاه، آن را از دسته در ننگه ندرید. در غیر این صورت می شکند.
- هنگامی که می خواهید دستگاه را در کنار یخچال یا فریزر دیگر قرار دهید، فاصله بین دستگاهها باید حداقل ۸ سانتی متر باشد. در غیر این صورت، ممکن است روی دیواره های کناری دستگاه قطرات آب جمع شود.
- اگر قسمت بالا یا پشت محصول دارای برچسب مربوط به مدار الکترونیکی باز داخل دستگاه است (روکش صفحه مدار الکترونیکی چاپ شده) (1)، هرگز از دستگاه استفاده نکنید.

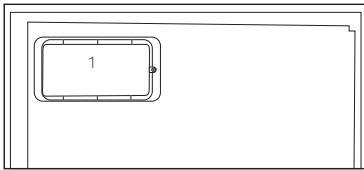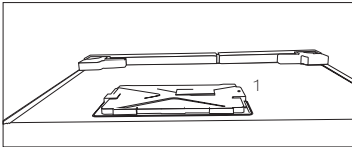

در محصولاتی که دارای شیر آب می باشند؛

فشار آب سرد ورودی باید حداقل ۹۰ psi

(6.2 بار) باشد. اگر فشار آب بیشتر از ۸۰ psi (5.5 بار) است، از یک سوپاپ محدودکننده فشار در سیستم برق استفاده کنید. اگر نمی دانید چطور فشار آب را بررسی کنید، از یک لوله کش متخصص راهنمایی دریافت کنید.

اگر این احتمال وجود دارد که مشکل آبچکش ایجاد شود، همیشه از تجهیزاتی برای

- قبل از تمیز کردن یا آب کردن یخ دستگاه دوشاخه را از پریز بیرون بکشید.
- مواد تبخیری یا تمیز کننده تبخیری هرگز نباید برای تمیز کردن و یخ زدایی فریزر استفاده گردند. در چنین مواردی، بخار گاز ممکن است با قطعات برقی تماس پیدا کند و موجب اتصال کوتاه و شوک الکتریکی گردد.
- هرگز از قسمت های یخچال مثل درب بعنوان پشتیبان یا پایه استفاده نکنید.
- از وسایل برقی داخل یخچال استفاده نکنید.
- قسمت هایی که در آن مواد سرد کننده در گردش است با دریل کردن یا ابزار برشی صدمه نزنید. ماده سرد کننده ای که ممکن است بهنگام صدمه خوردن به کانالهای گاز، امتداد لوله یا سطوح پوششدار خارج شوند موجب صدمه زدن پوست و لطمه به چشم ها گردند.
- منافذ تهویه یخچال را با هیچ مانعی مسدود نکنید و نبوشانید.
- دستگاههای برقی فقط باید توسط افراد مجاز تعمیر شوند. تعمیرات توسط افراد فاقد صلاحیت ممکن است موجب ریسک شوک الکتریکی برای کاربر گردند.
- در صورت هر گونه خرابی یا بهنگام کارهای تعمیراتی برق یخچال را با کشیدن فیوز یا خارج کردن دوشاخه یخچال از برق شهر قطع نمایید.
- هنگام کشیدن دوشاخه از پریز، کابل برق را نکشید.
- اطمینان حاصل کنید که نوشیدنیهای دارای درصد بالای الکل به صورت ایمن قرار داده شدهاند و سر آنها محکم و شیشهها رو به قرار دارند.
- هرگز قوطیهای اسپری قابل اشتعال و مواد منفجره را در یخچال نگهداری نکنید.
- از وسایل مکانیکی یا ابزار های دیگر برای تسریع یخ زدایی غیر از مواردیکه که کارخانه توصیه کرده است استفاده ننمایید.
- این دستگاه برای استفاده اشخاصی که دارای وضعیت ضعیف جسمانی (شامل کودکان)، حساسیت و یا عقب ماندگی ذهنی و یا عدم داشتن تجربه و درک صحیح از

- آن هستند نمی باشد، مگر اینکه اینگونه اشخاص تحت آموزش و یا سرپرستی توسط افرادی که مسئولیت حفاظت از آنها را دارند در رابطه با این دستگاه قرار داشته باشند.
- یک یخچال صدمه دیده را راه اندازی نکنید. در صورتی که با مشکلی روبرو شدید با نماینده سرویس تماس بگیرید.
- ایمنی الکتریکی یخچال شما وقتی تضمین می گردد که سیم اتصال زمین منزل شما با استانداردهای معین تطابق داشته باشد.
- بخاطر ایمنی الکتریکی، قرار دادن دستگاه در معرض باران، برف، آفتاب و باد خطر ناک است.
- در صورتی که سیم برق صدمه دیده باشد با سرویس مجاز تماس بگیرید تا از بروز خطر جلوگیری کنید.
- هرگز دوشاخه یخچال را بهنگام نصب به پریز برق نزنید. در غیر این صورت، ریسک جانی یا صدمات جدی بدنial خواهد داشت.
- این یخچال برای ذخیره مواد غذایی در نظر گرفته شده است. از دستگاه برای موارد دیگر نباید استفاده شود.
- برچسب مشخصات فنی دستگاه در داخلی یخچال روی دیواره سمت چپ قرار گرفته است.
- هرگز یخچال خود را به سیستمهای صرفه جویی برق وصل نکنید. این دستگاهها به یخچال صدمه می زنند.
- اگر چراغ آبی در یخچال باشد، با چشم غیر مسلح یا ادوات بصری برای آن به مدت طولانی نگاه نکنید.
- برای دستگاههایی که به صورت دستی کنترل می شوند، حداقل ۵ دقیقه بعد از قطع شدن برق صبر کنید و پس از آن دستگاه را روشن کنید.
- این دفترچه راهنما در صورتی که دستگاه به فرد دیگری داده شود باید به او تحویل داده شود.
- از آسیب رساندن به سیم برق هنگام انتقال دستگاه جلوگیری بعمل آورید. خم کردن کابل ممکن است باعث آتش سوزی شود.

لطفاً به اطلاعات زیر را مطالعه کنید. عدم رعایت این اطلاعات ممکن است باعث ایجاد جراحت یا آسیبهای جدی شود. در نتیجه کلیه ضمانت و تعهدات باطل خواهند شد.

بعد از تاریخ خرید محصول، قطعات یدکی اصلی به مدت 10 سال ارائه می شوند.

استفاده مجاز

۱

این دستگاه بمنظور استفاده در منزل و یا موارد مشابه ذیل طراحی شده است.

⚠️ **اخطار:**

**مواد قابل انفجار مانند
قوطیهای اسپری که دارای
ماده قابل اشتعال باشند
را در دستگاه نگهداری
نکنید.**

- جهت استفاده در آشپزخانه پرسنل در فروشگاه ها، دفاتر کار و سایر محیط های کاری
- جهت استفاده توسط مشتریان در منازل ویلاقی و هتل ها، متل ها و سایر محیط ها و مکان های مخصوص اقامت

ایمنی عمومی


- اگر می خواهید این محصول را از رده خارج کنید، ما توصیه میکنیم بلحاظ کسب اطلاعات لازم با مقامات و سرویس مجاز مشورت نمایید.
- کلیه سوالات و مشکلات مربوط به یخچال خود را با سرویس مجاز در میان بگذارید. بدون اطلاع سرویس مجاز در مسائل یخچال مداخله نکنید و اجازه ندهید کسی در این موارد مداخله کند.
- در محصولاتی که دارای محفظه فریزر می باشند، بستنی قیفی و یا قالب های یخ را بمحض خارج کردن از محفظه فریزر نخورید! (این امر ممکن است روی لب های شما ایجاد سرمازدگی نماید.)
- در محصولاتی که دارای محفظه فریزر می باشند بطری و قوطیهای نوشیدنیهای مایع را در محفظه فریزر قرار ندهید. در غیر این صورت، ممکن است منفجر شوند.
- غذاهای فریز شده را با دست لمس نکنید، ممکن است به دست های شما بچسبند.

⚠️ **هشدار:** هنگامیکه دستگاه در پوشش و بسته بندی محافظ خود قرار دارد و یا پس از نصب آن از عدم بسته بدون منافذ تهویه اطمینان حاصل نمایید.

⚠️ **هشدار:** از استفاده از هر گونه دستگاه های مکانیکی و یا سایر دستگاه ها بغیر از موارد توصیه شده توسط تولید کننده بمنظور تسریع باز کردن یخ خودداری نمائید

⚠️ **هشدار:** از ایجاد هرگونه آسیب در مدار مایع خنک کننده خودداری نمائید.

⚠️ **هشدار:** از استفاده از دستگاه های برقی بغیر از موارد مورد توصیه توسط تولید کننده درون قسمت های مخصوص نگهداری از موارد غذایی دستگاه خودداری نمائید. .

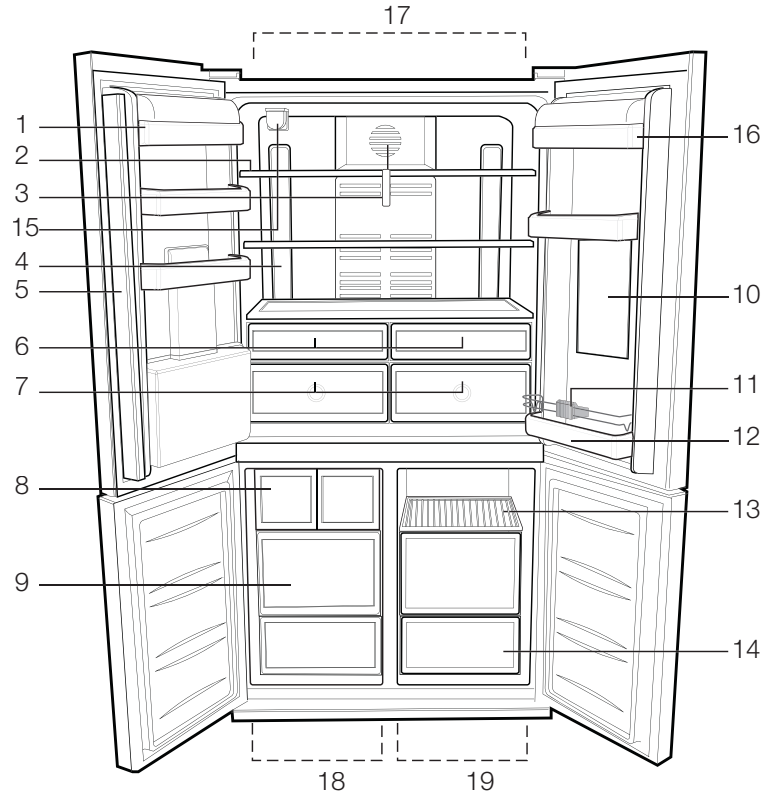

- | | |
|--------------------------------------|--|
| 1- طبقات درب محفظه یخچال | 10- مینی بار |
| 2- طبقات شیشه ای محفظه یخچال | 11- نگهدارنده بطری |
| 3- کاور پخش کننده | 12- نگهدارنده بطری |
| 4- لنزهای روشنایی | 13- محل نگهداری مواد غذایی طبقات محفظه دار |
| 5- بخش متحرک وسط | 14- محل نگهداری مواد غذایی محفظه ها |
| 6- محفظه سردکن | 15- فیلتر آب |
| 7- محفظه سبزیجات | 16- محفظه لبنیات |
| 8- آیس متیک | 17- محفظه یخچال |
| 9- محفظه های نگهداری غذاهای فریز شده | 18- محفظه فریزر |
| | 19- منطقه فلکسی |

i اشکالی که در این راهنمای دستورالعمل ترسیم شده اند ممکن است مطابق با دستگاه شما نباشند. اگر قطعات مورد مشاهده مشمول دستگاهی که شما خریده اید نمی باشد میتواند برای مدل های دیگر باشد.

1 یخچال شما 3 4 آماده سازی 18

2 هشدارهای ایمنی مهم 5 استفاده از یخچال 19

- استفاده مجاز 4
- در محصولاتی که دارای شیر آب می باشند؛ 6
- ایمنی کودکان 7
- پیروی از مقررات WEEE و دور انداختن 7
- محصول 7
- تطابق با بخشنامه RoHS: 7
- اطلاعات بسته بندی 7
- هشدار HC 7
- کارهایی که برای صرفه جویی انرژی باید انجام داد. 7
- توصیه های مربوط به محفظه مواد غذایی تازه 8
- 3 نصب 9**
- نکاتی که هنگام انتقال دوباره یخچال باید در نظر گرفته شود 9
- قبل از کار کردن با یخچال 9
- اتصالات برقی 9
- دور انداختن بسته بندی 10
- از رده خارج کردن ماشین قدیمی 10
- قرار دادن در محل و نصب 10
- تنظیم تعادل روی زمین 10
- تنظیم فاصله در بالا 11
- نصب فیلتر آب 13
- اتصال لوله آب به یخچال 13
- اتصال شیلنگ آب به مخزن 14
- اتصال لوله آب به لوله آب سرد اصلی 15
- قبل از اولین بار استفاده از شیر آب 17

6 نگهداری و تمیز کردن 28

- حفاظت سطوح پلاستیکی 82

7 راه حل های توصیه شده برای رفع مشکلات 29

لطفا این دفترچه راهنما را اول مطالعه کنید!

مشتري عزيز،

اميدواريم كه دستگاه شما كه در كارخانه هاي مدرن ساخته شده است و تحت دقيق ترين شرايط كنترل كيفيت آزمائش شده است به شما سرويس مؤثري را ارائه نمايد.

بدين منظور، توصيه مي كنيم كه كل اين دفترچه را قبل از استفاده از دستگاه با دقت بخوانيد و آن را براي مراجعات بعدي در محلي نگهداري كنيد.

اين دفترچه راهنما

- به شما كمك خواهد كرد تا از دستگاه به سرعت و به صورت ايمن استفاده كنيد.
- اين دفترچه راهنما را قبل از نصب و راه اندازي دستگاه مطالعه كنيد.
- دستورالعملها را دنبال كنيد، خصوصا در مورد ايمني.
- اين دفترچه راهنما را در محلي نگهداري كنيد كه دسترسي به آن آسان باشد چون ممكن است به آن نياز داشته باشيد.
- بعلاوه، ساير اسناد ارائه شده با اين دستگاه را هم مطالعه نماييد.
- لطفا دقت كنيد كه اين دفترچه ممكن است براي مدلهاي ديگر هم قابل استفاده باشد.

علام و شرح آنان

اين دفترچه راهنما حاوي علائم زير است:

اطلاعات مهم يا نكات مفيد براي استفاده از دستگاه.




هشدار در مورد شرايط خطرناك براي جان افراد و خانه.



هشدار مربوط به ولتاژ برق



يخچال دفتريچه راهنمای کاربر

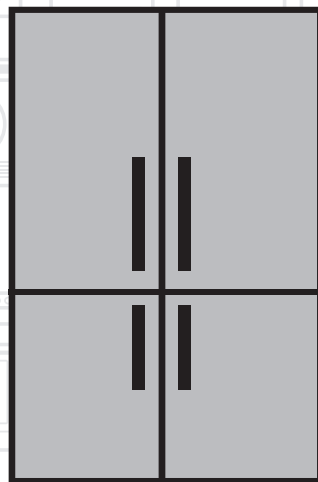

FA |

beko



58 0131 0000/AA
EN-FA



www.beko.com