

Microwave Oven

User Manual



MOF 25310 X

EN | TH

01M-8814963200-5118-01

beko

Please read this manual first!

Dear Customer,

Thank you for purchasing a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this user manual:

	Important information and useful hints about usage.
	Warnings for dangerous situations concerning the safety of life and property.
	Warning for hot surfaces.



This product has been manufactured in environmental friendly modern plants without giving any harm to the nature.

CONTENTS

ENGLISH	4-15
ไทย	16-32

1 Important safety and environmental instructions

Important Safety Instructions Read Carefully And Keep For Future Reference

This section contains safety instructions that will help protect from risk of fire, electric shock, exposure to leak microwave energy, personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses
- By clients in hotels, motels and other residential type environments;

- Bed and Breakfast type environments.
- Do not attempt to start the oven when its door is open; otherwise you may be exposed to harmful microwave energy. Safety locks should not be disabled or tampered with.
- Do not place any object between the front side and the door of the oven. Do not allow dirt or cleaning agent remnants built-up on the closure surfaces.
- Any service works involving removal of the cover that provides protection against exposure to microwave energy must be performed by authorized persons/service. Any other approach is dangerous.
- Your product is intended for cooking, heating and defrost food at home. It must not be used for commercial purposes. Manufacturer shall not be held liable for damages that have arisen from misuse.
- Do not use this appliance outdoors, bathrooms, humid environments or in places where the it can get wet.

- No responsibility or warranty claim shall be assumed for damages arising from misuse or improper handling of the appliance.
 - Never attempt to dismantle the appliance. No warranty claims are accepted for damage caused by improper handling.
 - Only use the original parts or parts recommended by the manufacturer.
 - Do not leave this appliance unattended while it is in use.
 - Always use the appliance on a stable, flat, clean dry, and non-slip surface.
 - The appliance should not be operated with an external clock timer or separate remote control system.
 - Before using the appliance for the first time, clean all parts. Please see the details given in the "Cleaning and Maintenance" section.
 - Operate the appliance for its intended purpose only as described in this manual. Do not use abrasive chemicals or steam on this appliance. This oven is particularly intended for heating and cooking the food.
- It is not intended for industrial or laboratory use.
- Do not use your appliance to dry clothes or kitchen towels.
 - Appliance becomes very hot while it is in use. Pay attention not to touch the hot parts inside the oven.
 - Your oven is not designed to dry any living being.
 - Do not operate the oven empty.
 - Only use utensils that are suitable for use in microwave ovens.
 - Cooking utensil may get hot due to the heat transferred from the heated food to the utensil. You may need oven gloves to hold the utensil.
 - Utensils shall be checked to ensure that they are suitable for use in microwave ovens.
 - Do not place the oven on stoves or other heat generating appliances. Otherwise, it may be damaged and the warranty becomes void.
 - Microwave oven must not be placed in a cabinet that is not in compliance with the installation instructions.

- Steam may come out while opening the covers or the foil after cooking the food.
- Use gloves while taking any kind of heated food out.
- The appliance and its accessible surfaces may be very hot when the appliance is in use.
- Door and outer glass may be very hot when the appliance is in use.

1.1.1 Electrical safety

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
 - Beko Microwave Ovens comply with the applicable safety standards; therefore, in case of any damage on the appliance or power cable, it should be repaired or replaced by the dealer, service center or a specialist and authorized service alike to avoid any danger. Faulty or unqualified repair work may be dangerous and cause risk to the user.
 - Make sure that your mains power supply complies with the information supplied on the rating plate of the appliance.
- The only way to disconnect the appliance from the power supply is to remove the power plug from the power outlet.
- Use the appliance with a grounded outlet only.
 - Never use the appliance if the power cable or the appliance itself is damaged.
 - Do not use this appliance with an extension cord.
 - Never touch the appliance or its plug with damp or wet hands.
 - Place the appliance in a way so that the plug is always accessible.
 - Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges. Keep the power cable away from hot surfaces and naked flame.
 - Make sure that there is no danger that the power cable could be accidentally pulled or that someone could trip over it when the appliance is in use.
 - Unplug the appliance before each cleaning and when the appliance is not in use.
 - Do not pull the power cable of the appliance to disconnect it from its power supply and never wrap its power cable around the appliance.

- Do not immerse the appliance, power cable, or power plug in water or any other liquids. Do not hold it under running water.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Remove the wire strings and/or metal handles of paper or plastic bags before placing bags suitable for use in microwave oven to the oven.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not use inside of the oven to store something. Do not leave paper items, cooking material or food inside the oven when it is not being used.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature shall be checked before consumption, in order to avoid burns.
- This appliance is a Group 2 Class B ISM equipment. Group 2 contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment.
- Class B equipment is suitable for use in domestic establishments and establishments directly connected to a low voltage power supply network.
- Door or outer surface of the appliance may become hot when it is in use.

1.1.2 Product safety

- Heating the beverages with microwave may cause them to boil by splashing around after they have been taken out of the oven; so be careful when you are holding the containers.
- Do not roast anything in the oven. Hot oil may damage the components and materials of the oven, and it may even cause skin burns.
- Pierce food with thick crust such as potatoes, zucchinis, apples and chestnuts.

- Appliance must be placed so that the rear side is facing the wall.
- Before moving the appliance, please secure the turntable to prevent damage to it.
- Eggs in their shell and whole hard-boiled eggs must not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- Never remove the parts at the rear and sides of the appliance, which protect the minimum distances between the cabinet walls and the appliance in order to allow for the required air circulation.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

1.2 Intended use

- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Cleaning the door seals and adjacent parts: Use hot soapy water. Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning.
- Do not use the appliance for anything other than its intended use.
- Do not use the appliance as a heat source.
- Microwave oven is intended to thaw, cook and stew food only.
- Do not over-cook foods; otherwise, you may cause a fire.
- Do not use steam assisted cleaners to clean the appliance.

1.3 Children's safety

- Extreme caution is advised when being used near children and persons who are restricted in their physical, sensory or mental abilities.
- This appliance can be used by the children who are at the age of 8 or over and by the people who have limited physical, sensory or mental capacity or who do not have knowledge and experience, as long as they are supervised with regard to safe use of the product or they are instructed accordingly or understand the risks of using the product. Children should not play with the appliance. Cleaning and user maintenance procedures should not be performed by children unless they are controlled by their elders.
- Danger of choking! Keep all the packaging materials away from children.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the microwave oven in a safe way and understands the hazards of improper use.
- Due to excessive heat that arises in grill and combination modes, children should only be allowed to use these modes under supervision of an adult.
- Keep the product and its power cable so that they are inaccessible by children under 8 years old.
- The appliance and its accessible surfaces may be very hot when the appliance is in use. Keep children away.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

1.4 Compliance with the WEEE Directive and Disposing of the Waste Product

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic

and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.5 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.


1.6 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Your microwave oven

2.1 Overview

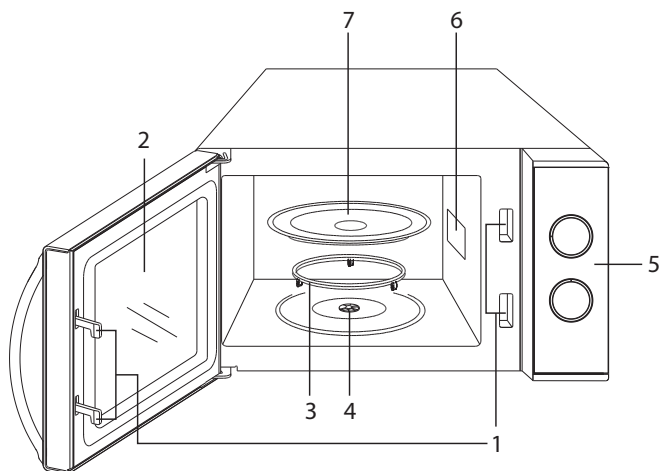

1. Door safety lock system
2. Oven window
3. Roller ring
4. Shaft
5. Control panel
6. Wave guide (Please do not remove the mica plate covering the wave guide)
7. Glass tray

2.2 Technical data

Power consumption	230 V~50 Hz, 1400 W (Microwave)
Output	900 W
Operation frequency	2450 MHz
Outside dimensions	281(H)×483(W)×418(D) mm
Oven cavity dimensions	220(H)×340(W)×344(D) mm
Oven capacity	25 l
Cooking uniformity	Turntable System
Net weight	13.9 kg

Markings on the product or the values stated in other documents supplied with the product are values obtained under laboratory conditions as per relevant standards. These values may vary according to the usage of the appliance and ambient conditions. Power values are tested at 230V.

3 Installation and connection

3.1 Installation guide

1. Make sure that all the packing materials are removed from the inside of the door.



WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.

2. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
3. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
4. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

3.2 Grounding instructions

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current.

It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.



WARNING: Improper use of the grounding plug can result in a risk of electric shock.



If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.



Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

3.3 Radio interference


Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

4 Operation

4.1 Control panel

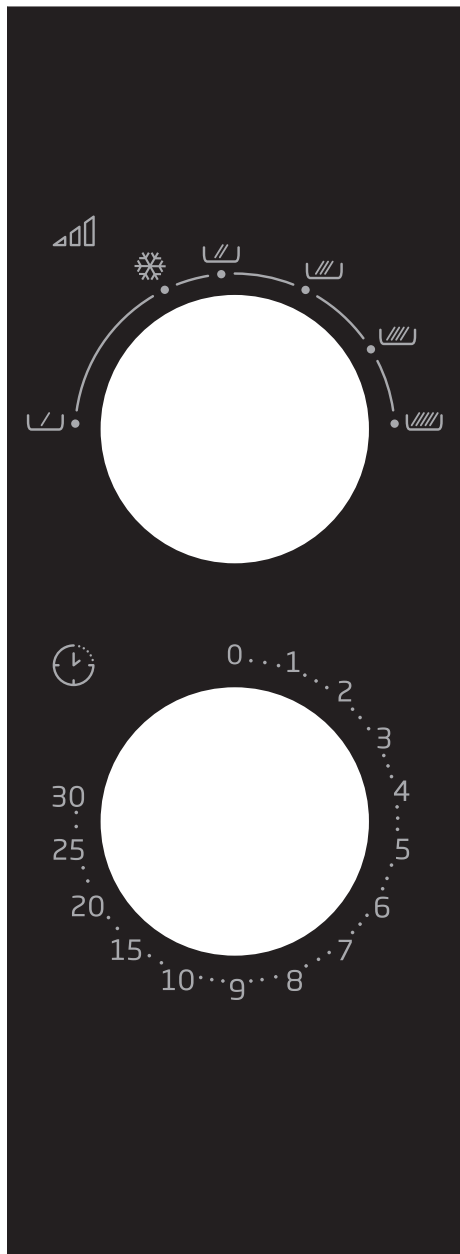

The control panel consists of two function operators. One is a time knob, and the other a power knob.

Power/Action Selector

You use this operator knob to choose a cooking power level. It is the first step to start a cooking session.

Timer Knob

Offer visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

Microwave Cooking

For pure microwave cooking, there are six power levels from which to choose one as best fit to do the job at hand.

Power level increases with the knob turning clockwise. The power levels can be classified as the following:

Power Output	Description
100%	High
88%	M.High
73%	Med
52%	M.Low
42%	Defrost
20%	Low

4 Operation

4.2 Operating instructions

To start a cooking session,

1. Place food into oven and close the door.
2. Turn Power Selector to select a power level.
3. Use Timer knob to set a cooking time.



As soon as the timer is turned, oven starts cooking. When selecting time for less than 2 minutes, turn timer past 2 minutes and then return to the correct time.



ALWAYS RETURN TIMER BACK TO ZERO POSITION if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, push the door release button or open the door by the handle.

4.3 Cooking techniques

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

4.4 Cooking utensils guide

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity. The list below is a general guide to help you select the correct utensils.

Cookware	Microwave Cooking
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminum Foil & Foil Containers	No

5 Cleaning and maintenance

5.1 Cleaning



WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

5.2 Storage

- If you do not intend to use the appliance for a long time, please store it carefully.
- Please make sure that the appliance is unplugged, cooled down and totally dry.
- Store the appliance in a cool and dry place.
- Keep the appliance out of the reach of children

5.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or the packaging. The appliance may be damaged.
- Dropping the appliance will render it non-operational or cause permanent damage..

กรุณาอ่านคู่มือผู้ใช้เล่มนี้ก่อน!

เรียนลูกค้าทุกท่าน

ขอขอบคุณสำหรับการเลือกผลิตภัณฑ์ของ Beko เราหวังว่าคุณจะได้รับประสิทธิภาพการใช้งานที่ดีที่สุดจากผลิตภัณฑ์ซึ่งได้รับการผลิตด้วยคุณภาพระดับสูงและเทคโนโลยีอันทันสมัย ขอให้ท่านอ่านทำความเข้าใจในคู่มือผู้ใช้เล่มนี้และเอกสารที่ให้มาทั้งหมดอย่างระมัดระวังก่อนการใช้งาน ผลิตภัณฑ์และเก็บรักษาไว้สำหรับการอ้างอิงในการใช้งานในอนาคต หากคุณมอบผลิตภัณฑ์ให้ผู้อื่น โปรดมอบคู่มือผู้ใช้เล่มนี้ไปพร้อมกัน ปฏิบัติตามคำเตือนและข้อมูลทั้งหมดในคู่มือผู้ใช้

ความหมายของสัญลักษณ์

สัญลักษณ์ต่อไปนี้ได้รับการใช้งานในหลายส่วนของคู่มือผู้ใช้เล่มนี้

	ข้อมูลที่สำคัญและเคล็ดลับที่มีประโยชน์เกี่ยวกับการใช้งาน
	คำเตือนสำหรับสถานการณ์ที่มีอันตรายเกี่ยวข้องกับความปลอดภัยของชีวิตและทรัพย์สิน
	คำเตือนสำหรับพื้นผิวร้อน



ผลิตภัณฑ์นี้ได้รับการผลิตในโรงงานที่เป็นมิตรต่อสิ่งแวดล้อมและทันสมัยโดยไม่ปล่อยสิ่งที่เป็นอันตรายต่อธรรมชาติ

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญ อย่างระมัดระวัง และเก็บรักษาไว้สำหรับการอ้างอิงในอนาคต

ในบทนี้ประกอบด้วยคำแนะนำด้านความปลอดภัยที่จะช่วยในการป้องกันจากความเสียหายของไฟไหม้ ไฟฟ้าดูด เสียงต่อการได้รับรังสีไมโครเวฟรั่วไหล การได้รับบาดเจ็บส่วนบุคคลหรือทรัพย์สินได้รับความเสียหาย ความล้มเหลวในการปฏิบัติตามคำแนะนำนี้จะถือว่าไม่อยู่ในการรับประกัน

1.1 ความปลอดภัยทั่วไป

- เตาอบไมโครเวฟนี้มีความตั้งใจสำหรับการใช้เพื่อให้ความร้อนแก่อาหารและเครื่องดื่ม การอบแห้งอาหารหรือเสื้อผ้าและการให้ความร้อนแก่แผ่นอุ่น ความร้อน ร่องเท้าล้าลอง ฟองน้ำ ผ้าชุบน้ำบิดหมาด ๆ และวัสดุที่คล้ายกัน อาจทำให้เกิดความเสี่ยงต่อการได้รับบาดเจ็บ การเกิดประกายไฟ

เครื่องใช้นี้มีความประสงค์เพื่อให้ใช้งานในบ้านเรือนและการใช้งานที่คล้ายกัน เช่น:

- พื้นที่ห้องครัวในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ
- โรงเรือนในไร่นา
- การใช้งานโดยลูกค้าของโรงแรม รีสอร์ทที่พัก และสภาพแวดล้อมสำหรับการพักอาศัยอื่น ๆ ที่คล้ายกัน
- สภาพแวดล้อมที่มีห้องนอนและอาหารเข้า
- ห้ามพยายามเริ่มใช้งานเตาอบเมื่อประตูเตาอบเปิดอยู่ ไม่เช่นนั้นคุณอาจมีความเสี่ยงต่อรังสีไมโครเวฟที่เป็นอันตรายได้ ห้ามปิดทำงานหรือแกะตัวล็อคเพื่อความปลอดภัย
- ห้ามวางวัตถุใด ๆ ระหว่างด้านหน้าและประตูของเตาอบ อย่าปล่อยให้สิ่งสกปรกหรือเศษตกค้างของสารทำความสะอาดก่อตัวสะสมบนพื้นผิวของฝาปิด

- งานการซ่อมบำรุงใด ๆ ที่เกี่ยวข้องกับ การถอดฝาครอบเพื่อการป้องกันความ เสี่ยงต่อรังสีไมโครเวฟออก จะต้องได้ รับการปฏิบัติโดยบุคคล/ฝ่ายบริการ ที่ได้รับการรับรองเท่านั้น การกระทำ ด้วยวิธีนอกเหนือจากนี้จะมีอันตราย
- ผลิตภัณฑ์ของคุณมีความประสงค์เพื่อ การปรุงอาหาร การให้ความร้อน และ การละลายน้ำแข็งของอาหารที่บ้าน จะต้องไม่ใช้งานเพื่อวัตถุประสงค์เชิง พาณิชย์ ผู้ผลิตจะไม่รับผิดชอบสำหรับ ความเสียหายที่เกิดขึ้นจากการใช้งาน ผิดวัตถุประสงค์
- ห้ามใช้งานเครื่องใช้นี้กลางแจ้ง ใน ห้องน้ำ สภาพแวดล้อมมีความชื้น หรือ ในสถานที่ซึ่งอาจเปียกน้ำได้
- ความรับผิดชอบและการเคลมตาม การรับประกันจะไม่ครอบคลุมความเสียหายที่เกิดขึ้นจากการใช้งานผิด วัตถุประสงค์หรือการจัดการที่ไม่ถูก ต้องของเครื่องใช้นี้
- ห้ามพยายามถอดแยกชิ้นส่วนเครื่อง ใช้ การเคลมตามการรับประกันจะไม่ ครอบคลุมความเสียหายที่เกิดจากการ จัดการที่ไม่ถูกต้อง
- ให้ใช้ชิ้นส่วนดั้งเดิมหรือชิ้นส่วนที่ได้รับ การแนะนำ จากผู้ผลิตเท่านั้น
- ห้ามทิ้งเครื่องใช้ไว้อย่างไม่สนใจในขณะ ที่ใช้งาน
- ให้ใช้เครื่องใช้นี้โดยให้อยู่บนพื้นผิว มั่นคง เรียบ สะอาด แห้ง และไม่ลื่น ไกลเสมอ
- ห้ามใช้เครื่องใช้นี้กับตัวตั้งเวลาต่อฟวง หรือระบบปริโมทคอนโทรลที่แยกจากกัน
- ก่อนใช้งานเครื่องใช้นี้ ให้ทำความ สะอาดทุกส่วนของเครื่องใช้ก่อน โปรด ดูรายละเอียดที่ให้ไว้ในส่วนหัวข้อ "การ ทำความสะอาดและการบำรุงรักษา"
- ให้ใช้งานเครื่องใช้นี้ตามวัตถุประสงค์ที่ กำหนดมาเท่านั้นซึ่งอธิบายไว้ในคู่มือ เล่มนี้ ห้ามใช้สารเคมีที่กัดกร่อนหรือ ใส่น้ำกับเครื่องใช้นี้ เตาอบนี้มีความ ประสงค์โดยเฉพาะสำหรับการให้ความ ร้อนและการปรุงอาหาร ไม่ได้ออกแบบ มาสำหรับการใช้งานเชิงพาณิชย์หรือ ในห้องทดลอง
- ห้ามใช้งานเครื่องใช้ของคุณสำหรับการ อบแห้งเสื้อผ้าหรือผ้าในห้องครัว
- เครื่องใช้จะมีความร้อนมากในขณะ ใช้งาน โปรดให้ความระมัดระวังอย่า สัมผัสกับส่วนที่มีความร้อนภายในเตา อบ
- เตาอบของคุณไม่ได้ออกแบบมา สำหรับการอบแห้งสิ่งมีชีวิต

- ห้ามใช้งานเตาอบโดยไม่มีอาหารข้างใน
- ให้ใช้กับงานเฉพาะที่เหมาะสมสำหรับการใช้งานเตาอบไมโครเวฟเท่านั้น
- เครื่องครัวสำหรับปรุงอาหารอาจได้รับความร้อนเนื่องจากการถ่ายเทความร้อนจากอาหารที่ร้อนไปยังเครื่องครัว คุณจะต้องสวมถุงมือสำหรับเตาอบเพื่อการจับยึดเครื่องครัว
- ต้องตรวจสอบเครื่องครัวเพื่อให้มั่นใจว่าเหมาะสมสำหรับการใช้ในเตาอบไมโครเวฟ
- อย่าวางเตาอบไว้บนเตาปิ้งขนมปังหรือเครื่องใช้ที่ก่อให้เกิดความร้อนอื่น ๆ มิเช่นนั้น อาจเกิดความเสียหายและการรับประกันจะสิ้นสุด
- จะต้องไม่วางเตาอบไมโครเวฟในตู้ที่ไม่สอดคล้องกับคำแนะนำในการติดตั้ง
- อาจมีไอน้ำออกมาในขณะที่เปิดฝาดรอปหรือฟอยล์หลังจากปรุงอาหารแล้ว
- ให้ใช้ถุงมือจับยึดในขณะที่นำอาหารที่ได้รับความร้อนใด ๆ ออกมา
- เครื่องใช้และพื้นผิวที่เข้าถึงได้อาจมีความร้อนสูงมากเมื่ออยู่ในระหว่างใช้งาน
- ประตูและแผ่นแก้วด้านนอกอาจมีความร้อนสูงมากเมื่ออยู่ในระหว่างใช้งาน

1.1.1 ความปลอดภัยทางไฟฟ้า

- หากสายไฟได้รับความเสียหาย จะต้องเปลี่ยนโดยผู้ผลิต ตัวแทนบริการหรือบุคคลที่ได้รับการรับรองเพื่อที่จะหลีกเลี่ยงอันตรายได้
- เตาอบไมโครเวฟของ Beko สอดคล้องกับมาตรฐานด้านความปลอดภัย ดังนั้น ในกรณีที่มีความเสียหายเกิดขึ้นกับเครื่องใช้หรือสายไฟของมัน ให้ขอรับการซ่อมแซมหรือเปลี่ยนใหม่โดยตัวแทนจำหน่าย ศูนย์บริการ หรือผู้เชี่ยวชาญและตัวแทนบริการที่ได้รับการรับรองเพื่อหลีกเลี่ยงจากอันตรายใด ๆ งานการซ่อมแซมที่ผิดพลาดหรือโดยบุคคลที่ไม่ได้รับการรับรองอาจมีอันตรายและเป็นสาเหตุในความเสี่ยงต่อผู้ใช้
- ตรวจสอบให้แน่ใจว่าแหล่งจ่ายไฟหลักของคุณจะต้องสอดคล้องกับข้อมูลที่ให้มาบนแผ่นแสดงพิกัดไฟฟ้าของเครื่องใช้ วิธีเดียวที่จะตัดการเชื่อมต่อเครื่องใช้จากแหล่งจ่ายไฟคือการถอดปลั๊กไฟออกจากเต้าเสียบไฟฟ้า
- ใช้เครื่องใช้นี้พร้อมกับเต้าเสียบที่มีการต่อสายดินเท่านั้น
- ห้ามใช้เครื่องใช้นี้หากสายไฟหรือเครื่องใช้ได้รับความเสียหาย

- ห้ามใช้งานเครื่องใช้กับสายไฟต่อพ่วง
- ห้ามสัมผัสกับเครื่องใช้หรือปลั๊กไฟของเครื่องใช้ด้วยผ้าเปียก หรือมือเปียก
- ให้วางเครื่องใช้นี้ในลักษณะที่สามารถเข้าถึงปลั๊กได้เสมอ
- พึงป้องกันความเสียหายที่จะเกิดกับสายไฟโดยไม่บิดม้วน บิดงอ หรือให้เสียดสีกับขอบคม เก็บสายไฟให้ห่างจากพื้นผิวร้อนและเปลวไฟเปิด
- ตรวจสอบให้แน่ใจว่าไม่มีอันตรายที่สายไฟที่อาจโดนดึงโดยอุบัติเหตุหรือมีใครบางคนสามารถตัดไฟเมื่อไม่ได้ใช้งานเครื่องใช้
- ให้ถอดปลั๊กไฟของเครื่องออกก่อนทำความสะอาดและเมื่อไม่ได้ใช้งาน
- ห้ามดึงสายไฟของเครื่องใช้เพื่อตัดการเชื่อมต่อจากแหล่งจ่ายไฟและห้ามพันสายไฟม้วนรอบเครื่องใช้
- ห้ามนำเครื่องใช้ สายไฟ หรือปลั๊กไฟจุ่มลงในน้ำหรือของเหลวอื่นใด ห้ามจับยึดไว้ให้ผ่านน้ำที่กำลังไหล
- เมื่อให้ความร้อนแก่อาหารในภาชนะบรรจุจากพลาสติกหรือกระดาษ ให้เฝ้าดูเตาอบเสมอเนื่องจากอาจเกิดประกายไฟขึ้นได้
- ให้ถอดสายลวดและ/หรือด้ามจับโลหะของถุงกระดาษหรือพลาสติกออกก่อนวางถุงที่เหมาะสมกับการใช้งานในเตาอบไมโครเวฟเข้าไปในเตาอบ
- หากสังเกตเห็นควัน ให้ปิดเครื่องหรือถอดปลั๊กไฟของเครื่องใช้ออกและปิดประตูไว้เสมอเพื่อให้ง่ายต่อการเปิดไฟใด ๆ
- ห้ามใช้ด้านในของเตาอบสำหรับเก็บสิ่งของใด ๆ ห้ามทิ้งสิ่งของที่เป็นกระดาษ วัสดุปรุงอาหาร หรืออาหารด้านในเตาอบไว้เมื่อไม่ได้ใช้งาน
- ให้หมูนั่นหรือเขย่าเนื้อสารในขวดนมและขวดอาหารสำหรับทารก และต้องตรวจสอบอุณหภูมิก่อนการบริโภคเพื่อหลีกเลี่ยงอาการการลวกไหม้
- เครื่องใช้นี้เป็นอุปกรณ์ ISM กลุ่ม 2 ระดับชั้น B กลุ่ม 2 ประกอบด้วยอุปกรณ์ ISM (อุตสาหกรรม วิทยาศาสตร์ และการแพทย์) ทั้งหมดที่ซึ่งก่อให้เกิดพลังงานความถี่คลื่นวิทยุอย่างตั้งใจ และ/หรือใช้ในรูปแบบของการแผ่รังสีแม่เหล็กไฟฟ้าสำหรับการเคลือบผิววัสดุ และการกักเซาะผิวของอุปกรณ์ที่กีดกร่อน
- ระดับชั้น B เหมาะสำหรับการใช้งานในสถานอาศัยบ้านเรือน และสถานที่พักที่เชื่อมต่อโดยตรงกับเครือข่ายแหล่งจ่ายไฟแรงดันไฟฟ้าต่ำ

- ประตู่หรือพื้นผิวด้านนอกของ เครื่องใช้อาจมีความร้อนเมื่ออยู่ในระหว่างการใช้งาน

1.1.2 ความปลอดภัยของผลิตภัณฑ์

- การให้ความร้อนแก่เครื่องดื่มด้วย ไมโครเวฟอาจเป็นสาเหตุให้เกิดการเดือดโดยการสาดกระจายไปทั่วหลังจากที่นำออกมาจากเตาอบ ดังนั้นพึงระมัดระวังเมื่อคุณจับยัดภาชนะบรรจุ
- ห้ามเผาสิ่งใด ๆ ในเตาอบ น้ำมันร้อน อาจทำความเสียหายให้กับชิ้นส่วนประกอบและวัสดุของเตาอบ และอาจทำให้เกิดไฟไหม้ใหม่ได้
- อาหารที่ต้องลอกเปลือกที่มีเปลือกหนา เช่น มันฝรั่ง ชูกินี แอปเปิล และเกาลัด
- จะต้องวางเครื่องใช้นี้ให้ด้านหลังหันหน้าเข้าหาผนัง
- ก่อนการเคลื่อนย้ายเตาอบ ให้ยึดแน่น ถาดหมุนให้แน่นเพื่อป้องกันความเสียหาย
- ห้ามใช้เตาอบไมโครเวฟสำหรับให้ความร้อนแก่ไขในเปลือกและไขต้มสุก เนื่องจากอาจแตกระเบิดได้ แม้แต่หลังจากที่สิ้นสุดการให้ความร้อนด้วยไมโครเวฟแล้ว

- ห้ามถอดชิ้นส่วนด้านหลังของเครื่องใช้นี้ออก ซึ่งช่วยให้ระบอบกันชนตำระหว่างผนังของตู้และเครื่องใช้เพื่อให้มีการถ่ายเทอากาศที่จำเป็น

1.2 การใช้งานที่กำหนดไว้

- หากไม่สามารถรักษาสภาพที่สะอาดของเตาอบแล้ว อาจทำให้เกิดการเสื่อมประสิทธิภาพของพื้นผิวที่อาจส่งผลกระทบต่ออายุการใช้งานของเครื่องใช้และผลลัพธ์ที่เป็นไปได้ในการเกิดสภาพการณ์ที่มีอันตราย
- การทำความสะอาดซิลประตู่และชิ้นส่วนที่ติดกัน: ใช้น้ำอุ่นผสมสบู่ ทำความสะอาดด้วยผ้าเช็ดจาน ห้ามขัดอย่างรุนแรง ห้ามใช้เครื่องขูดโลหะหรือแก้วสำหรับการทำความสะอาด
- คำเตือน: หากประตู่หรือซิลของประตู่ได้รับความเสียหาย ห้ามใช้งานเตาอบจนกว่าจะซ่อมแซมโดยบุคคลที่เชี่ยวชาญ
- คำเตือน: เป็นสิ่งที่อันตรายมากสำหรับการให้บุคคลใด ๆ นอกเหนือจากบุคคลที่มีความเชี่ยวชาญเป็นผู้ดำเนินการให้บริการหรือซ่อมแซมใด ๆ ซึ่งอาจต้องถอดฝาครอบซึ่งป้องกันความเสี่ยงของพลังงานไมโครเวฟออก

- คำเตือน: จะต้องไม่ให้ความร้อนแก่ของเหลวและอาหารอื่น ๆ ที่อยู่ในภาชนะปิดผนึกเนื่องจากอาจระเบิดได้
- เตอบจะต้องได้รับการทำความสะอาดอย่างสม่ำเสมอและขจัดคราบเกาะติดของอาหารที่อยู่ด้านในออกเสมอ
- จะต้องเว้นพื้นที่ว่างอย่างน้อย 20 ซม. เหนือพื้นผิวด้านบนของเตอบ
- ห้ามใช้เครื่องใช้สำหรับสิ่งใด ๆ ที่นอกเหนือจากวัตถุประสงค์การใช้ที่กำหนดไว้
- ห้ามใช้งานเครื่องใช้เป็นแหล่งกำเนิดความร้อน
- เตอบไมโครเวฟนี้มีความประสงค์กำหนดไว้สำหรับการละลายน้ำแข็ง การปรุงอาหาร และการอุ่นอาหารเท่านั้น
- ห้ามปรุงอาหารสุกมากเกินไป มิฉะนั้นอาจเกิดไฟไหม้ได้
- ห้ามใช้สารทำความสะอาดที่ใช้ไอน้ำช่วยในการทำความสะอาดเครื่องใช้
- เครื่องใช้นี้อาจใช้งานโดยเด็กผู้ซึ่งมีอายุอย่างน้อย 8 ปีขึ้นไปและบุคคลที่มีทักษะทางกายภาพ การรับรู้หรือทางจิตใจที่มีข้อบกพร่อง หรือผู้ซึ่งไม่มีประสบการณ์หรือไม่มีความรู้เกี่ยวกับเครื่องใช้นี้ได้ทราบที่บุคคลเหล่านั้นได้รับการควบคุมดูแลหรือได้รับแจ้งและสร้างความเข้าใจในการใช้งานอย่างปลอดภัยของเครื่องใช้และอันตรายที่อาจมี อย่าให้เด็กเล่นกับเครื่องใช้
- ขั้นตอนการทำความสะอาดและบำรุงรักษาโดยผู้ใช้จะต้องไม่ถูกปฏิบัติโดยเด็กเล็กยกเว้นได้รับการควบคุมโดยผู้ปกครองของพวกเขา
- อันตรายของการหายใจไม่ออก เก็บรักษาวาสตูบรรจุก๊าซทั้งหมดให้พ้นมือเด็ก
- ให้อนุญาตเฉพาะให้เด็กเล็กสามารถใช้งานเตอบโดยไม่มีการควบคุมดูแลเมื่อพวกเขาได้รับคำแนะนำที่เพียงพอที่เด็กเหล่านั้นสามารถใช้งานเตอบไมโครเวฟได้อย่างปลอดภัยและเข้าใจในอันตรายที่เกิดจากการใช้งานที่ไม่ถูกต้องได้

1.3 ความปลอดภัยของเด็ก

- ขอให้พึงระมัดระวังอย่างที่สุดเมื่อใช้งานเครื่องใช้นี้ใกล้กับเด็กเล็กและบุคคลที่มีข้อจำกัดด้านทักษะทางกายภาพ การรับรู้หรือทางจิตใจ

- เนื่องจากมีความร้อนส่วนเกินเกิดขึ้นในการย่างและโหมตการทำงานผสมผสาน การอนุญาตให้เด็กเล็กได้รับอนุญาตให้ใช้งานโหมตเหล่านี้ต้องอยู่ภายใต้การควบคุมดูแลของผู้ใหญ่เท่านั้น
- เก็บรักษาผลิตภัณฑ์และสายไฟไม่ให้เด็กเล็กอายุต่ำกว่า 8 ปีสามารถเข้าถึงได้
- เครื่องใช้และพื้นผิวที่เข้าถึงได้อาจมีความร้อนสูงมากเมื่ออยู่ในระหว่างใช้งาน เก็บรักษาให้พ้นมือเด็ก
- เครื่องใช้ไม่ได้ออกแบบมาสำหรับการใช้งานโดยบุคคลใด ๆ (รวมทั้งเด็กเล็ก) ที่มีทักษะทางกายภาพ การรับรู้หรือทางจิตใจมีข้อบกพร่อง หรือผู้ซึ่งไม่มีประสบการณ์หรือไม่มีความรู้เกี่ยวกับเครื่องใช้นี้ ยกเว้นได้รับการควบคุมดูแลหรือได้รับแจ้งเกี่ยวกับการใช้งานของเครื่องใช้จากบุคคลที่ดูแลรับผิดชอบ
- เด็กเล็กจะต้องได้รับการดูแลควบคุมเพื่อให้มั่นใจว่าจะไม่ไปเล่นกับเครื่องใช้นี้

- คำเตือน: ให้อนุญาตเฉพาะให้เด็กเล็กสามารถใช้งานเตาอบโดยไม่มีการควบคุมดูแลเมื่อพวกเขาได้รับคำแนะนำที่เพียงพอที่เด็กเหล่านั้นสามารถใช้งานเตาอบไมโครเวฟได้อย่างปลอดภัยและเข้าใจในอันตรายที่เกิดจากการใช้งานที่ไม่ถูกต้องได้

1.4 ความสอดคล้องต่อข้อกำหนด

WEEE และการกำจัดขยะของผลิตภัณฑ์




เครื่องใช้ไม่มีวัสดุที่เป็นอันตรายและถูกห้ามตามที่กำหนดไว้ในข้อกำหนด “กฎระเบียบสำหรับการควบคุมดูแลขยะเครื่องใช้ไฟฟ้าและอิเล็กทรอนิกส์” ที่ออกให้โดยกระทรวงสิ่งแวดล้อมและการวางแผนสำหรับเมืองสอดคล้องกับข้อกำหนด WEEE ผลิตภัณฑ์นี้ได้ถูกผลิตขึ้นมาด้วยชิ้นส่วนและวัสดุที่มีคุณภาพสูงซึ่งสามารถทำการนำกลับมาใช้ใหม่ได้และเหมาะสำหรับการเข้ากระบวนการนำกลับมาทำใหม่

ดังนั้น อย่างการจัดผลิตภัณฑ์นี้ไปกับขยะภายในบ้านเมื่อถึงจุดที่หมดอายุการใช้งานแล้ว ให้นำไปยังจุดรวบรวมขยะสำหรับการนำกลับมาใช้ใหม่ของผลิตภัณฑ์เครื่องใช้ไฟฟ้าและอิเล็กทรอนิกส์ สอบถามจากหน่วยงานที่มีอำนาจในท้องถิ่นของคุณสำหรับจุดเก็บรวบรวมขยะดังกล่าว โปรดช่วยกันป้องกันสิ่งแวดล้อมและทรัพยากรธรรมชาติโดยการรีไซเคิลเครื่องใช้ที่ใช้งานแล้ว

1.5 ข้อมูลด้านบรรจุภัณฑ์



วัสดุบรรจุภัณฑ์ของผลิตภัณฑ์นี้จะถูกผลิตมาจากวัสดุนำกลับมาทำใหม่ได้ซึ่งเป็นไปตามกฎหมายแห่งชาติของเรา อย่ากำจัดวัสดุบรรจุภัณฑ์เหล่านี้ไปกับขยะภายในบ้านหรือกากของเสียอื่นๆ ให้แยกทิ้งวัสดุบรรจุภัณฑ์เหล่านี้ ณ จุดรวมที่กำหนดไว้โดยหน่วยงานที่มีอำนาจดูแลด้านนี้ของท้องถิ่นประเทศนั้น

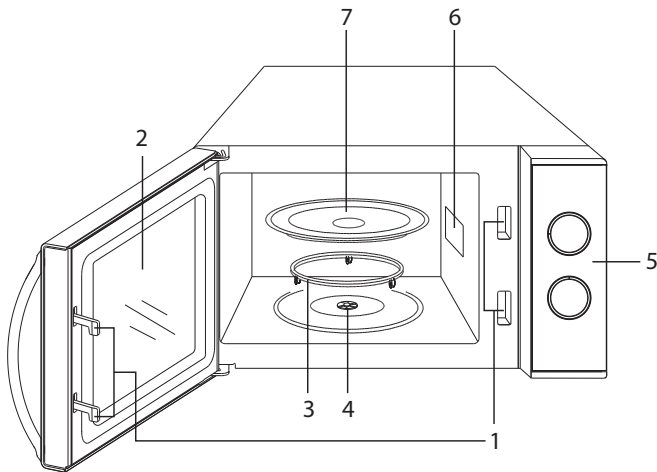

1. ระบบล็อกประตูนิรภัย
2. หน้าต่างเตา
3. แหวนรองจานหมุน
4. เฟลา
5. แผงควบคุม
6. ตัวนำทางคลื่น (ห้ามตั้งแผ่นปิดตัวนำคลื่นออก)
7. ถาดแก้ว

พลังงานที่ใช้	220V/50 เฮิร์ตซ์, 1400 วัตต์ (ไมโครเวฟ)
พลังงานที่จ่ายออก	900 วัตต์
ความถี่ในการใช้งาน	2450 เมกะเฮิร์ตซ์
ขนาดภายนอก	สูง 281 มม. × กว้าง 483 มม. × ลึก 418 มม.
ขนาดห้องเตา	สูง 220 มม. × กว้าง 340 มม. × ลึก 344 มม.
ความจุเตา	25 ลิตร
ความสม่ำเสมอในการทำอาหาร	ระบบหมุน
น้ำหนักสุทธิ	ประมาณ 13.9 กก.

เครื่องหมายต่าง ๆ บนเครื่องใช้หรือคำต่าง ๆ ที่ระบุไว้ในเอกสารอื่น ๆ ที่ให้มากับผลิตภัณฑ์เป็นค่าที่ได้มาจากเงื่อนไขในห้องทดลองตามมาตรฐานที่เกี่ยวข้อง ค่าเหล่านี้อาจแปรผันโดยขึ้นอยู่กับการใช้งานเครื่องใช้และเงื่อนไขแวดล้อม

3.1 คำแนะนำในการติดตั้ง

1. ตรวจสอบให้แน่ใจว่าถอดวัสดุบรรจุออกจากด้านในประตูเรียบร้อยแล้ว



คำเตือน: ตรวจสอบความเสียหายของเตาไมโครเวฟ เช่น การเอียง หรือประตูเบี้ยว ขอบประตูและฝารอบประตูชำรุด บานพับประตูหลุดหรือชำรุด และรอยบุ๋มด้านในห้องหรือประตู ถ้ามีความเสียหายใดๆ ห้ามใช้เตาโดยเด็ดขาด และติดต่อช่างบริการผู้ชำนาญการ

2. วางเตาไมโครเวฟบนพื้นผิวที่เรียบและมั่นคง เพื่อให้รับน้ำหนักของเตาและน้ำหนักอาหารที่หนักที่สุดซึ่งมีแนวโน้มจะต้องอุ่นในเตาได้
3. ห้ามวางเตาในบริเวณที่มีความร้อนหรือความชื้นสูง หรือใกล้วัตถุไวไฟ
4. เพื่อการใช้งานอย่างถูกต้อง เตาต้องมีการระบายอากาศที่เพียงพอ ด้วยระยะห่างด้านบนอย่างน้อย 20 ซม. ด้านหลัง 10 ซม. และด้านข้างทั้งสองด้าน 5 ซม. โดยห้ามคลุมหรือปิดช่องเปิดใดๆ บนเครื่องใช้ และห้ามถอดฐานรอง
5. ห้ามใช้งานเตาไมโครเวฟโดยไม่มีภาชนะบรรจุอาหาร และเพลา ติดตั้งอยู่ในตำแหน่งที่เหมาะสม
6. ตรวจสอบให้แน่ใจว่าสายไฟอยู่ในสภาพดี ไม่ชำรุด และไม่อยู่ใต้เตา หรือพื้นผิวที่ร้อนหรือคม

7. ปลั๊กเสียบต้องพร้อมให้เข้าถึงได้ เพื่อให้ถอดปลั๊กได้ง่ายในกรณีฉุกเฉิน
8. ห้ามใช้เตาบริเวณกลางแจ้ง

3.2 คำแนะนำในการต่อสายดิน

เครื่องใช้ไฟฟ้าชนิดนี้ต้องต่อสายดิน ให้ติดตั้งเตาด้วยสายไฟที่มีสายดินและปลั๊กต่อสายดิน โดยเสียบปลั๊กเข้ากับเต้ารับที่ผนังซึ่งติดตั้งและต่อสายดินอย่างเหมาะสม ในกรณีที่เกิดไฟฟ้าลัดวงจร

ทั้งนี้ขอแนะนำให้แยกวงจรให้ใช้สำหรับเตาไมโครเวฟเท่านั้น การใช้ความต่างศักย์สูงเป็นสิ่งที่อันตรายและอาจส่งผลให้เกิดไฟไหม้หรืออุบัติเหตุอื่นๆ ที่ทำให้เตาไมโครเวฟเกิดความเสียหาย



คำเตือน: สายดินจะช่วยลดความเสี่ยงของไฟฟ้าช็อตด้วยการให้สายไฟสำหรับให้กระแสไฟฟ้าไหลลงดิน



หากมีคำถามเกี่ยวกับ คำแนะนำทางไฟฟ้าและการต่อสายดิน ให้ปรึกษาช่างไฟหรือผู้ให้บริการที่ชำนาญการ



ผู้ผลิตและตัวแทนจำหน่ายจะไม่รับผิดชอบต่อความเสียหายของเตาไมโครเวฟหรือการบาดเจ็บของบุคคล ในกรณีที่เกิดขึ้นเนื่องจากไม่ได้ทำตามคำแนะนำในการเชื่อมต่อไฟฟ้า

ลวดในสายไฟหลักมีสีต่างๆ ดังต่อไปนี้

สีเขียวและสีเหลือง = สายดิน (Earth)

สีน้ำเงิน = สายเส้นศูนย์ (Neutral)

สีน้ำตาล = สายไฟ (Live)


3.3 การรบกวนคลื่นวิทยุ

การทำงานของเตาไมโครเวฟอาจก่อให้เกิดการรบกวนคลื่นวิทยุ ทีวี หรืออุปกรณ์ที่คล้ายคลึงกัน โดยเมื่อมีการรบกวนเกิดขึ้น สามารถลดหรือกำจัดการรบกวนได้ด้วยมาตรการต่างๆ ดังต่อไปนี้

1. ทำความสะอาดประตูและพื้นผิวขอบประตูเตา
2. ปรับเสารับสัญญาณวิทยุหรือโทรทัศน์
3. ย้ายเตาไมโครเวฟออกจากทิศทางของเครื่องรับสัญญาณ
4. ย้ายเตาไมโครเวฟออกให้ห่างจากเครื่องรับสัญญาณ
5. เสียบปลั๊กเตาไมโครเวฟเข้ากับช่องไฟแยกต่างหาก เพื่อให้เตาไมโครเวฟและตัวรับสัญญาณอยู่ที่วงจรสาขาต่างกัน

4 การใช้งานผลิตภัณฑ์ของคุณ

4.1 แผงควบคุม

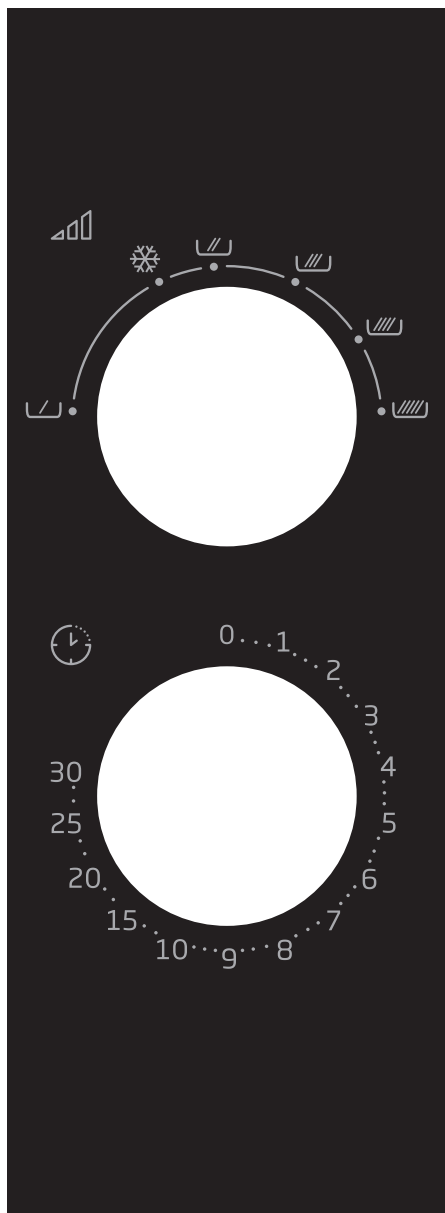

แผงควบคุมประกอบด้วยอุปกรณ์ทำงาน 2 ฟังก์ชัน หนึ่งคือลูกบิดปรับเวลาและอีกปุ่มควบคุมสำหรับปรับระดับความร้อน

ปุ่มปรับระดับความร้อน

หมุนปุ่มเพื่อเลือกระดับความร้อนในการปรุงอาหาร เป็นขั้นตอนแรกในการเริ่มทำอาหาร

ปุ่มตั้งเวลา

กำหนดการตั้งเวลาด้วยการใช้มือบิดหมุนเพื่อเลือกเวลาการทำอาหารที่ต้องการ โดยสามารถตั้งค่าเวลาได้ถึง 30 นาทีต่อการทำอาหาร 1 ครั้ง

การทำอาหารด้วยไมโครเวฟ

การปรุงอาหาร สามารถปรับหมุนได้ทั้งหมด 6 ระดับ โดยการปรับหมุนระดับตามความเหมาะสมด้วยมือบิด

ระดับความร้อนสามารถปรับได้ดังต่อไปนี้

กำลังไฟ	รายละเอียด
100%	สูง (High)
88%	สูงปานกลาง (M.High)
73%	กลาง (Med)
52%	ต่ำปานกลาง (M.Low)
42%	ละลายน้ำแข็ง (Defrost)
20%	ต่ำ (Low)

4.2 คำแนะนำในการใช้งาน

การเริ่มต้นการทำอาหาร

1. ใส่อาหารเข้าไปในเตาไมโครเวฟ และปิดประตู
2. เลือก Power Selector เพื่อเลือกกระดัดพลังงาน
3. ใช้ปุ่มตั้งเวลาเพื่อตั้งเวลาในการประกอบอาหาร



หมายเหตุ: ทันทีที่จับเวลาเปิดเตาอบเริ่มทำอาหาร เมื่อเลือกเวลาน้อยกว่า 2 นาที ให้หมุนตัวจับเวลาที่ผ่านมา 2 นาทีแล้วกลับสู่เวลาที่เหมาะสม



ข้อควรระวัง: ให้กลับไปที่ตั้งตำแหน่ง 0 ถ้าอาหารถูกนำออกจากเตาอบก่อนเวลาที่กำหนดหรือเมื่อไม่ใช่เตาอบ ในการปิดเตาอบระหว่างกระบวนการทำอาหารให้กดปุ่มปลดล็อคประตูหรือเปิดประตูโดยใช่มือจับ

4.3 เทคนิคการทำอาหาร

1. จัดวางอาหารอย่างระมัดระวัง หันส่วนที่หนาที่สุดออกด้านนอกจาน
2. ดูเวลาทำอาหาร ใช้เวลาที่สั้นที่สุดที่ระบุไว้แล้วจึงเพิ่มเวลาตามที่ต้องการ อาหารที่สุกเกินไปอาจทำให้เกิดควันและติดไฟได้
3. ครอบอาหารขณะทำอาหาร เพื่อป้องกันการกระจ่ายและช่วยให้อาหารสุกสม่ำเสมอ
4. พลิกอาหารหนึ่งครั้งระหว่างทำอาหารด้วยไมโครเวฟเพื่อเร่งเวลาทำอาหาร เช่น ไก่

และแฮมเบอร์เกอร์ ส่วนอาหารชิ้นใหญ่เช่นเนื้อย่าง ต้องกลับด้านอย่างน้อยหนึ่งครั้ง

5. จัดเรียงอาหาร เช่น ลูกชิ้น ให้ระหว่างทำอาหาร ทั้งจากบนไปล่าง และจากกลางจานไปถึงด้านนอก

4.4 คำแนะนำเกี่ยวกับภาชนะทำอาหาร

1. คลื่นไมโครเวฟไม่สามารถแพร่ผ่านโลหะได้ ให้ใช้ภาชนะที่เหมาะสมสำหรับใช้งานในเตาไมโครเวฟเท่านั้น ห้ามใช้บรรจุภัณฑ์โลหะสำหรับอาหารและเครื่องดื่ระหว่างทำอาหารด้วยไมโครเวฟ ข้อกำหนดนี้ไม่ได้บังคับใช้ถ้าผู้ผลิตระบุขนาดและรูปร่างของบรรจุภัณฑ์โลหะที่เหมาะสมสำหรับการทำอาหารด้วยไมโครเวฟ
2. คลื่นไมโครเวฟไม่สามารถแพร่ผ่านโลหะ ดังนั้นไม่ควรใช้ภาชนะโลหะหรือจานที่มีขอบโลหะ
3. ห้ามใช้ผลิตภัณฑ์กระดาศรีไซเคิลเมื่อทำอาหารด้วยไมโครเวฟ เพราะอาจมีส่วนประกอบโลหะเล็กน้อย ซึ่งจะทำให้เกิดประกายไฟและ/หรือไฟไหม้
4. ขอแนะนำให้ใช้จานกลมหรือจานรีมากกว่าจานสี่เหลี่ยม เพราะอาหารที่อยู่บริเวณขอบจานจะสุกเกินไป

4 การใช้งานผลิตภัณฑ์ของคุณ

5. สามารถใช้แถบแคบๆ ของฟอยล์อลูมิเนียมป้องกันไม่ให้อาหารสุกเกินไป แต่ต้องระวังว่า อย่าใช้มากเกินไป และเว้นระยะห่างระหว่างฟอยล์กับห้องเตาประมาณ 1 นิ้ว (2.54 ซม.) รายการด้านล่างนี้เป็นแนวทางที่ช่วยให้คุณเลือกภาชนะได้อย่างถูกต้อง

บรรจุภัณฑ์สำหรับอุ่นอาหาร	การทำอาหารด้วยไมโครเวฟ
แก้วทนความร้อน	ได้
แก้วไม่ทนความร้อน	ไม่ได้
เซรามิกทนความร้อน	ได้
จานพลาสติกทนไมโครเวฟ	ได้
กระดาษสำหรับใช้ในครัว	ได้
ถาดโลหะ	ไม่ได้
ตะแกรงโลหะ	ไม่ได้
ฟอยล์อลูมิเนียม และกล่องใส่ฟอยล์	ไม่ได้

5.1 การทำความสะอาด

1. ปิดเตาไมโครเวฟและถอดปลั๊กไฟเมื่อทำความสะอาด
2. ทำความสะอาดด้วยน้ำอุ่นและสบู่อ่อนๆ ใช้ผ้าเปียกหมาดเช็ดให้แห้ง ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์รุนแรง
3. ด้านนอกของเตาอบควรทำความสะอาดด้วยผ้าชุบน้ำหมาด ๆ เพื่อป้องกันไม่ให้ชิ้นส่วนอุปกรณ์ชำรุดเสียหาย ภายในเตาไมโครเวฟอย่าให้น้ำไหลซึมเข้าช่องระบายอากาศ
4. เช็ดประตูทั้งด้านนอกและด้านใน ควรใช้ผ้าเปียกหมาดเช็ดทำความสะอาดบริเวณประตูและส่วนที่ติดกัน เพื่อขจัดรอยเปื้อนหรือเศษอาหารที่กระเด็นออกมา ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์รุนแรง
5. ไม่ใช้เครื่องทำความสะอาดแบบใช้ไอน้ำ
6. อย่าให้แผงควบคุมเปียกน้ำ ทำความสะอาดด้วยผ้านุ่มชุบน้ำหมาด ๆ เมื่อทำความสะอาดแผงควบคุมทั้งฝาเตาอบไว้เพื่อป้องกันไม่ให้เตาไมโครเวฟเปิดเอง
7. ถ้าไอสะสมอยู่ภายในหรือรอบ ๆ ด้านนอกของประตูเตาให้เช็ดด้วยผ้านุ่ม ๆ ซึ่งอาจเกิดขึ้นเมื่อเตาไมโครเวฟทำงานภายใต้สภาวะที่มีความชื้นสูงซึ่งเป็นเรื่องปกติ
8. บางครั้งจำเป็นต้องถอดถาดแก้วออกเพื่อทำความสะอาด ถาดถาดด้วยน้ำอุ่นหรือในเครื่องล้างจาน
9. ควรทำความสะอาดแหวนลูกกลิ้งและพื้นเตาอบอย่างสม่ำเสมอเพื่อไม่ให้เกิดเสียงดังมากเกินไป เพียงเช็ดพื้นผิวด้านล่างของเตาอบด้วยผัซฟอกอ่อน ๆ แหวนลูกกลิ้งอาจล้างด้วยน้ำอุ่นหรือในเครื่องล้างจาน เมื่อถอดแหวนลูกกลิ้งออกให้ใส่ในตำแหน่งที่เหมาะสม
10. ดับกลิ่นออกจากเตาอบของคุณโดยการนำผลไม้ และผิวของมะนาวในซามไมโครเวฟใช้ไมโครเวฟเป็นเวลา 5 นาที เช็ดให้สะอาดและแห้งด้วยผ้านุ่ม ๆ
11. ถ้าหลอดไฟไหม้ กรุณาติดต่อฝ่ายบริการลูกค้าเพื่อขอให้เปลี่ยนใหม่
12. ควรทำความสะอาดเตาอบอย่างสม่ำเสมอ และควรนำเศษอาหารออก การไม่รักษาเตาอบในสภาพที่สะอาดอาจนำไปสู่การเสื่อมสภาพของพื้นผิวที่อาจส่งผลเสียต่ออายุการใช้งานของเครื่องและอาจส่งผลให้เกิดสถานการณ์อันตรายได้
13. อย่าทิ้งเครื่องนี้ลงในถังขยะทั่วไป ควรทิ้งเฉพาะที่เทศบาลได้จัดเตรียมไว้

5.2 การขนส่งเคลื่อนย้าย

- ถอดปลั๊กไฟของเตาอบ
- บรรจุถาดแก้วในลักษณะที่ป้องกันการแตก และการเคลื่อนไหวภายในเตาอบ ขนส่งโดยแยกจากกันหากจำเป็น
- พันเทปประตูด้านหน้าเข้ากับตัวเครื่อง
- ป้องกันการกระแทกที่แผ่นแก้วด้านหน้าประตู และแผงควบคุม
- ขนส่งผลิตภัณฑ์โดยวางในตำแหน่งปกติ อย่างวางเอาด้านข้างหรือด้านหลังขึ้น

