


Dryer

User Manual

เครื่องอบแห้ง
คู่มือผู้ใช้

DE 8433 GAOW

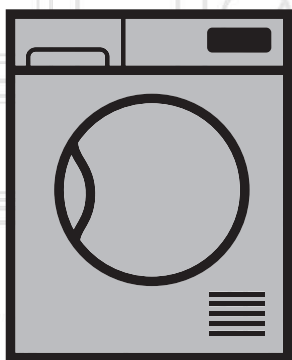

EN | TH

2960311265_EN/251116.0922

beko

Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Use this user manual for the model indicated on the cover page.

	Read the instructions.
--	------------------------

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning against electric shock.
	Warning against hot surfaces.
	Warning against fire hazard.
	Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.



This product was manufactured using the latest technology in environmentally friendly conditions.

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

Important instructions for safety and environment

1.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.



The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.

Important instructions for safety and environment



Damaged mains cable should be changed notifying the Authorized Service.



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

1.1.2 Product safety



Superheating of the clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running, this concentration of heat can cause self-combustion and fire so always activate the ventilation programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.



Points to be taken into consideration for fire hazard:

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.

Important instructions for safety and environment



Below specified laundry or items must not be dried in the dryer due to the fire hazard:

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.
 - Clothing cleaned with industrial chemicals.
- Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer.
- Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.



Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.



Use softeners and similar products in accordance with the instructions of their manufacturers.



Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

Important instructions for safety and environment

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.
- The lint must not be allowed to accumulate around the tumble dryer

1.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Important instructions for safety and environment

Installation Table for Washing Machine and Dryer							
Dryer Depth	Washing Machine Depth						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Can be installed					Can be installed	Cannot be installed
60 cm	Can be installed					Cannot be installed	

1.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

1.4 Child safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.




Child-proof lock is on the control panel.
(See Child lock)

- Keep loading door closed even when the dryer is not in use.

Important instructions for safety and environment

1.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

■ This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Important instructions for safety and environment

1.8 Technical Specifications

EN	
Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,5 cm
Depth	60,9 cm
Capacity (max.)	8 kg**
Net weight (plastic front door usage)	49 kg
Net weight (glass front door usage)	51 kg
Voltage	See type label***
Rated power input	
Model code	

* Min. height: Height with adjustable feet are closed.

Max. height: Height with adjustable feet are opened maximum.


** Dry laundry weight before washing.

*** Type label is located behind the loading door.

	Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.
	Figures in this manual are schematic and may not match the product exactly.
	Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.

2 Your Dryer

2.1 Package Contents

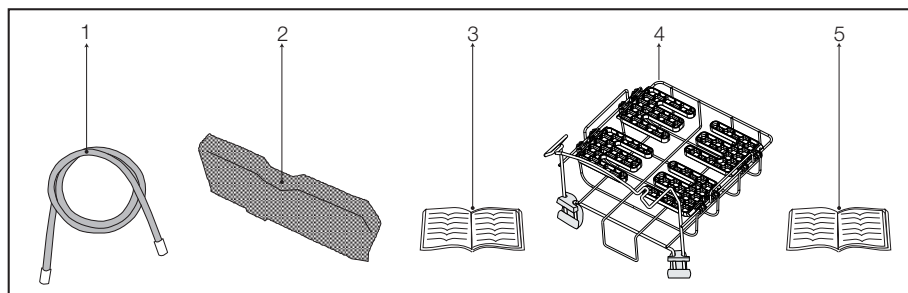

1. Water drain hose *
2. Filter drawer spare sponge*
3. User Manual
4. Drying basket*
5. Drying basket user manual*

*It can be supplied with your machine depending on its model.

3 Installation

Before the calling the nearest Authorized Service for the installation of the dryer, ensure that electrical installation and water drain is appropriate referring to the user's manual. **(See 3.3 Connecting to the drain and 3.5 Electrical connection)** If they are not suitable, contact a qualified electrician and technician to make necessary arrangements.



Preparation of the dryer's location as well as the electrical and waste water installations is under customer's responsibility.



Prior to installation, visually check if the dryer has any defects on it. If the drier is damaged, do not have it installed. Damaged products cause risks for your safety.



Let your dryer wait for 12 hours before starting to use it.

3.1 Appropriate installation location

Install the dryer on a stable and level surface. Dryer is heavy. Do not move it by yourself.

- Operate your dryer in a well ventilated, dust-free environment.
- The gap between the dryer and the surface should not be reduced by the materials such as carpet, wood and tape.
- Do not cover the ventilation grills of the dryer.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Once the dryer is installed, it should stay at the same place where its connections have been made. When installing the dryer, make sure that its rear wall does not touch anywhere (tap, socket, etc.).
- Place the dryer at least 1 cm away from the edges of other furniture.
- Your dryer can be operated at temperatures between +5°C and +35°C. If the operating conditions fall outside of this range, operation of the dryer will be adversely affected and it can get damaged.

- The rear surface of the tumble dryer shall be placed against a wall.




Do not place the dryer on the power cable.

3.2 Removing the transportation safety assembly



Remove the transportation safety assembly before using the dryer for the first time.

- Open the loading door.
- There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with **XX XX**.
- Pull the nylon towards yourself and remove the transportation safety assembly.

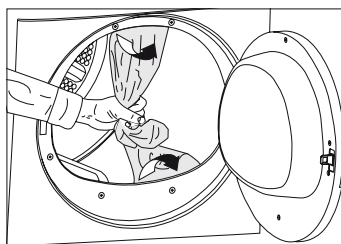

Check that no part of the transportation safety assembly remains inside the drum.

Installation


3.3 Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle.

You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

Connecting the water drain hose

- 1-2** Pull hose at the behind of the dryer by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.
- 3** Connect one end of the drain hose supplied with the dryer to the connection point from where you removed the hose of the product in previous step.
- 4** Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.

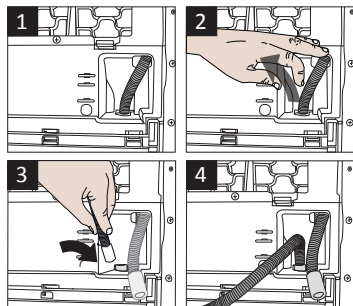

Hose connection should be made in a safe manner. Your drain house will be flooded if the hose comes out of its housing during water discharge.




Water drain hose should be attached to a height of maximum 80 cm.



Make sure that the water drain hose is not stepped on and it is not folded between the drain and the machine.

3.4 Adjusting the feet

- In order to ensure that the dryer operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.
- Turn the feet to left or right until the dryer stands level and firmly.

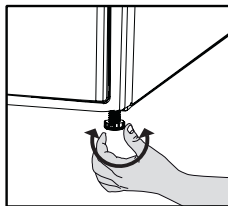

Never unscrew the adjustable feet from their housings.

3.5 Electrical connection

For specific instructions for electrical connection required during installation (see 1.1.1

Electrical Safety)

3.6 Transportation of the dryer

Unplug the dryer before transporting it. Drain all water that has remained in the dryer.

If direct water drain connection is made, then remove the hose connections.




We recommend carrying the dryer in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front.

Installation


3.7 Warnings about sounds



It is normal to hear a metallic noise from the compressor sometimes during operation.

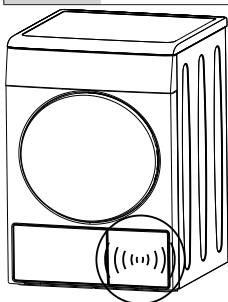

Water collected during operation is pumped to water tank. It is normal to hear pumping noise during this process.

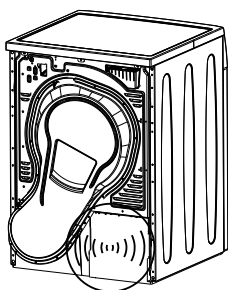

3.8 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer. To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service.

The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way. The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C

4 Preparation

4.1 Laundry suitable for drying in the dryer

- Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS											
	Drying Symbols	 Suitable for dryer	 No Iron	 Sensitive / Delicate dry	 Do not dry with dryer	 Do not dry	 Do not dry-clean				
	Drying Settings	 At any temperature	 At high temperature	 At medium temperature	 At low temperature	 Without heating	 Hang to dry	 Lay to dry	 Hang wet to dry	 Lay in shadow to dry	 Dry-cleanable
 IRON	Iron -										
	Dry or Steam	Iron at high temperature		Iron at medium temperature		Iron at low temperature		Do not iron		Iron without steam	
	Maximum temperature	200 °C		150 °C		110 °C					

4.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woollen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

4.3 Preparing laundry for drying

- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.
- Fasten the zippers, hooks and buckles and button sheets.

4.4 Things to be done for energy saving

Following information will help you use the dryer in an ecological and energy-efficient manner.


- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and table clothes dries earlier than thick bathroom towels.
- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add wet laundry while the dryer is in operation

Preparation

- Clean the lint filter before or after each drying cycle. **(See 6.1 Cleaning Lint Filter / Loading Door Inner Surface)**
- Clean the filter periodically when there is visible air collection on it or when the symbol lights up, if there is a filter drawer cleaning warning symbol «» available. **(See 6. 4 Cleaning the filter drawer)**
- Ventilate the room, where the dryer is located, well during drying.

4.5 Correct load capacity

Follow the instructions in the “Programme selection and consumption table”. Do not load more than the capacity values stated in the table.

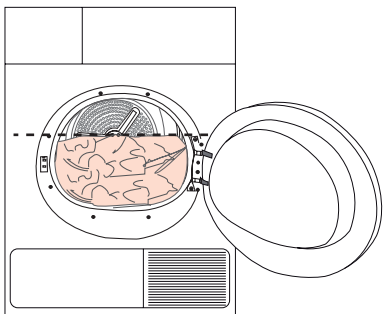

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples.

Laundry	Approximate weights (g)*
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

*Dry laundry weight before washing.


5 Operating the product

5.1 Control panel

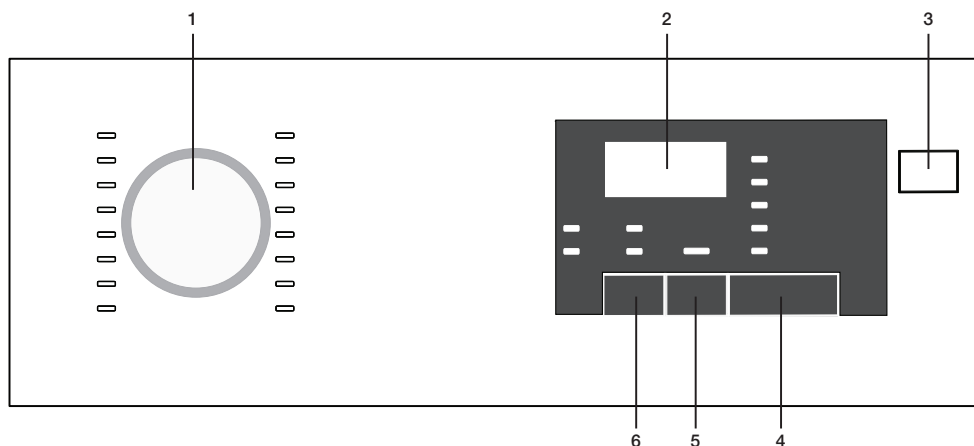

1. Program selection knob
2. Remaining duration indicator
3. On/Off button
4. Start/pause button
5. End duration button
6. Sound warning button

5.2 Screen symbols

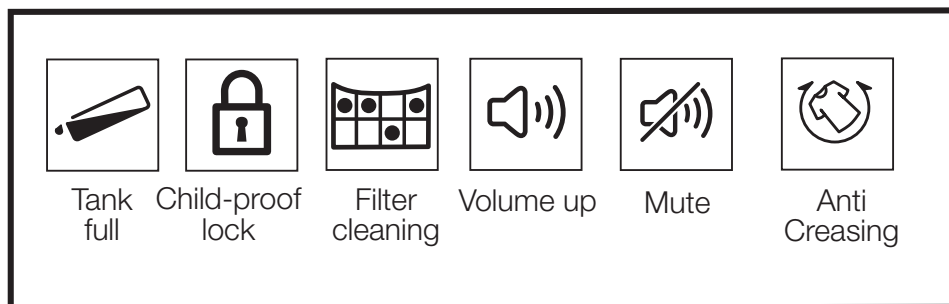

Operating the product

5.3 Preparing the machine

1. Plug in the machine
2. Place laundry inside the machine.
3. Press the On/Off button.
4. When your machine turns on for the first time, it turns on with the declaration (cotton cabinet dryness) program.



Pressing the On/Off button doesn't mean the program starts. Press the Start / Pause button to start the program.

5.4 Program selection

1. Determine the appropriate program from the chart below containing the drying levels.
2. Select the program you desire using the Program Selection knob.

Extra Dry	Only cotton laundry is dried in normal temperature. Thick and multi-layered laundry (towels, sheets, jeans etc.) are dried so that they can be placed into wardrobe without ironing.
Cupboard dry	Normal laundry (tablecloths, underwear etc.) are dried so that they can be placed into wardrobe without ironing.
Cupboard dry +	Normal laundry (Ex: tablecloths, underwear) are again dried so that they can be placed into the wardrobe but more so than the wardrobe dryness option.
Iron Dry	Normal laundry (shirts, dresses etc) are dried ready for ironing.



For detailed program information see. „Program selection and consumption table“..

5.5 Main programs

The main programs are given below based on fabric type.

• Cotton

Dry durable laundry with this program. It dries in normal temperature. Recommended for use with your cotton laundry (sheets, bed covers, towels, bathrobes etc.)

• Synthetic

Dry laundry that is not very durable with this program. Recommended for use with your synthetic laundry.

5.6 Extra programs

The following extra programs are available in the machine for special conditions.



Extra programs may vary according to the specifications of your machine.



In order to receive better results from drying machine programs, your laundry should be washed with the appropriate program in your washing machine and wringed with recommended wringing revolution..

• Jeans

Use to dry jeans that are wringed with high rpm in washing machine.

• Sport

Use to dry laundry made from synthetic, cotton or mixed fabrics.

• Express

You can use this program to dry cotton laundry that you had wringed in high rpm in your washing machine. It dries 1 kg of your Cotton laundry (3 shirts / 3 T-shirts) in 50 minutes.

• Daily

Program for daily drying of cotton and synthetic laundry and lasts 80 minutes.

• Shirts

Dries shirts more delicately and thus causes less wrinkles for easy ironing.

Operating the product

- **BabyProtect**

Program used for baby clothing which can be dried approval on the label.



Very little dampness might remain on the shirts after the program. It is recommended that you do not leave the shirts in the drying machine.

- **Delicates**

You can dry your delicates suitable for drying or laundry that is recommended to hand wash (silk blouses, thin underwear etc.) in low temperature.



It is recommended to dry your delicates in laundry bag to prevent wrinkles and damage. When the program ends, take your laundry out of the machine immediately and hang them to prevent wrinkles.

- **Refresh**

It only performs ventilation for 10 minutes without blowing hot air. You can ventilate the cotton and linen clothing that has remained closed for a long duration and remove their odor.

- **Timed programmes**

You can select the 30 mins and 45 mins time programs to achieve the desired final drying level with low temperature.



On this program, the machine dries as long as the set duration, regardless of the drying level.

Operating the product

5.7 Program selection and consumption table

EN					
Programs		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloreds					
	Extra dry	8	1000	% 60	190
	Cupboard dry	8 / 4	1000	% 60	179 / 104
	Iron dry	8	1000	% 60	150
Shirts		1,5	1200	% 60	50
Jeans		4	1200	%50	120
Daily		4	1200	%50	90
Sport		4	1000	%60	105
Express		1	1200	%50	45
Delicates		2	600	%40	55
Babyprotect		3	1000	% 60	80
Synthetics					
	Cupboard dry	4	800	% 40	70
	Iron dry	4	800	% 40	55
Energy consumption values					
Programs		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption kWh
Cottons linen Ready to wear*		8 / 4	1000	% 60	1,92 / 1,03
Cottons Ready to iron		8	1000	% 60	1,5
Synthetics Ready to wear		4	800	% 40	0,75
Power consumption of the off-mode for the standart cotton programme at full load, PO (W)					0,5
Power consumption of the left-on mode for the standart cotton programme at full load, PL (W)					1,0
Contains fluorinated greenhouse gases covered by the Kyoto Protocol. Hermetically sealed. R134a / 0,30 kg - GWP:1430 - 0,429 tCO ₂ e					

	„Cotton cupboard dry programme“ used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.
--	---

* : Energy Label standard program (EN 61121:2012) “All the filters must be cleaned prior to test series.”

All the values in the table are determined according to EN 61121:2012 standard. Consumption values may vary from the values in the table depending on laundry type, wringing revolution, ambient conditions and changes in voltage.

Operating the product

5.8 Auxiliary functions

Sound warning cancel

Drying machine makes sound warnings when the program is completed. If you don't want sound notifications, press the "Sound Notification" button.

When you press the sound notification button it lights up, and program does not make sound notifications when completed.



You can select this function before or after the program starts.


5.9 Warning symbols



Warning symbols may vary according to the specifications of your machine.

Fiber filter cleaning

When the program is completed, a warning led lights up, which indicates that the filter has to be cleaned.

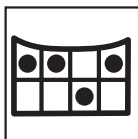

If the filter cleaning led blinks, see the „Troubleshooting“ chapter.

Water tank

When the program is completed, a warning led lights up, which indicates that the water tank must be emptied.

If the water tank fills up while the program is running, warning led starts blinking and the machine goes into stand-by. In that case empty the water in the water tank and start the program by pressing the Start / Pause button. Warning led turns off and the program resumes.



Loading door open

Start/Pause led blinks when the loading door of the drying machine is open.

5.10 End duration

You can delay the end duration of the program for up to 24 hours with the end duration function.

1. Open the loading door and place your laundry.
2. Select the drying program.
3. Press the end duration selection button and set the delay duration you want. End duration led lights up. (End duration moves continuously when you keep pressing the button).
4. Press the Start / Pause button. End duration countdown begins. The “:” sign in the middle of the displayed delay duration blinks.



You can add or remove laundry for the duration of the end duration. The duration displayed on the screen is the sum of the normal drying duration and the end duration. At the end of the countdown the end duration led turns off, drying begins and drying led lights up.

Changing the end duration

If you want to change the duration during the countdown:

1. Cancel the program by pressing the On/Off button. Turn on the drying machine again by pressing the On/Off button. When your drying machine turns on for the first time, it turns on with the declaration (cotton wardrobe dryness) program.
2. Select the program you desire using the Program Selection knob.
3. Repeat the end duration operation for the duration you want.
4. Start the program by pressing the Start / Pause button.

Operating the product

Canceling the end duration function

If you want to cancel the end duration setting countdown and start the program right away:

1. Cancel the program by pressing the On/Off button. Turn on the drying machine again by pressing the On/Off button. When your drying machine turns on for the first time, it turns on with the declaration (cotton wardrobe dryness) program.
2. Select the program you desire using the Program Selection knob.
3. Start the program by pressing the Start / Pause button.

5.11 Starting the program

Start the program by pressing the Start / Pause button.

Start/Pause led and the Drying led light up, indicating the program started. The “.” sign in the middle of the remaining duration starts to blink.

5.12 Child Lock

The machine features a child lock which prevents the machine program flow from being affected when buttons are pressed during operation.

When the Child Lock is active, all buttons except for the On/Off button are deactivated. To activate the child lock, press the Sound Notification button and End Duration button simultaneously for 3 seconds.

The child lock should be deactivated to be able to start a new program after the current program ends or to be able to interfere with the current program. Keep the same buttons pressed for 3 seconds again to deactivate the child lock.



The lock led on the screen lights up when the Child Lock is activated.



Child Lock deactivates when the machine is turned off and on again using the On/Off button.

A warning sound is heard when any button is pressed (except for On/Off button) or the Program Selection knob is turned while the child lock is active.

5.13 Changing the program after it is started

After the machine starts running, you can change the program you selected to dry your laundry with a different program.

1. For example, to select Extra Dry program instead of the Iron Dryness, stop the program by pressing the Start / Pause button.
2. Turn the Program Selection knob to select the Extra Dry program.
3. Start the program by pressing the Start / Pause button.

Adding and removing laundry in stand-by mode

If you want to add or remove laundry after the drying program starts:

1. Press the Start/Pause button to take the machine into Stand-by mode. Drying operation stops.
2. Open the loading door, add or remove laundry and close the loading door.
3. Start the program by pressing the Start / Pause button.



The laundry adding made after the drying operation started may cause the dried laundry inside the machine to mix with the wet laundry and the laundry to remain damp after the operation ends..



Laundry adding and removing can be repeated as much as desired during drying operation. But this process would continuously interrupt the drying operation, and so would cause the program duration to lengthen and increase energy consumption. Thus, it is recommended to add laundry before the program starts.

Operating the product



If a new program is selected by changing the position of the program selection knob while your machine is in stand-by mode, the running program ends.



Do not contact the inner surface of the drum when adding or removing laundry during a continuing program. The drum surface is hot.

5.14 Canceling the program

If you want to cancel the program and end the drying operation for any reason after the machine starts running, press the On/Off button.



As it will be extremely hot inside the machine when you cancel the program while the machine is in operation; run the ventilation program to cool it down.

5.15 Program end

When the program ends, the Final/Wrinkle Prevention, Fiber Filter Cleaning and Water Tank Warning leds on the program follow up indicator light up. Loading door can be opened and machine becomes ready for a second run.

Press the On/Off button to turn off the machine.



In case the laundry is not removed after the program is completed, the wrinkle prevention program that lasts 2 hours start in order to prevent wrinkling of the laundry that remains inside the machine.



Clean the fiber filter after each drying. (See. „Fiber filter and loading door inner surface“)



Empty the water tank after each drying. (See. „Emptying the water tank“)

6 Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

6.1 Cleaning Lint Filter / Loading Door Inner Surface

Lint and fibre released from the laundry to the air during the drying cycle are collected in the Lint Filter.



Such fibre and lint are generally formed during wearing and washing.



Always clean the lint filter and the inner surfaces of the loading door after each drying process.




You can clean the lint filter housing with a vacuum cleaner.







To clean the lint filter:

- Open the loading door.
- Remove the lint filter by pulling it up and open the lint filter.
- Clean lint, fibre, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.

- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.

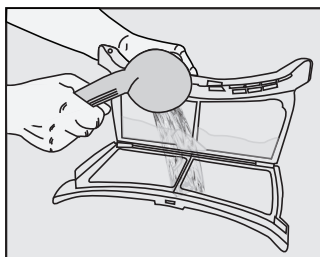

- Clean the entire inner surface of the loading door and loading door gasket with a soft damp cloth.

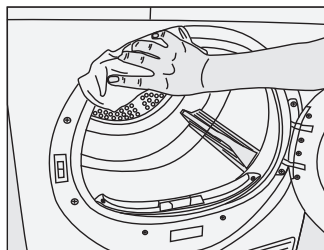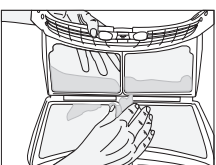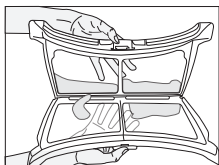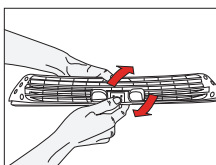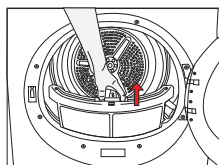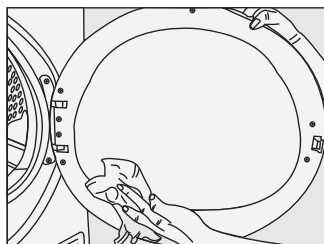

Maintenance and cleaning

6.2 Cleaning the sensor

There are dampness sensors in the dryer that detect whether the laundry is dry or not. To clean the sensors:

- Open the loading door of the dryer.
- Allow the machine to cool down if it is still hot due to the drying process.
- Wipe the metal surfaces of the sensor with a soft cloth, dampened with vinegar and dry them.




Clean metal surfaces of the sensors 4 times a year.



Do not use metal tools when cleaning metal surfaces of the sensors.



Never use solvents, cleaning agents or similar substances for cleaning due to the risk of fire and explosion!

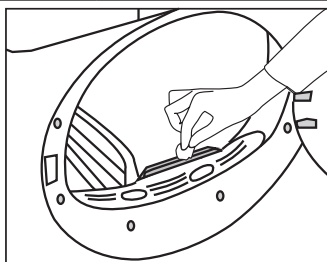

6.3 Draining the water tank

Dampness of the laundry is removed and condensed during drying process and the water that arise accumulates in the water tank. Drain the water tank after each drying cycle.



Condensed water is not drinkable!




Never remove the water tank when the program is running!


If you forget to drain the water tank, the machine will stop during the subsequent drying cycles when the water tank is full and the Water Tank warning symbol will flash. If this is the case, drain the water tank and press **Start / Pause** button to resume the drying cycle.

To drain the water tank:

- Pull the drawer and remove the water tank carefully.

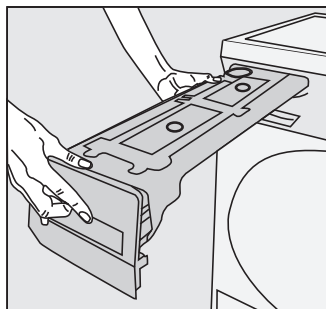

- Drain the water in the tank.

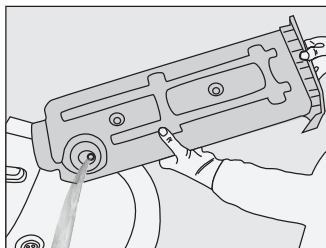

- If there is lint accumulation in the funnel of the water tank, clean it under running water.
- Place the water tank into its seat.

Maintenance and cleaning




If the direct water draining is used as an option, there is no need to empty the water tank.

6.4 Cleaning the filter drawer


Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the kick plate. Warning light lights up periodically every 7 drying cycle maximum for reminding purposes on the products with filter drawer cleaning warning light «». A filter drawer foam placed on plastic is available inside the filter drawer.

To clean the filter drawer:


- Press the kick plate button to open the kick plate.

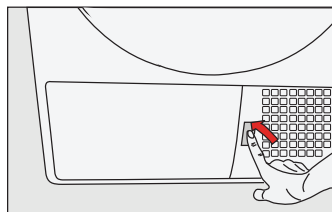


- Remove the filter drawer cover by turning it in the direction of arrow.

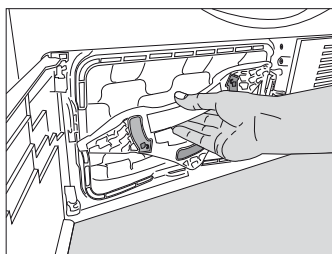



- Pull out the filter drawer.

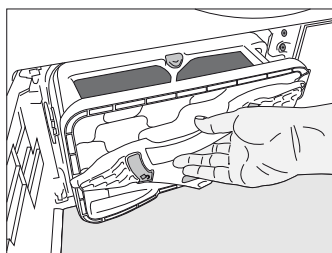

- Open the filter drawer by pressing the red button.

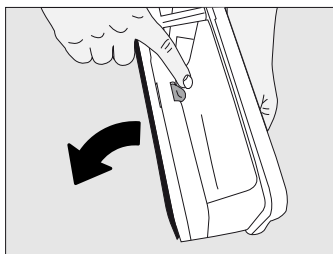

- Take out the filter drawer sponge.

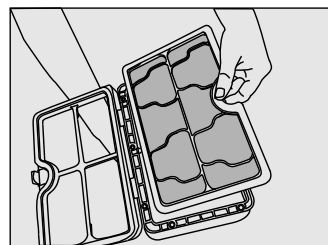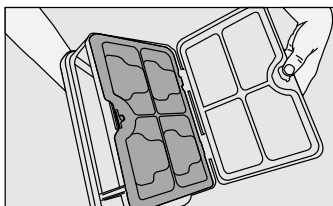


- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.




It is not necessary to clean the sponge if lint and fiber accumulation on it is not significant.

- Place the sponge back into its place.

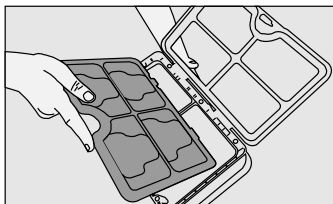


Maintenance and cleaning


- Close the filter drawer as to lock the red button.

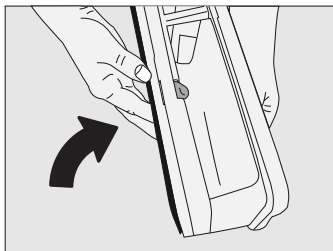

- Place the filter drawer back into its place, turn the filter drawer cover in the arrow direction and close it securely.

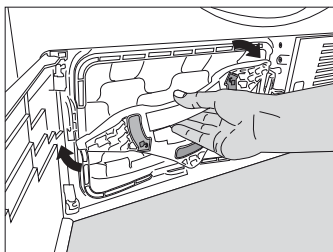

- Close the kick plate cover.

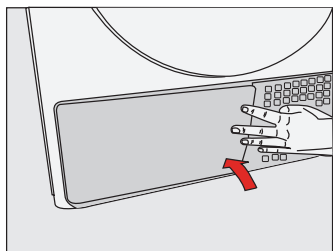



Drying without the filter drawer sponge in place will damage the machine!



A dirty lint filter and filter drawer will cause longer drying periods and higher energy consumption.

6.5 Cleaning the evaporator

Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner.

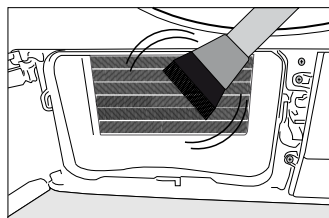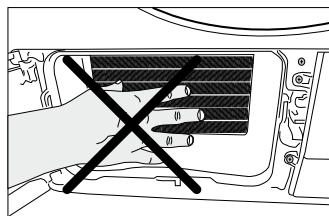

You can also clean by hand provided that you wear protective gloves. Do not attempt to clean with bare hands. Evaporator fins can harm your hand.

7 Troubleshooting

Drying process takes too much time.

- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked >>> clean the foam inside the filter drawer.
- Ventilation grids on the front side of the machine are blocked. >>> Remove the objects (if any) that block ventilation in front of the ventilation grids.
- Ventilation is not sufficient since the room where the machine is installed is very small. Open the door and window of the room to avoid the room temperature increase too much.
- Lime deposit has built up on the dampness sensor. >>> Clean the dampness sensor.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Laundry comes out wet at the end of drying.



After drying, the hot clothes feel damper than their actual dampness level.

- It is likely that the selected programme did not suit the laundry type. >>> Checking the care labels on clothes, select appropriate programme for the laundry type or use timer programmes in addition.
- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer may be blocked >>> clean the foam inside the filter drawer.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Dryer does not switch on or the programme does not start. Dryer does not start when it is set.

- It is not plugged in. >>> Make sure that the machine is plugged in.
- The loading door is ajar. >>> Make sure that the loading door is closed securely.
- Programme is not selected or the Start / Pause / Cancel button is not pressed. >>> Make sure that the programme is selected and the machine is not in Pause mode.
- Childproof Lock is activated. >>> Deactivate the Childproof Lock.

Programme is interrupted without any cause.

- Loading door is ajar. >>> Make sure that the loading door is closed securely.
- There was a power failure. >>> Press Start / Pause / Cancel button to start the programme.
- Water tank is full. >>> Drain the water tank.

Laundry has shrunk, become felted or deteriorated.

- A programme suitable for the laundry type is not used. >>> Check the garment tag and select a programme suitable for the fabric type.

Troubleshooting

Drum lighting does not turn on. (On models with lamp)

- Dryer is not switched on with the On / Off button. > > > Make sure that the dryer is switched on.
- Lamp is defective. > > > Call Authorized Service Agent to have the lamp replaced.

End/Anti-creasing symbol is on.

- Anti-creasing programme is activated in order to prevent laundry that has remained in the machine from creasing. > > > Turn off the dryer and take out the laundry.

End symbol is on.

- Programme is over. Turn off the dryer and take out the laundry.

Lint Filter Cleaning symbol is on.

- Lint filter is not cleaned. > > > Clean the lint filter.

Lint Filter Cleaning symbol is flashing.

- Filter housing is clogged with lints. > > > Clean the lint filter housing.
- A deposit has built up on the lint filter pores that may cause clogging. > > > Wash the lint filter with warm water.
- Filter drawer is clogged. > > > Clean the sponge and the filter cloth in the filter drawer.

Water leaks from the loading door

- Lint has accumulated on the inner surfaces of the loading door and on the surfaces of the loading door gasket. > > > Clean the inner surfaces of the loading door and the surfaces of the loading door gasket.

Loading door opens spontaneously.

- Loading door is ajar. > > > Push the loading door to close until you hear a locking sound.
- Water Tank warning symbol is on/flashing.
- Water tank is full. > > > Drain the water tank.
- Water draining hose is bent. > > > If the product is connected directly to a wastewater drain, check the water drain hose.

Filter Drawer Cleaning warning symbol is flashing.

- Filter drawer is not cleaned. > > > Clean the sponge and the filter cloth in the filter drawer.



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

โปรดอ่านคู่มือผู้ใช้งานเล่มนี้เป็นอันดับแรก!

ถึงลูกค้าผู้มีอุปการะคุณ

ขอขอบคุณความชื่นชอบในผลิตภัณฑ์ Beko เราหวังเป็นอย่างยิ่งว่าผลิตภัณฑ์ของคุณที่ได้รับการผลิตด้วยคุณภาพสูงและเทคโนโลยีสูงจะมอบผลการใช้งานที่ดียเยี่ยมสำหรับคุณ เราขอแนะนำให้คุณอ่านทำความเข้าใจคู่มือเล่มนี้และเอกสารอื่น ๆ ที่ให้มาพร้อมกับผลิตภัณฑ์อย่างระมัดระวังก่อนที่จะใช้งานผลิตภัณฑ์ และเก็บรักษาคู่มือนี้ไว้อ้างอิงในอนาคต ถ้าคุณส่งมอบผลิตภัณฑ์นี้ให้บุคคลอื่น โปรดมอบคู่มือผู้ใช้งานเล่มนี้ไปด้วยเหมือนกัน โปรดเอาใจใส่ในรายละเอียดและคำเตือนทั้งหมดที่ระบุไว้ในคู่มือผู้ใช้เล่มนี้และปฏิบัติตามคำแนะนำทำให้ไว้

ใช้คู่มือผู้ใช้เล่มนี้สำหรับรุ่นที่ระบุไว้บนหน้าปก

	โปรดอ่านคำแนะนำการใช้
--	-----------------------

การอธิบายของสัญลักษณ์

ในคู่มือเล่มนี้ทั้งหมด สัญลักษณ์ต่อไปนี้จะถูกนำมาใช้

	ข้อมูลที่สำคัญหรือข้อเสนอแนะเกี่ยวกับการใช้งาน
	คำเตือนสำหรับสถานะของสารอันตรายเกี่ยวเนื่องกับชีวิตและทรัพย์สิน
	คำเตือนเกี่ยวกับไฟฟ้าดูด
	คำเตือนเกี่ยวกับพื้นผิวร้อน
	คำเตือนเกี่ยวกับอันตรายจากไฟไหม้
	วัสดุบรรจุภัณฑ์ของผลิตภัณฑ์นี้ได้ผลิตมาจากวัสดุที่สามารถทำการรีไซเคิลได้ซึ่งเป็นไปตามกฎระเบียบด้านสิ่งแวดล้อมแห่งชาติของเรา

ห้ามแยกกำจัดขยะบรรจุภัณฑ์กับขยะภายในบ้านหรือขยะอื่น ๆ ให้คัดแยกไปยังจัดรวบรวมขยะเฉพาะที่กำหนดไว้โดยหน่วยงานที่มีอำนาจในท้องถิ่น



ผลิตภัณฑ์นี้ได้รับการผลิตโดยใช้เทคโนโลยีล่าสุดที่เป็นมิตรกับสิ่งแวดล้อม

1 ข้อนแนะนำที่สำคัญสำหรับความปลอดภัยและสิ่งแวดล้อม

ในบทนี้ประกอบด้วยข้อแนะนำด้านความปลอดภัยที่จะช่วยปกป้องจากความเสี่ยงของการบาดเจ็บของบุคคลหรือความเสียหายต่อทรัพย์สิน ความล้มเหลวในการปฏิบัติตามข้อแนะนำนี้จะเป็นการยุติการรับประกัน

1.1 ความปลอดภัยทั่วไป

- เครื่องอบแห้งสามารถใช้งานโดยเด็กที่อายุมากกว่า 8 ปีขึ้นไป และโดยบุคคลผู้ที่มีความบกพร่องทางกายภาพ ทางประสาทสัมผัสและทางจิตใจที่ไม่สามารถพัฒนาการอย่างเต็มที่หรือบุคคลที่ขาดประสบการณ์และความรู้ที่ให้ซึ่งพวกเขาต้องได้รับการควบคุมดูแลหรือการฝึกอบรมเรื่องการใช้งานอย่างปลอดภัยและความเสี่ยงที่อาจเกิดขึ้นมาได้ ไม่ให้เด็กเล่นกับผลิตภัณฑ์นี้ การทำความสะอาดและการบำรุงรักษาไม่ควรกระทำโดยเด็ก ถ้าพวกเขาไม่ได้รับการควบคุมดูแลจากบุคคลใด
- เก็บให้ห่างพ้นจากมือเด็กอายุต่ำกว่า 3 ยกเว้นแต่ได้รับการควบคุมดูแลอย่างต่อเนื่อง
- อย่าถอดขาตั้งแบบปรับได้ออก อย่าใช้วัสดุ เช่น พรม ไม้ และ เทปมาลดช่องว่างระหว่างเครื่องอบแห้งกับพื้นห้อง นั่นอาจทำให้เกิดปัญหากับเครื่องอบแห้งได้
- การติดตั้งและการซ่อมแซมจะต้องให้มีการกระทำโดย ตัวแทนที่ได้รับอนุญาตเสมอ ผู้ผลิตจะไม่รับผิดชอบสำหรับความเสียหายที่อาจเกิดขึ้นจากขั้นตอนที่กระทำโดยบุคคลที่ไม่ได้รับอนุญาต
- ห้ามทำการล้างทำความสะอาดผลิตภัณฑ์โดยการฉีดน้ำหรือจุ่มในน้ำ มีความเสี่ยงของไฟฟ้าช็อตอยู่!

ข้อแนะนำที่สำคัญสำหรับความปลอดภัยและสิ่งแวดล้อม

1.1.1 ความปลอดภัยทางไฟฟ้า



จะต้องปฏิบัติตามคำแนะนำด้านความปลอดภัยทางไฟฟ้าในขณะที่ทำการเชื่อมต่อทางไฟฟ้าระหว่างการติดตั้ง



เครื่องใช้นี้จะต้องไม่จัดส่งไปพร้อมกับอุปกรณ์ตัวสลับระบบภายนอก เช่น ตัวตั้งเวลา หรือเชื่อมต่อกับวงจรที่โดยปกติจะมีระบบสาธารณูปโภคเปิดและปิดสวิตช์

- ทำการเชื่อมต่อผลิตภัณฑ์กับระบบสายดินที่มีฟิวส์ป้องกันที่เป็นไปตามค่าที่ระบุไว้ในฉลากประเภทประเภท ต้องมีการต่อสายดินที่ติดตั้งโดยช่างไฟฟ้าที่ได้รับการรับรอง บริษัทของเราจะไม่รับผิดชอบสำหรับความเสียหายใดๆ ที่จะเกิดขึ้นเมื่อผลิตภัณฑ์ถูกใช้โดยไม่มีการต่อระบบสายดินที่เป็นไปตามข้อกำหนดของท้องถิ่น
- แรงดันไฟฟ้าและการป้องกันด้วยฟิวส์ที่อนุญาตระบุไว้ในแผ่นฉลากประเภทประเภท
- ค่าแรงดันไฟฟ้าที่ระบุไว้ในฉลากประเภทประเภทจะต้องเท่ากับแรงดันไฟฟ้าหลักของระบบแรงดันไฟฟ้าหลักของคุณ
- ทำการถอดปลั๊กไฟของเครื่องอบแห้งเมื่อไม่ได้ใช้งาน
- ให้ถอดปลั๊กของเครื่องอบแห้งจากระบบจ่ายไฟหลักในระหว่างงานการติดตั้ง การบำรุงรักษา การทำความสะอาดและการซ่อมแซม
- ห้ามสัมผัสกับปลั๊กไฟด้วยมือที่เปียก! ห้ามทำการถอดปลั๊กโดยการดึงที่สายเคเบิล ให้ดึงโดยจับที่ตัวปลั๊กเสมอ
- ห้ามใช้สายไฟต่อพ่วง ปลั๊กหลายทาง หรืออะแดปเตอร์เพื่อเชื่อมต่อเครื่องอบแห้งเข้ากับแหล่งจ่ายไฟเพื่อที่จะลดความเสี่ยงของไฟไหม้และไฟฟ้าดูดได้
- ปลั๊กสายไฟฟ้าจะต้องเข้าถึงได้ง่ายหลังการติดตั้งแล้ว



สายไฟหลักที่เสียหายต้องได้รับการเปลี่ยนแทนโดยแจ้งตัวแทนบริการที่ได้รับอนุญาต



ถ้าเครื่องอบแห้งมีความล้มเหลวเกิดขึ้น ไม่ควรจะใช้งานต่อถ้ายังไม่ได้รับการซ่อมแซมโดยตัวแทนบริการที่ได้รับอนุญาต มีความเสี่ยงของไฟฟ้าช็อตอยู่!

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

1.1.2 ความปลอดภัยของผลิตภัณฑ์



จุดที่ต้องพิจารณาสำหรับอันตรายจากไฟไหม้ จะต้องไม่ทำการอบแห้งเสื้อผ้าที่ระบุด้านล่างนี้ในเครื่องอบแห้งเนื่องจากพิจารณาได้ว่ามีอันตรายของไฟไหม้

- รายการเสื้อผ้าที่ยังไม่ได้ซักล้าง
- เสื้อผ้าที่ปนเปื้อนน้ำมัน อะซีโตน แอลกอฮอล์ น้ำมันเชื้อเพลิง น้ำมันก๊าด สารกำจัดคราบฝังแน่น น้ำมันยางสน น้ำมันพาราฟิน หรือสารขจัดคราบจากพาราฟินจะต้องซักล้างในน้ำร้อนที่มีผงซักฟอกมากเพียงพอก่อนที่จะอบแห้งในเครื่องอบแห้ง

ด้วยเหตุผลดังกล่าวโดยเฉพาะกับเสื้อผ้าที่มีคราบฝังแน่นข้างต้นจะต้องทำการซักล้างอย่างดี โดยใช้ปริมาณผงซักฟอกที่เพียงพอและเลือกอุณหภูมิการซักที่สูง



จะต้องไม่ทำการอบแห้งเสื้อผ้าที่ระบุด้านล่างนี้ในเครื่องอบแห้งเนื่องจากมีอันตรายของไฟไหม้

- เครื่องนุ่งห่มจากสิ่งทอหรือพลาสติกที่ทำด้วยโพลียาไมด์ (โพลีเอสเตอร์) หมวกคลุมอาบน้ำ เครื่องนุ่งห่มกันน้ำวัสดุที่มีการเสริมแรงด้วยแผ่นโพลียาไมด์

เสื้อผ้าที่ทำความสะอาดด้วยสารเคมีอุตสาหกรรม รายการสิ่งของ เช่น ไฟแช็ค ไม้ขีดไฟ เหรียญเงิน ขึ้นโลหะ เข็ม ฯลฯ อาจทำให้ความเสียหายให้แก่ชุดถังหรืออาจทำให้เกิดปัญหาฟังก์ชันการทำงานได้ ดังนั้นให้ตรวจสอบเสื้อผ้าทั้งหมดที่คุณจะโหลดเข้าไปในเครื่องอบแห้งเสมอ

- ห้ามหยุดเครื่องอบแห้งก่อนที่จะสิ้นสุดโปรแกรม หากคุณจำเป็นต้องกระทำให้นำเสื้อผ้าทั้งหมดออกมาอย่างรวดเร็วและวางผึ่งแดดให้ระบายความร้อน



เสื้อผ้าที่ได้รับการทำความสะอาดอย่างไม่เพียงพออาจเกิดประกายไฟบนตัวเสื้อผ้าและแม้กระทั่งเกิดประกายไฟหลังจากเสร็จสิ้นการอบแห้งแล้ว

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

- คุณต้องจัดให้มีการระบายอากาศที่เพียงพอเพื่อที่จะป้องกันก๊าซที่ออกมาจากการทำงานของอุปกรณ์ที่ใช้ น้ำมันเชื้อเพลิงประเภทอื่น ๆ รวมไปถึงเปลวไฟเปิดจากการสะสมตัวขึ้นในห้องเนื่องจากผลกระทบของไฟด้านหลัง

	ชุดชั้นในที่เสริมด้วยโลหะไม่ควรนำมาอบแห้งในเครื่องอบแห้ง เครื่องอบแห้งอาจได้รับความเสียหายหากส่วนเสริมแรงด้วยโลหะหลุดออกมาและแตกกระจายในการอบแห้ง
	ให้ใช้น้ำยาปรับผ้านุ่มและผลิตภัณฑ์ที่คล้ายกันโดยสอดคล้องกับคำแนะนำของผู้ผลิตสารเหล่านี้
	ทำความสะอาดตัวกรองเส้นใยก่อนและหลังจากการใช้งานแต่ละครั้งเสมอ ห้ามใช้งานเครื่องอบแห้งโดยไม่ได้ติดตั้งตัวกรองเส้นใย

- ห้ามพยายามซ่อมแซมเครื่องอบแห้งด้วยตัวเอง ห้ามทำการซ่อมแซมหรือเปลี่ยนชิ้นส่วนบนตัวเครื่องแม้ว่าคุณมีความรู้หรือมีความสามารถในการทำงานที่จำเป็นก็ตาม ยกเว้นมีคำแนะนำระบุไว้อย่างชัดเจนสำหรับขั้นตอนการทำงานหรือคู่มือการให้บริการที่เผยแพร่ มิฉะนั้น ชีวิตของคุณและบุคคลอื่นอาจตกอยู่ในอันตรายได้
- จะต้องไม่มีประตูแบบลิ้นชักได้ เลื่อนได้ หรือแบบบานพับที่อาจไปขัดขวางการเปิดประตูโหลดเสื้อผ้าในสถานที่ซึ่งคุณจะต้องติดตั้งเครื่องอบแห้ง
- ติดตั้งเครื่องอบแห้งในสถานที่ที่เหมาะสมสำหรับการใช้งานในบ้าน (ห้องอาบน้ำ ระเบียงปิดล้อม โรงรถ ฯลฯ)
- ตรวจสอบให้แน่ใจว่าอย่าให้สัตว์เลี้ยงเข้าไปในเครื่องอบแห้ง ตรวจสอบภายในของเครื่องอบแห้งก่อนทำการเริ่มทำงาน
- ห้ามพึ่งตัวบนเครื่องอบแห้งเมื่อเปิดไว้อยู่ มิฉะนั้นอาจลื่นล้มได้
- อย่าปล่อยให้เส้นใยสะสมตัวรอบ ๆ เครื่องอบผ้า

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

1.2 การติดตั้งไว้บนเครื่องซักผ้า

- ต้องใช้อุปกรณ์ติดตั้งระหว่างสองเครื่องเมื่อทำการติดตั้งเครื่องอบแห้งบนเครื่องซักผ้า อุปกรณ์ติดตั้งต้องได้รับการติดตั้งโดยตัวแทนบริการที่ได้รับอนุญาต
- น้ำหนักรวมของเครื่องซักผ้าและเครื่องอบแห้งพร้อมโหลดเต็มความจุ เมื่อวางซ้อนกันจะอยู่ที่ประมาณ 180 กิโลกรัม ให้วางผลิตภัณฑ์บนพื้นแข็งที่มีความสามารถรองรับโหลดเพียงพอ



ไม่สามารถวางเครื่องซักผ้าไว้บนเครื่องอบแห้งได้ ฟังก์ชันระดับวางสำหรับค่าเตือนข้างต้นในระหว่างการติดตั้งเครื่องซักผ้าของคุณ

ตารางการติดตั้งสำหรับเครื่องซักผ้าและเครื่องอบแห้ง

ความลึกของ เครื่องอบ แห้ง	ความลึกของเครื่องซักผ้า						
	62 ซม	60 ซม	54 ซม	50 ซม	49 ซม	45 ซม	40 ซม
54 ซม	สามารถติดตั้งได้					สามารถติดตั้งได้	สามารถติดตั้งได้
60 ซม	สามารถติดตั้งได้					สามารถติดตั้งได้	

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

1.3 Intended use

- เครื่องอบแห้งนี้ได้รับการออกแบบมาสำหรับการใช้งานภายในบ้าน ไม่เหมาะสมสำหรับการใช้งานเชิงพาณิชย์และจะต้องไม่ใช้งานที่นอกเหนือไปจากการใช้งานที่ตั้งใจ
- ใช้เครื่องอบแห้งเฉพาะสำหรับกรอบแห้งเสื้อผ้าที่มีการแสดงเครื่องหมายอย่างสอดคล้องเท่านั้น
- ผู้ผลิตจะไม่รับผิดชอบต่อความเสียหายใดๆ ที่เกิดขึ้นจากการใช้งานหรือการขนส่งที่ไม่ถูกต้อง
- อายุการใช้งานของเครื่องอบแห้งที่คุณซื้อมาอยู่ที่ 10 ปี ในระหว่างช่วงเวลาดังกล่าว ชิ้นส่วนอะไหล่แท้จะมีพร้อมบริการเพื่อใช้งานเครื่องอบแห้งอย่างเหมาะสมได้

1.4 ความปลอดภัยของเด็ก

- วัสดุบรรจุภัณฑ์เป็นอันตรายสำหรับเด็ก เก็บรักษาไว้ให้ห่างจากเด็กเล็ก
- ผลิตภัณฑ์ทางไฟฟ้าเป็นอันตรายสำหรับเด็ก ดูแลเด็กให้อยู่ห่างจากผลิตภัณฑ์นี้เมื่อมีการใช้งาน ห้ามให้เด็กเล็กมาแกะเปิดตัวเครื่องอบแห้ง ใช้ตัวล็อกป้องกันเด็กเพื่อที่จะป้องกันไม่ให้เด็กสามารถแกะเปิดตัวเครื่องอบแห้งได้




ตัวล็อกป้องกันเด็กอยู่บนแผงควบคุม (ดูการล็อกป้องกันเด็ก)

- รักษาให้ประตูไหลปิดเสมอแม้ว่าจะไม่ได้ใช้งานเครื่องอบแห้งก็ตาม

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

1.5 การเป็นไปตามข้อกำหนดของ WEEE และ การกำจัดขยะของผลิตภัณฑ์ที่เป็นขยะ



ผลิตภัณฑ์นี้สอดคล้องกับข้อกำหนดขยะอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ของสหภาพยุโรป (EU WEEE Directive) (2012/19/EU) ผลิตภัณฑ์นี้แสดงสัญลักษณ์ระดับชั้นของอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ที่ไม่ใช้งานแล้ว (WEEE) ผลิตภัณฑ์นี้ได้รับการผลิตด้วยชิ้นส่วนและวัสดุคุณภาพสูงที่สามารถนำมาใช้ใหม่และเหมาะสำหรับการนำมารีไซเคิล ดังนั้นห้ามทำการแยกกำจัดขยะผลิตภัณฑ์นี้พร้อมกับขยะในบ้านเมื่อสิ้นสุดอายุการใช้งาน ให้นำไปรวบรวมที่จุดรวบรวมขยะสำหรับการรีไซเคิลของอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ โปรดปรึกษากับเจ้าหน้าที่ที่มีอำนาจของท้องถิ่นเพื่อศึกษาเกี่ยวกับจุดรวบรวมขยะที่อยู่ใกล้ที่สุด

1.6 การเป็นไปตามข้อกำหนดของ RoHS

ผลิตภัณฑ์นี้เป็นไปตามข้อกำหนด RoHS ของสหภาพยุโรป (2011/65/EU) ไม่ได้ประกอบด้วยวัสดุที่เป็นอันตรายและวัสดุต้องห้ามที่ระบุไว้ในข้อกำหนด

1.7 ข้อมูลบรรจุภัณฑ์

วัสดุบรรจุภัณฑ์ของผลิตภัณฑ์นี้ได้ผลิตมาจากวัสดุที่สามารถทำการรีไซเคิลได้ซึ่งเป็นไปตามกฎระเบียบด้านสิ่งแวดล้อมแห่งชาติของเรา ห้ามทำการจัดการแยกขยะของวัสดุบรรจุภัณฑ์พร้อมกับขยะภายในบ้านหรือขยะอื่นๆ ให้นำวัสดุเหล่านี้ไปยังจุดรวบรวมขยะบรรจุภัณฑ์ที่กำหนดตำแหน่งไว้โดยหน่วยงานที่มีอำนาจ

ข้อแนะนำที่สำคัญสำหรับความปลอดภัย และสิ่งแวดล้อม

1.8 ข้อมูลจำเพาะทางเทคนิค


TH	
ความสูง (ต่ำสุด / สูงสุด)	84,6 ซม. / 86,6 ซม.*
ความกว้าง	59,5 ซม.
ความลึก	60,9 ซม.
ความจุ (สูงสุด)	8 กก.**
น้ำหนักสุทธิ (การใช้ประตูด้านหน้าจากพลาสติก)	49 กก.
น้ำหนักสุทธิ (การใช้ประตูด้านหน้าจากแก้ว)	51 กก.
แรงดันไฟฟ้า	ดูฉลากกำกับประเภท***
อินพุทพลังงานที่ระบุ	
รหัสรุ่น	

- * ความสูงขั้นต่ำ: ความสูงรวมขาตั้งแบบปรับได้ปิดไว้
ความสูงมากที่สุด: ความสูงรวมขาตั้งแบบปรับได้เปิดมากที่สุด
- ** น้ำหนักเสื้อผ้าแห้งก่อนการซัก
- *** ฉลากกำกับประเภทอยู่ที่ด้านหลังของประตูโหลด

	ข้อมูลจำเพาะทางเทคนิคของเครื่องอบแห้งสามารถเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้าเพื่อปรับปรุงคุณภาพของผลิตภัณฑ์
	รูปต่าง ๆ ในคู่มือการใช้งานนี้เป็นแผนภาพและอาจจะไม่ตรงกันโดยสมบูรณ์กับตัวผลิตภัณฑ์จริง
	ค่าต่าง ๆ ที่ระบุในตัวแสดงเครื่องหมายของเครื่องอบแห้งหรือในเอกสารเผยแพร่อื่น ๆ ที่ให้มาพร้อมกับเครื่องอบแห้งได้มาจากห้องทดลองโดยสอดคล้องกับมาตรฐานที่เกี่ยวข้อง ทั้งนี้ขึ้นอยู่กับเงื่อนไขของการใช้งานและสภาพแวดล้อมของเครื่องอบแห้ง ค่าเหล่านี้สามารถแปรผันไป

2 เครื่องอบแห้งของคุณ

2.1 รายการในบรรจุภัณฑ์

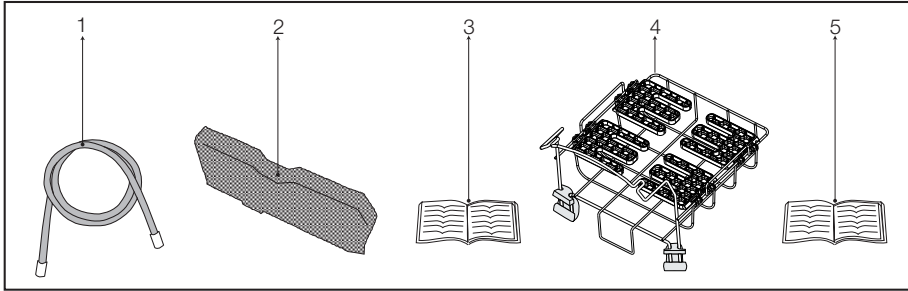

1. พ่วงจระบายน้ำ *
2. ฟองน้ำอะไหล่ของลินชักตัวกรอง
3. คู่มือผู้ใช้
4. ตะกร้ออบแห้ง*
5. คู่มือผู้ใช้ตะกร้ออบแห้ง*

* มีให้มากับเครื่องของคุณโดยขึ้นอยู่กับรุ่นที่ซื้อ

3 การติดตั้ง

ก่อนติดต่อกับฝ่ายบริการที่ได้รับอนุญาตใกล้บ้านท่านสำหรับการติดตั้งเครื่องอบแห้ง โปรดตรวจสอบให้แน่ใจว่ามีการติดตั้งระบบไฟฟ้าและระบบระบายน้ำอย่างเหมาะสมตามคู่มือผู้ใช้แล้ว (ดูที่ 3.3 การเชื่อมต่อระบบระบายน้ำและ 3.5 การเชื่อมต่อทางไฟฟ้า) หากการติดตั้งเหล่านี้ไม่เหมาะสม ให้ติดต่อกับช่างไฟฟ้าหรือช่างเทคนิคที่ผ่านการรับรองเพื่อทำการจัดเตรียมที่จำเป็น

- พื้นผิวด้านหลังของเครื่องอบแห้งเสื้อผ้าจะต้องวางเข้าหาผนัง




อย่าวางเครื่องอบแห้งบนสายไฟ

3.2 การถอดชุดประกอบเพื่อความปลอดภัยระหว่างขนส่งออก



ถอดชุดประกอบเพื่อความปลอดภัยระหว่างขนส่งออกมาก่อนที่จะใช้งานเครื่องอบแห้งครั้งแรก

- เปิดประตูโหลด
- มีถุงในลอนภายในถึงโหลดที่มีชั้นโฟมแบบสไตรโฟมอยู่ จับยึดที่ส่วนที่มีเครื่องหมาย XX_XX.
- ดึงชั้นในลอนเข้าหาตัวเองและถอดชุดประกอบเพื่อความปลอดภัยระหว่างขนส่งออก

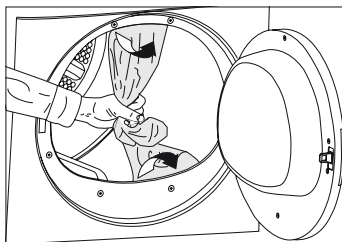

ตรวจสอบว่าไม่มีส่วนของชุดประกอบเพื่อความปลอดภัยระหว่างขนส่งเหลือค้างอยู่ในถึงโหลด



การจัดเตรียมสถานที่ตั้งรวมถึงการติดตั้งระบบไฟฟ้าและระบบระบายน้ำเสียเป็นความรับผิดชอบของลูกค้า



ก่อนทำการติดตั้ง ตรวจสอบด้วยสายตาว่าผลิตภัณฑ์นี้มีข้อบกพร่องอะไรหรือไม่ หากเครื่องอบแห้งได้รับความเสียหาย อย่าทำการติดตั้งผลิตภัณฑ์ที่เสียหายสามารถเป็นสาเหตุของความปลอดภัยของคุณได้



ให้ทั้งเครื่องอบแห้งรอไว้ประมาณ 12 ชั่วโมงก่อนเริ่มต้นใช้งาน

3.1 ตำแหน่งการติดตั้งที่เหมาะสม

ติดตั้งเครื่องอบแห้งบนพื้นผิวที่มั่นคงและได้ระดับ

- เครื่องอบแห้งมีน้ำหนักมาก ห้ามเคลื่อนย้ายเพียงลำพัง
- ใช้งานเครื่องอบแห้งในสภาพแวดล้อมที่ระบายอากาศได้ดี และปลอดฝุ่น
- อย่าใช้วัสดุ เช่น พรม ไม้ และเทปมาลดช่องว่างระหว่างเครื่องอบแห้งกับพื้นห้อง
- อย่าปิดคลุมช่องระบายอากาศของเครื่องอบแห้ง
- จะต้องไม่มีประตูแบบล็อกได้ เลื่อนได้ หรือแบบบานพับที่อาจไปขัดขวางการเปิดประตูโหลดเสื้อผ้าในสถานที่ซึ่งคุณจะติดตั้งเครื่องอบแห้ง
- เมื่อติดตั้งเครื่องอบแห้งแล้ว จะต้องให้ตั้งอยู่ในสถานที่เดิมตลอดที่ซึ่งการเชื่อมต่อดำเนินการไว้ เมื่อติดตั้งเครื่องอบแห้งแล้ว ตรวจสอบให้แน่ใจว่าผิวด้านหลังของเครื่องจะต้องไม่สัมผัสสิ่งของใด ๆ (ก๊อสน้ำ ปลั๊กไฟ ฯลฯ)
- วางเครื่องอบแห้งห่างจากขอบของเฟอร์นิเจอร์อื่นอย่างน้อย 1 ซม.
- เครื่องอบแห้งของคุณสามารถทำงานที่อุณหภูมิระหว่าง $+5^{\circ}\text{C}$ และ $+35^{\circ}\text{C}$ หากเงื่อนไขการทำงานไม่อยู่ในสภาวะดังกล่าว การใช้งานเครื่องอบแห้งอาจเกิดผลกระทบเชิงลบและทำให้เครื่องได้รับความเสียหายได้

การติดตั้ง


3.3 การเชื่อมต่อระบบระบายน้ำ

ในผลิตภัณฑ์ที่ติดตั้งไว้ด้วยชุดควบแน่น น้ำจะสะสมตัวในถังน้ำในระหว่างรอบการอบแห้ง คุณจะต้องระบายน้ำออกหลังจากแต่ละรอบการอบแห้งแล้ว

คุณสามารถระบายน้ำที่สะสมตัวออกได้โดยตรงผ่านท่ออย่างระบายน้ำที่ให้เราพร้อมกับผลิตภัณฑ์ แทนการระบายน้ำออกเป็นครั้งคราวจากน้ำที่สะสมในถังน้ำ

การเชื่อมต่อท่ออย่างระบายน้ำ

- 1-2 ดึงท่ออย่างที่อยู่ด้านหลังของเครื่องอบแห้งออกด้วยมือเพื่อตัดการเชื่อมต่อจากจุดที่มันเชื่อมต่ออยู่ ห้ามใช้เครื่องมือใด ๆ ในการถอดท่ออย่างออก
- 3 เชื่อมต่อปลายด้านหนึ่งของท่ออย่างระบายน้ำที่ให้เราพร้อมกับเครื่องอบแห้งไปยังจุดเชื่อมต่อจากจุดที่คุณถอดออกมาจากตัวผลิตภัณฑ์ในขั้นตอนก่อนหน้านี้
- 4 เชื่อมต่อปลายอีกด้านของท่ออย่างระบายน้ำเข้ากับระบบระบายน้ำโดยตรงหรือไปยังอ่างน้ำชักล้าง

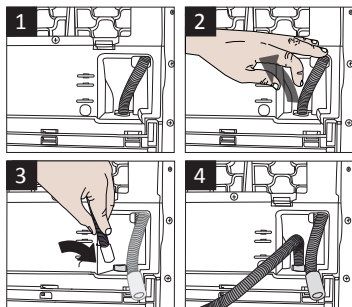

การเชื่อมต่อท่ออย่างต้องกระทำในลักษณะที่มีความปลอดภัย ท่ออย่างระบายน้ำของคุณจะมีน้ำท่วมออกมาหากท่ออย่างหลุดออกมาจากตำแหน่งติดตั้งในระหว่างการปล่อยน้ำออก




ให้ติดตั้งท่ออย่างระบายน้ำให้ได้ความสูงไม่เกิน 80 ซม.



ตรวจสอบให้แน่ใจว่าท่ออย่างระบายน้ำไม่พันกันและไม่พ้องระหว่างระยะของระบบระบายน้ำและตัวเครื่อง

3.4 การปรับขาตั้ง

- จะต้องให้เครื่องวางได้ระดับและสมดุลบนขาตั้งเพื่อให้เครื่องอบแห้งสามารถทำงานแบบเสียงเรียบและไม่มีการสั่นสะเทือน ปรับสมดุลของเครื่องโดยการปรับขาตั้ง
- ปรับขาตั้งไปด้านซ้ายหรือด้านขวาจนกว่าเครื่องอบแห้งจะได้ระดับและมั่นคง

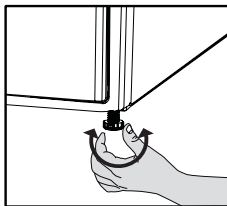

ห้ามใช้สกรูคลายขาตั้งแบบปรับได้จากตำแหน่งของมัน

3.5 การเชื่อมต่อทางไฟฟ้า

สำหรับคำแนะนำเฉพาะของการเชื่อมต่อทางไฟฟ้าที่จำเป็นในระหว่างการจัดตั้ง (ดูที่ 1.1.1 E ความปลอดภัยทางไฟฟ้า)

3.6 การขนส่งเครื่องอบแห้ง

ถอดปลั๊กไฟของผลิตภัณฑ์ออกก่อนทำการขนส่ง ระบายน้ำที่ค้างออกจากเครื่องอบแห้ง หากได้เชื่อมต่อท่อระบายน้ำโดยตรง ให้ถอดการเชื่อมต่อออก




เราขอแนะนำให้ลำเลียงเครื่องอบแห้งในลักษณะด้านบนตั้งขึ้น หากไม่สามารถลำเลียงเครื่องอบแห้งในลักษณะด้านบนตั้งขึ้นได้ เราขอแนะนำให้ลำเลียงโดยเอียงไปด้านขวาเมื่อมองดูจากด้านหน้าของเครื่อง

การติดตั้ง


3.7 คำเตือนเกี่ยวกับเสียง



การได้ยินเสียงโลหะจากเครื่องคอมเพรสเซอร์ในบางครั้งระหว่างการทำงานเป็นสิ่งที่ปกติ

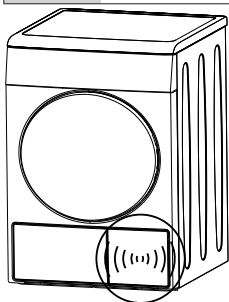

น้ำที่สะสมตัวในระหว่างการทำงานถูกสูบเข้าไประหว่างการปั่นหมาดในระหว่างการทำงานเป็นสิ่งที่ปกติ

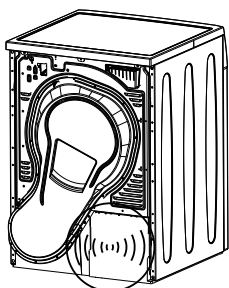

3.8 การเปลี่ยนหลอดไฟแสงสว่าง

ในกรณีที่ใช้งานหลอดไฟแสงสว่างในเครื่องอบแห้งของคุณ การเปลี่ยนหลอดไฟ/หลอด LED ที่ใช้สำหรับให้ไฟแสงสว่างของผลิตภัณฑ์ของคุณให้ทำการโทรศัพท์เรียกตัวแทนบริการที่ได้รับอนุญาต

หลอดไฟแบบนี้ใช้ในอุปกรณ์แบบนี้ไม่เหมาะสำหรับการส่องสว่างภายในบ้านหรือในห้องวัตถุประสงค์ที่ตั้งใจของหลอดไฟแบบนี้คือช่วยให้ผู้ใช้งานเสื้อผ้าในเครื่องอบแห้งเสื้อผ้าได้สะดวก หลอดไฟที่ใช้ในเครื่องใช้นี้จะต้องทนทานต่อสภาพทางกายภาพสุดขีดได้ เช่น การสั่นสะเทือนและอุณหภูมิเกิน 50 °C

4 การเตรียมความพร้อม

4.1 เสื้อผ้าที่เหมาะสมสำหรับการอบแห้งในเครื่องอบแห้ง

ให้ปฏิบัติตามคำแนะนำที่ให้ไว้ในป้ายกำกับเครื่องนึ่งหุ้มเสมอ อุ่มแห้งเสื้อผ้าที่มีป้ายกำกับระบุว่าเสื้อผ้าเหมาะสมสำหรับการอบแห้งในเครื่องอบแห้งและให้แน่ใจว่าคุณได้เลือกโปรแกรมที่เหมาะสม

สัญลักษณ์การอบแห้งเสื้อผ้า																						
	สัญลักษณ์การอบแห้ง		เหมาะสำหรับเครื่องอบแห้ง			ห้ามใช้เตารีด			การอบแห้งที่อ่อนไหว/ละเอียดอ่อน			ห้ามอบแห้งด้วยเครื่อง			ห้ามอบแห้ง			ห้ามอบแห้ง-ทำความสะอาดสะอาด				
																						
 	การตั้งค่าการอบแห้ง	ที่อุณหภูมิใด ๆ		ที่อุณหภูมิสูง		ที่อุณหภูมิปานกลาง		ที่อุณหภูมิต่ำ		ไม่ต้องการให้ความร้อน	แขวนให้แห้ง		ผึ่งให้แห้ง	แขวนผ้าเปียกให้แห้ง		ผึ่งในร่มให้แห้ง		ทำความสะอาดและอบแห้งได้				
	เตารีด -																					
	อบแห้งหรือใช้ไอน้ำ		เตารีดที่อุณหภูมิ				เตารีดที่อุณหภูมิปานกลาง				เตารีดที่อุณหภูมิต่ำ				ห้ามรีดด้วยเตารีด				เตารีดไม่มีไอน้ำ			
	อุณหภูมิสูงสุด		200 °C				150 °C				110 °C											

4.2 เสื้อผ้าที่ไม่เหมาะสมสำหรับการอบแห้งในเครื่องอบแห้ง



เส้นใยถัดแบบอ่อนนุ่ม ผ้าขนสัตว์ ผ้าไหม เส้นใยอ่อนนุ่มและมีค่า ผ้ากันอากาศ และผ้าปูเตียง ไม่เหมาะสมสำหรับการอบแห้งด้วยเครื่อง

4.3 การจัดเตรียมเสื้อผ้าสำหรับการอบแห้ง

- เสื้อผ้าอาจพันกันหลังจากการซักแล้ว ให้แยกเสื้อผ้าก่อนที่จะวางลงไปในเครื่องอบแห้ง
- อบแห้งเสื้อผ้าที่มีอุปกรณ์เสริมโลหะ เช่น ชิป โดยให้พลิกออกนอก
- รูดซิปให้สุด หนีตตะขอ และกระดุม และแผ่นกีดกระดุมทั้งหมด

4.4 สิ่งที่คุณควรปฏิบัติสำหรับการประหยัดพลังงาน

ข้อมูลต่อไปนี้จะช่วยให้คุณใช้งานเครื่องอบแห้งได้อย่างประหยัดพลังงานและมีประสิทธิภาพคุ้มค่า


- หมุนปั่นเสื้อผ้าด้วยความเร็วสูงสุดเท่าที่เป็นไปได้ในขณะที่ซักผ้า ผลดังกล่าว จะทำให้เวลาของการอบแห้งสั้นที่สุดและใช้พลังงานลดลง
- คัดแยกเสื้อผ้าตามประเภทและความหนา อบแห้งเสื้อผ้าประเภทเดียวกันรวมกัน ตัวอย่างเช่น ผ้าเช็ดตัวแบบบางและผ้าคลุมโต๊ะสามารถอบแห้งได้เร็วกว่าผ้าเช็ดตัวอาบน้ำที่หนากว่า
- ปฏิบัติตามคำแนะนำในคู่มือผู้ใช้งานสำหรับการเลือกโปรแกรม
- อย่าเปิดประตูไหลตของเครื่องในระหว่างการอบแห้งโดยไม่จำเป็น หากคุณจำเป็นต้องเปิดประตูไหลตจริง ๆ อย่าเปิดประตูนานเกินไป
- ห้ามเพิ่มเสื้อผ้าเปียกเข้าไปในขณะที่เครื่องอบแห้งกำลังทำงาน
- ทำความสะอาดตัวกรองเส้นใยก่อนและหลังจากการใช้งานแต่ละครั้งเสมอ (ดูที่ 6.1 การทำความสะอาดตัวกรองเส้นใย / พื้นผิวด้านในของประตูไหลต)

การเตรียมความพร้อม

- ทำความสะอาดตัวกรองเป็นครั้งคราวเมื่อมองเห็นการสะสมฝุ่นผงในอากาศหรือเมื่อมีไฟสถานะสว่างขึ้น หากมีไฟสัญญาณแจ้งเตือนการทำความสะอาดลินซึกตัวกรอง «» ติดตังมา (ดูที่ 6. 4 การทำความสะอาดลินซึกตัวกรอง)
- จัดให้มีการระบายอากาศอย่างดีในห้องซึ่งติดตั้งเครื่องอบแห้งไว้

4.5 ความจุของโหลดที่ถูกต้อง

ปฏิบัติตามคำแนะนำใน “ตารางการเลือกโปรแกรมและการใช้พลังงาน” ห้ามโหลดมากกว่าความจุที่ระบุไว้ในตาราง

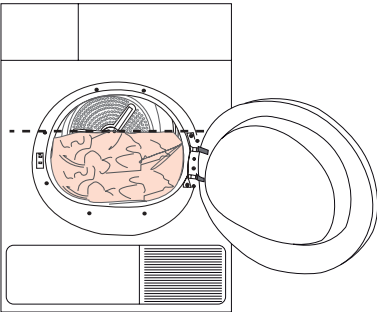


ไม่แนะนำให้โหลดเสื้อผ้าเข้าไปในเครื่องอบแห้งด้วยปริมาณที่เกินกว่าระดับที่ระบุในภาพ ประสิทธิภาพการอบแห้งจะลดลงเมื่อเครื่องมีโหลดมากเกินไป นอกจากนี้ เครื่องอบแห้งและเสื้อผ้าอาจได้รับความเสียหายด้วย

น้ำหนักต่อไปนี้ให้ไว้เป็นตัวอย่าง:

เสื้อผ้า	น้ำหนักโดยประมาณ (ก.)*
ผ้าคลุมปิดจากผ้าฝ้าย (สองชั้น)	1500
ผ้าคลุมปิดจากผ้าฝ้าย (เดี่ยว)	1000
ผ้าปูที่นอน (สองชั้น)	500
ผ้าปูที่นอน (ชั้นเดียว)	350
ผ้าปูโต๊ะขนาดใหญ่	700
ผ้าปูโต๊ะขนาดเล็ก	250
ผ้ากันเปื้อน	100
ผ้าเช็ดตัวอาบน้ำ	700
ผ้าเช็ดมือ	350
เสื้อสตรี	150
เสื้อเช็ดผ้าฝ้าย	300
เสื้อเช็ด	250
ชุดเดรสผ้าฝ้าย	500
ชุดเดรส	350
ยีนส์	700
ผ้าเช็ดหน้า (10 ชิ้น)	100
ที่เช็ด	125


* น้ำหนักเสื้อผ้าแห้งก่อนการซัก

5.1 แผงควบคุม

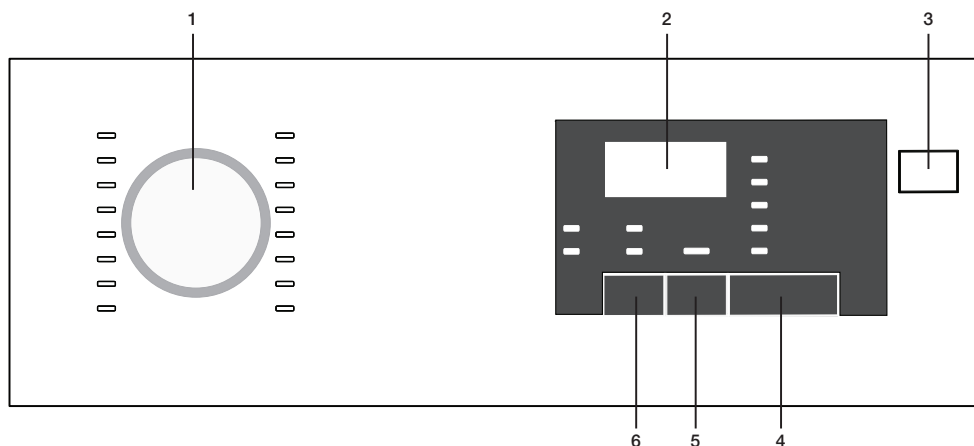

1. ปุ่มเลือกโปรแกรม
2. ไฟสถานะบอกระยะเวลาที่เหลือ
3. ปุ่มเปิด/ปิด
4. ปุ่มเริ่มต้น/หยุดชั่วคราว
5. ปุ่มระยะเวลาสิ้นสุด
6. ปุ่มแจ้งเตือนด้วยเสียง

5.2 สัญลักษณ์บนหน้าจอ

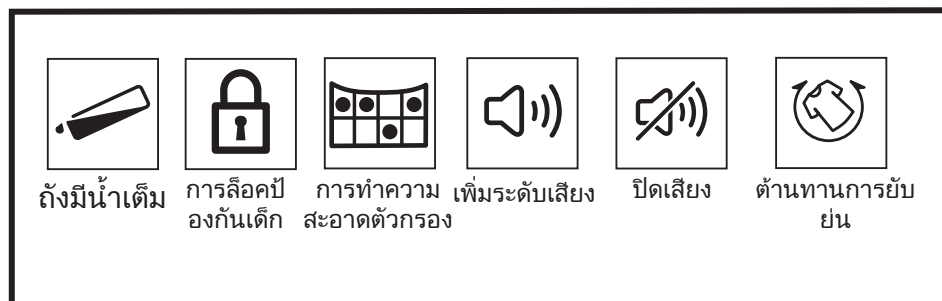

การใช้งานผลิตภัณฑ์

5.3 การจัดเตรียมเครื่อง

- 1. เสียบปลั๊กไฟของเครื่อง
- 2. ใส่เสื้อผ้าลงไปในเครื่อง
- 3. กดปุ่มเปิด/ปิด
- 4. เมื่อเปิดเครื่องขึ้นมาครั้งแรก เครื่องจะเปิดด้วยโปรแกรมที่รู้จักแล้ว (การอบแห้งผ้าฝ้ายในตู้)



กดปุ่มเปิด/ปิดไม่ได้หมายความว่าความ
ว่าโปรแกรมจะเริ่มทำงาน กดปุ่ม
เริ่มต้น/หยุดชั่วคราว“ เพื่อเริ่มต้น
โปรแกรม

5.4 การเลือกโปรแกรม

- 1. กำหนดหาโปรแกรมที่เหมาะสมจากตาราง
ด้านล่างที่ประกอบด้วยหลายระดับการอบ
แห้ง
- 2. เลือกโปรแกรมที่คุณต้องการโดยใช้ปุ่มเลือก
โปรแกรม

อบแห้งพิเศษ	เฉพาะการอบแห้งเสื้อผ้าใน อุณหภูมิปกติ เสื้อผ้าหนาและหลายชั้น (ผ้าเช็ดตัว ผ้าห่ม ยีนส์ ฯลฯ) สามารถทำการอบแห้งแล้วเก็บ ไว้ในตู้เสื้อผ้าโดยไม่ต้องรีดผ้าได้
อบแห้งในตัว	เสื้อผ้าปกติ (ผ้าปูโต๊ะ ชุดชั้นใน ฯลฯ) สามารถทำการอบแห้งแล้ว เก็บไว้ในตู้โดยไม่ต้องรีดผ้าได้
อบแห้งในตัว แบบพิเศษ	เสื้อผ้าปกติ (เช่น ผ้าปูโต๊ะ ชุด ชั้นใน ฯลฯ) สามารถทำการอบ แห้งอีกครั้งแล้วเก็บไว้ในตู้โดย ไม่ต้องรีดผ้าได้แต่ได้ความแห้ง มากขึ้น
อบแห้งเพื่อ การรีด	เสื้อผ้าปกติ (เชิ้ต ชุดเดรส ฯลฯ) ถูกอบแห้งให้พร้อมสำหรับการ รีดผ้า



สำหรับข้อมูลรายละเอียดของโปรแกรม
ดูได้ที่ “ตารางการเลือกโปรแกรมและ
การใช้พลังงาน“

5.5 โปรแกรมหลัก

โปรแกรมหลักที่ให้ไว้ด้านล่างขึ้นอยู่กับประเภท
ของเส้นใยผ้า

- ผ้าฝ้าย
อบแห้งเสื้อผ้าที่ทนทานด้วยโปรแกรมนี โปรแกรม
ทำการอบแห้งในอุณหภูมิปกติ แนะนำสำหรับ
เสื้อผ้าจากผ้าฝ้ายของคุณ (ผ้าปู ผ้าปูเตียง ผ้าเช็ด
เชือกคลุมอาบนํ้า ฯลฯ)
- ผ้าสังเคราะห์
อบแห้งเสื้อผ้าที่ไม่ทนทานด้วยโปรแกรมนี
แนะนำสำหรับเสื้อผ้าสังเคราะห์ของคุณ

5.6 โปรแกรมพิเศษ

โปรแกรมพิเศษต่อไปนี้ไม่มีให้ใช้ในเครื่องอบแห้ง
สำหรับเรือนโซฟาพิเศษ



โปรแกรมพิเศษอาจแปรผันโดยขึ้นอยู่กับ
กับข้อมูลจำเพาะของเครื่อง



หากต้องการได้รับผลลัพธ์ที่ดีจาก
โปรแกรมการอบแห้งนี้ เสื้อผ้าของ
คุณต้องซักด้วยโปรแกรมที่เหมาะสม
ในเครื่องซักผ้าและบิดน้ำออกด้วย
การหมุนบิดน้ำที่แนะนำ

- **ผ้ายีนส์**
ใช้อบแห้งยีนส์ที่บิดน้ำออกด้วยความเร็วรอบสูงใน
เครื่องซักผ้า
- **เลือกกีฬา สปอร์ต**
ใช้อบแห้งเสื้อผ้าที่ทำจากใยสังเคราะห์ ผ้าฝ้าย
หรือเส้นใยผสม
- **ชกตวน**
คุณสามารถใช้โปรแกรมนีเพื่ออบแห้งเสื้อผ้าฝ้าย
ที่คุณได้บิดน้ำออกด้วยความเร็วรอบสูงในเครื่อง
ซักผ้า โปรแกรมนี้จะอบแห้งเสื้อผ้าฝ้ายปริมาณ 1
กก. (เสื้อเชิต 3 ตัว/เสื้อที่เชิต 3 ตัว) ภายในเวลา
50 นาที
- **ประจาวน**
โปรแกรมสำหรับการอบแห้งประจำวันสำหรับผ้า
ฝ้ายและผ้าสังเคราะห์และใช้เวลา 80 นาที
- **เสื้อเชิต**
อบแห้งเสื้อเชิตอย่างนุ่มนวลและทำให้เกิดรอยยับ
ย่นน้อยลงง่ายต่อการรีดผ้า
- **เสื้อผ้าสำหรับเด็กทารก**
โปรแกรมที่ใช้สำหรับเสื้อผ้าทารกที่มีป้ายกำกับ
ระบุสามารถอบแห้งได้

การใช้งานผลิตภัณฑ์



ยังมีความชื้นเล็กน้อยหลงเหลือบนเสื้อเชิ้ตหลังจากโปรแกรมการทำงาน ขอแนะนำให้คุณอย่าทิ้งเสื้อเชิ้ตไว้ในเครื่องอบแห้ง

• ผ้าบางละเอียดอ่อน

คุณสามารถอบแห้งผ้าละเอียดอ่อนที่เหมาะสมสำหรับการอบแห้งหรือเสื้อผ้าที่แนะนำให้ซักด้วยมือได้ (เสื้อครึ่งตัวสตรีจากผ้าไหม ชุดชั้นในบาง ฯลฯ) ในอุณหภูมิสูง



ขอแนะนำให้อบแห้งเสื้อผ้าอ่อนนุ่มของคุณในถุงใส่เสื้อผ้าเพื่อป้องกันการยับย่นและความเสียหาย เมื่อสิ้นสุดการทำงานของโปรแกรม ให้นำเสื้อผ้าออกจากเครื่องทันทีและแขวนไว้เพื่อป้องกันไม่ให้ผ้ายับย่น

• ทำให้สดชื่น

โปรแกรมนี้ทำการระบายอากาศเพียง 10 นาที โดยไม่ได้เป่าลมร้อน คุณสามารถระบายอากาศของผ้าฝ้ายและผ้าลินินที่อยู่ในบรรยากาศปิดเป็นเวลานานและขจัดกลิ่นได้

• โปรแกรมแบบตั้งเวลา

คุณสามารถเลือกโปรแกรมแบบตั้งเวลา 30 นาที และ 45 นาทีเพื่อให้ได้ระดับความแห้งที่ต้องการได้ด้วยอุณหภูมิต่ำ



ในโปรแกรมนี้ เครื่องจะอบแห้งเป็นระยะเวลานานเท่าที่ตั้งเวลาไว้ โดยไม่คำนึงถึงระดับการอบแห้ง

การใช้งานผลิตภัณฑ์

5.7 ตารางการเลือกโปรแกรมและการใช้พลังงาน

โปรแกรม	ความจุ (กก.)	ความเร็วการปั่นในเครื่อง ซักผ้า (รอบต่อนาที)	ปริมาณความชื้นคงเหลือโดยประมาณ	ระยะเวลาการอบแห้ง (นาที)
ผ้าฝ้าย / ผ้าสี				
 อบแห้งพิเศษ	8	1000	% 60	190
 อบแห้งในตู้	8 / 4	1000	% 60	179 / 104
 อบแห้งเพื่อการรีด	8	1000	% 60	150
เสื้อเชิ้ต	1,5	1200	% 60	50
ผ้ายีนส์	4	1200	%50	120
ประจาวน	4	1200	%50	90
เสื้อกีฬา สपोर्ट	4	1000	%60	105
ชกदन	1	1200	%50	45
ผ้าบางละเอียดอ่อน	2	600	%40	55
เสื้อผ้าสำหรับเด็กทารก	3	1000	% 60	80

ผ้าสังเคราะห์

 อบแห้งในตู้	4	800	% 40	70
 อบแห้งเพื่อการรีด	4	800	% 40	55

ค่าการใช้พลังงาน

โปรแกรม	ความจุ (กก.)	ความเร็วการปั่นในเครื่อง ซักผ้า (รอบต่อนาที)	ปริมาณความชื้นคงเหลือโดยประมาณ	ค่าการใช้พลังงาน กิโลวัตต์-ชั่วโมง
ผ้าลินินพร้อมสวมใส่*	8 / 4	800	% 40	1,92 / 1,03
ผ้าฝ้ายพร้อมรีด	8	800	% 40	1,5
ผ้าสังเคราะห์พร้อมสวมใส่	4	800	% 40	0,75

การใช้พลังงานของโหมดปิดเครื่องสำหรับโปรแกรมผ้าฝ้ายมาตรฐานที่โหลดเต็มความจุ PO (วัตต์) 0,5

การใช้พลังงานของโหมดเปิดเครื่องไว้สำหรับโปรแกรมผ้าฝ้ายมาตรฐานที่โหลดเต็มความจุ PL (วัตต์) 1,0

มีก๊าซเรือนกระจกของคลอรีนควบคุมภายในข้อกำหนดพิธีสารเกียวโต ซิลบิตดฟนิก R134a / 0.30 กก. - GWP:1430 - 0,429 tCO₂e

 “โปรแกรมการอบแห้งผ้าฝ้ายในตู้” ซึ่งใช้งานที่โหลดเต็มความจุและโหลดไม่เต็มเป็นโปรแกรมการอบแห้งมาตรฐาน ซึ่งสัมพันธ์กับข้อมูลในฉลากกำกับและแผ่นป้ายกำกับนั้น เป็นโปรแกรมที่เหมาะสมสำหรับการอบแห้งปกติสำหรับ เสื้อผ้าจากผ้าฝ้ายเปียกและในลักษณะที่ให้ประสิทธิภาพมากที่สุดในด้านการใช้พลังงาน สำหรับผ้าฝ้าย

* : โปรแกรมมาตรฐานป้ายกำกับพลังงาน (EN 61121:2012) “All ตัวกรองจะต้องได้รับการทำความสะอาดก่อนทดสอบแบบชุดต่อเนื่อง”

ค่าทั้งหมดที่อยู่ในตารางหาได้โดยสอดคล้องกับมาตรฐาน EN 61121:2012 ค่าการใช้พลังงานอาจแปรผันจากค่าในตารางโดยขึ้นอยู่กับประเภทเสื้อผ้า การหมุนปั่น เงื่อนไขแวดล้อม และการเปลี่ยนแปลงแรงดันไฟฟ้า

การใช้งานผลิตภัณฑ์

5.8 ฟังก์ชันการทำงานเสริม

การยกเลิกการแจ้งเตือนด้วยเสียง

เครื่องอบแห้งจะสร้างสัญญาณเสียงเตือนเมื่อโปรแกรมสิ้นสุดการทำงาน หากคุณไม่ต้องการการแจ้งเตือนด้วยเสียง ให้กดปุ่ม “การแจ้งเตือนด้วยเสียง”

เมื่อคุณกดปุ่มการแจ้งเตือนด้วยเสียงแล้ว ไฟจะสว่างขึ้นและโปรแกรมจะไม่สร้างเสียงเตือนเมื่อสิ้นสุดการทำงาน



คุณสามารถเลือกฟังก์ชันนี้ก่อนหรือหลังโปรแกรมเริ่มทำงาน


5.9 สัญลักษณ์แจ้งเตือน



สัญลักษณ์แจ้งเตือนอาจแปรผันโดยขึ้นอยู่กับข้อมูลจำเพาะของเครื่องของคุณ

การทำความสะอาดตัวกรองเส้นใย

เมื่อโปรแกรมสิ้นสุดการทำงาน ไฟสถานะ LED แจ้งเตือนจะสว่างขึ้นซึ่งบ่งบอกว่าตัวกรองจะต้องได้รับการทำความสะอาด

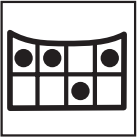

หากไฟ LED แจ้งการทำความสะอาดตัวกรองติดกระพริบ ให้ดูที่บท „การแก้ไขปัญหา“

ถึงน้ำ

เมื่อโปรแกรมสิ้นสุดการทำงาน ไฟสถานะ LED แจ้งเตือนจะสว่างขึ้นซึ่งบ่งบอกว่าถึงน้ำต้องได้รับการระบายน้ำออกให้ว่าง

หากเติมน้ำในขณะที่เครื่องกำลังทำงาน ไฟ LED แจ้งเตือนจะติดกระพริบและเครื่องจะเข้าสู่โหมดสแตนด์บาย ในกรณีระบายน้ำไม่ถึงน้ำออกให้ว่างเปล่าและเริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว ไฟ LED แจ้งเตือนจะดับลงและโปรแกรมจะกลับมาทำงานต่อ



ประตูโหลดเปิดอยู่

ไฟ LED บ่งบอกการเริ่มต้น/หยุดชั่วคราวจะติดกระพริบเมื่อประตูของเครื่องอบแห้งเปิดอยู่

5.10 ระยะเวลาสิ้นสุด

คุณสามารถหวนเวลาของระยะเวลาสิ้นสุดการทำงานของโปรแกรมได้สูงสุดถึง 24 ชั่วโมงด้วยฟังก์ชันระยะเวลาสิ้นสุด

1. เปิดประตูโหลดและวางเสื้อผ้าเข้าไป
2. เลือกโปรแกรมการอบแห้ง
3. กดปุ่มเลือกระยะเวลาสิ้นสุดและตั้งค่าระยะเวลาที่你需要การ
ไฟ LED บ่งบอกระยะเวลาสิ้นสุดจะสว่างขึ้น (ระยะเวลาสิ้นสุดจะเลื่อนไปอย่างต่อเนื่อง หากคดยังกดปุ่มเรื่อย ๆ)
4. กดปุ่มเริ่มต้น/หยุดชั่วคราว การนับเวลาถอยหลังของระยะเวลาสิ้นสุดจะเริ่มต้นขึ้น สัญลักษณ์ “:” ที่อยู่ตรงกลางของระยะเวลาที่แสดงผลออกมาจะติดกระพริบ



คุณสามารถเพิ่มหรือเอาเสื้อผ้าออกจากเครื่องในระหว่างช่วงเวลาของระยะเวลาสิ้นสุดของโปรแกรม ระยะเวลาที่แสดงผลบนหน้าจอเป็นเวลา รวมของระยะเวลาการอบแห้งปกติ และระยะเวลาสิ้นสุดการทำงาน เมื่อถึงจุดสิ้นสุดการนับถอยหลัง ไฟ LED จะดับลง การอบแห้งจะเริ่มขึ้นและไฟ LED ของการอบแห้งจะสว่างขึ้น

การเปลี่ยนระยะเวลาสิ้นสุด

หากคุณต้องการเปลี่ยนแปลงระยะเวลาสิ้นสุดในระหว่างการนับถอยหลัง

1. ยกเลิกโปรแกรมโดยการกดปุ่มเปิด/ปิด เปิดเครื่องอบแห้งอีกครั้งโดยการกดปุ่มเปิด/ปิด เมื่อเปิดเครื่องขึ้นมาครั้งแรก เครื่องจะเปิดด้วยโปรแกรมที่รู้จักแล้ว (การอบแห้งผ้าฝ้ายในตู้)
2. เลือกโปรแกรมที่คุณต้องการโดยใช้ปุ่มเลือกโปรแกรม
3. ทำซ้ำขั้นตอนระยะเวลาสิ้นสุดสำหรับระยะเวลาที่คุณต้องการ
4. เริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว

การยกเลิกฟังก์ชันระยะเวลาสิ้นสุด

หากคุณต้องการยกเลิกระยะเวลาสิ้นสุดในระหว่างการนับถอยหลังที่ตั้งค่าและเริ่มต้นโปรแกรมทันที

1. ยกเลิกโปรแกรมโดยการกดปุ่มเปิด/ปิด เปิดเครื่องอบแห้งอีกครั้งโดยการกดปุ่มเปิด/ปิด เมื่อเปิดเครื่องขึ้นมาครั้งแรก เครื่องจะเปิดด้วยโปรแกรมที่รู้จักแล้ว (การอบแห้งผ้าฝ้ายในตู้)
2. เลือกโปรแกรมที่คุณต้องการโดยใช้ปุ่มเลือกโปรแกรม
3. เริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว

การใช้งานผลิตภัณฑ์

5.11 การเริ่มต้นโปรแกรม

เริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว

ไฟ LED ของการเริ่มต้น/หยุดชั่วคราวและไฟ LED ของการอบแห้งจะสว่างขึ้น บ่งบอกว่าโปรแกรมได้เริ่มต้นทำงาน สัญลักษณ์ “.” ที่อยู่ตรงกลางของระยะเวลาที่เหลืออยู่เริ่มติดกระพริบ

5.12 การล๊อคป้องกันเด็ก

เครื่องให้คุณสมบัติการล๊อคป้องกันเด็กซึ่งป้องกันการดำเนินงานของโปรแกรมไม่ให้ได้รับผลกระทบใด ๆ เมื่อปุ่มใด ๆ ถูกกดในระหว่างการทำงาน

เมื่อการล๊อคป้องกันเด็กเปิดทำงาน ปุ่มทั้งหมด ยกเว้นปุ่มเปิด/ปิดจะปิดทำงาน หากต้องการเปิดใช้งานการล๊อคป้องกันเด็ก ให้กดปุ่ม การแจ้งเตือนด้วยเสียง และปุ่ม ระยะเวลาสิ้นสุดพร้อมกันเป็นเวลา 3 วินาที

การล๊อคป้องกันเด็กจะต้องปิดทำงานเพื่อให้สามารถเริ่มต้นโปรแกรมใหม่หลังจากสิ้นสุดการทำงานของโปรแกรมปัจจุบันแล้วหรือให้สามารถแทรกด้วยโปรแกรมปัจจุบัน กดปุ่มเดียวกันเป็นเวลา 3 วินาทีเพื่อปิดการทำงานของการล๊อคป้องกันเด็ก

	ไฟ LED ของการล๊อคป้องกันเด็กจะสว่างขึ้นเมื่อการล๊อคป้องกันเด็กถูกเปิดทำงาน
	การล๊อคป้องกันเด็กปิดทำงานเมื่อเครื่องถูกปิดและเปิดอีกครั้งโดยใช้ปุ่มเปิด/ปิด

จะได้ยินเสียงแจ้งเตือนเมื่อปุ่มใด ๆ ถูกกด (ยกเว้นปุ่มเปิด/ปิด) หรือปุ่มปรับเลือกโปรแกรมถูกปรับในขณะที่การล๊อคป้องกันเด็กเปิดทำงาน

5.13 การเปลี่ยนโปรแกรมหลังจากเครื่องเริ่มต้นทำงานแล้ว

หลังจากที่เครื่องเริ่มต้นการทำงานแล้ว คุณสามารถเปลี่ยนแปลงโปรแกรมที่คุณเลือกเพื่ออบแห้งเสื้อผ้าด้วยโปรแกรมอื่นได้

- ตัวอย่างเช่น สำหรับการเลือกโปรแกรมอบแห้งพิเศษแทนโปรแกรมความแห้งสำหรับเดารีด ให้หยุดโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว
- หมุนปุ่มเลือกโปรแกรมเพื่อเลือกโปรแกรมอบแห้งพิเศษ
- เริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว

การเพิ่มหรือการนำเสื้อผ้าออกในโหมดสแตนด์บาย

หากคุณต้องการเพิ่มหรือนำเสื้อผ้าออกหลังจากโปรแกรมการอบแห้งเริ่มต้นแล้ว

- กดปุ่มเริ่มต้น/หยุดชั่วคราวเพื่อนำเครื่องไปสู่มโหมดสแตนด์บาย หยุดการทำงานของเครื่องอบแห้ง
- เปิดประตูโหลด เพิ่มหรือนำเสื้อผ้าออกและปิดประตูโหลด
- เริ่มต้นโปรแกรมโดยการกดปุ่มเริ่มต้น/หยุดชั่วคราว

	การเพิ่มเสื้อผ้าที่กระทำหลังจากกระบวนการอบแห้งเริ่มต้นแล้วอาจทำให้เสื้อผ้าที่แห้งภายในเครื่องผสมกับเสื้อผ้าเปียกและเสื้อผ้ายังคงมีความชื้นหลังจากสิ้นสุดการทำงาน
	การเพิ่มและการนำเสื้อผ้าออกสามารถทำได้มากครั้งในระหว่างการอบแห้ง
	แต่กระบวนการนี้จะขัดขวางการอบแห้ง และจะทำให้ระยะเวลาของโปรแกรมขยายออกไปและเพิ่มการใช้พลังงาน ดังนั้น ขอแนะนำให้เพิ่มเสื้อผ้าก่อนที่โปรแกรมจะเริ่ม
	หากเลือกโปรแกรมใหม่โดยการเปลี่ยนตำแหน่งปุ่มปรับเลือกโปรแกรมในขณะที่เครื่องอยู่ในโหมดสแตนด์บาย โปรแกรมที่ทำงานอยู่จะสิ้นสุดการทำงาน

การใช้งานผลิตภัณฑ์

5.14 การยกเลิกโปรแกรม

หากคุณต้องการยกเลิกโปรแกรมและสิ้นสุดกระบวนการอบแห้งด้วยเหตุผลใด ๆ หลังจากเครื่องเริ่มต้นการทำงานแล้ว ให้กดปุ่มเริ่มต้น/หยุดชั่วคราว



เนื่องจากด้านในจะมีความร้อนสูงสุดเมื่อคุณยกเลิกโปรแกรมในขณะที่เครื่องกำลังทำงาน ให้ใช้โปรแกรมระบายอากาศเพื่อระบายความร้อนให้เย็นลง

5.15 การสิ้นสุดโปรแกรม

เมื่อโปรแกรมสิ้นสุดการทำงาน ไฟ LED แจ้งการป้องกันรอยยับย่น/ขนสุดท้าย การทำความสะอาดเส้นใย และแจ้งเตือนถึงน้ำมันแฉงไฟสถานะความคืบหน้าของโปรแกรมจะสว่างขึ้น สามารถเปิดประตูโหลดได้และเครื่องจะพร้อมสำหรับการทำงานรอบใหม่
กดปุ่มเปิด/ปิดเพื่อปิดเครื่อง



ในกรณีที่ไม่ได้นำเสื้อผ้าออกหลังจากโปรแกรมเสร็จสิ้นการทำงาน โปรแกรมป้องกันรอยยับย่นที่มีระยะเวลา 2 ชั่วโมงจะเริ่มขึ้นเพื่อป้องกันการเกิดรอยยับย่นของเสื้อผ้าที่ยังอยู่ด้านในเครื่อง



ทำความสะอาดตัวกรองเส้นใยหลังจากการใช้งานแต่ละครั้งเสมอ (ดูที่ "ตัวกรองเส้นใยและพื้นผิวด้านในประตูโหลด")



ระบายน้ำออกจากถังหลังการใช้งานแต่ละครั้ง (ดูที่ "การระบายน้ำออกจากถังให้ว่างเปล่า")

6 การบำรุงรักษาและการทำความสะอาด

อายุการใช้งานของผลิตภัณฑ์นี้จะขยายออกไปและปัญหาที่พบบ่อยจะลดลงถ้ามีการทำความสะอาดสม่ำเสมอ

6.1 การทำความสะอาดตัวกรองเส้นใย / พื้นผิวด้านในของประตูโหลด


เส้นขนและเส้นใยที่หลุดออกมาจากเสื้อผ้าในระหว่างรอบการอบแห้งจะถูกรวบรวมไว้ในตัวกรองเส้นใย

	เส้นใยและเส้นขนดังกล่าวมักจะก่อตัวขึ้นในระหว่างการสวมใส่และการซักล้าง
	ทำความสะอาดตัวกรองเส้นใยและพื้นผิวด้านในของประตูโหลดเสมอหลังจากกระบวนการอบแห้งแต่ละรอบ
	คุณสามารถทำความสะอาดตัวเรือนของตัวกรองเส้นใยด้วยตัวทำความสะอาดด้วยแรงสุญญากาศ







สำหรับการทำความสะอาดตัวกรองเส้นใย:

- เปิดประตูโหลด
- ถอดตัวกรองเส้นใยออกมาโดยการดึงขึ้นและเปิดตัวกรองเส้นใย
- ทำความสะอาดเส้นใยและเศษผ้าฝ้ายออกด้วยมือหรือด้วยเศษผ้านุ่ม
- ปิดตัวกรองเส้นใยและวางกลับลงไปที่ตำแหน่งเดิม

- หลังจากใช้เครื่องไปได้ระยะหนึ่ง อาจมีการก่อตัวขึ้นเป็นชั้นที่ช่องรูของตัวกรองซึ่งสามารถเป็นสาเหตุของการอุดตันของตัวกรองได้ ให้ล้างตัวกรองด้วยน้ำอุ่นเพื่อขจัดชั้นที่ก่อตัวขึ้นบนผิวของตัวกรองเส้นใยในชุดตัวกรองเส้นใยให้แห้งสนิทก่อนที่จะติดตั้งกลับเข้าไป

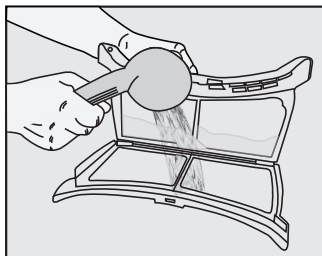

- ทำความสะอาดพื้นผิวด้านในทั้งหมดของประตูโหลดและปะเก็นของประตูโหลดด้วยผ้านุ่ม

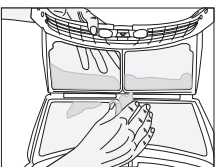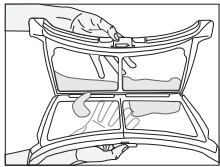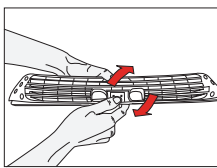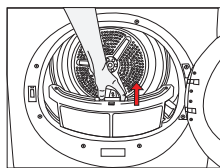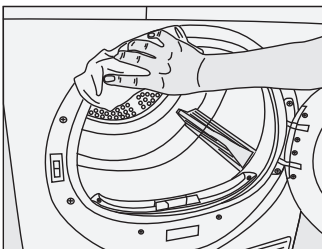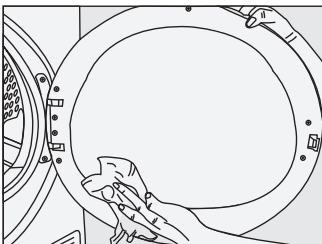

การบำรุงรักษาและการทำความสะอาด

6.2 การทำความสะอาดเซนเซอร์

มีเซนเซอร์วัดความชื้นในเครื่องอบแห้งที่ตรวจจับว่าเสื้อผ้าแห้งหรือไม่

- สำหรับการทำความสะอาดเซนเซอร์:
- เปิดประตูโหลดของเครื่องอบแห้ง
- ทิ้งให้เครื่องเย็นตัวลงหากยังร้อนอยู่เนื่องจากการอบแห้ง
- เช็ดพื้นผิวโลหะของเซนเซอร์ด้วยผ้านุ่มเปียกหมาด ๆ ด้วยน้ำส้มและเช็ดให้แห้ง




ทำความสะอาดพื้นผิวโลหะของเซนเซอร์ 4 ครั้งต่อปี



ห้ามใช้เครื่องมือโลหะเมื่อทำความสะอาดพื้นผิวโลหะของเซนเซอร์



ห้ามใช้ตัวทำละลาย สารทำความสะอาดหรือสารที่คล้ายกันสำหรับการทำความสะอาดเนื่องจากจะมีความเสี่ยงของไฟไหม้และการระเบิดได้

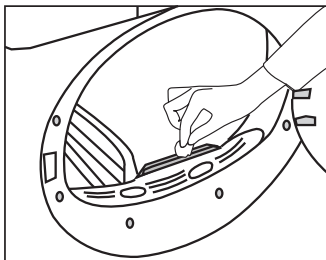

6.3 การระบายน้ำออกจากถังน้ำ

ความชื้นของเสื้อผ้าถูกจัดออกและควบแน่นในระหว่างกระบวนการอบแห้งและน้ำที่เกิดขึ้นจะสะสมตัวในถังน้ำ ระบายน้ำออกจากถังหลังการอบแห้งแต่ละครั้ง




น้ำที่ควบแน่นไม่สามารถดื่มได้




ห้ามถอดถังน้ำออกเมื่อโปรแกรมกำลังทำงาน

หากคุณลืมระบายน้ำออกจากถังน้ำ เครื่องจะหยุดทำงานในระหว่างรอบการอบแห้งต่อเนื่องเมื่อถึงน้ำเต็ม และไฟสัญญาณแจ้งเตือนถึงน้ำจะติดกระพริบ หากเกิดการแจ้งเตือนกล่าวขึ้น ให้ระบายน้ำจากถังน้ำออกและกดปุ่ม เริ่มต้น / หยุดชั่วคราวเพื่อกลับไปสู่อรอบการอบแห้ง

- ดึงลิ้นชักและถอดถังน้ำออกอย่างระมัดระวัง

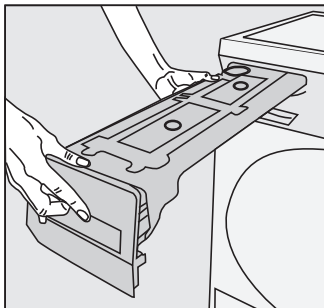

- ระบายน้ำในถังออก

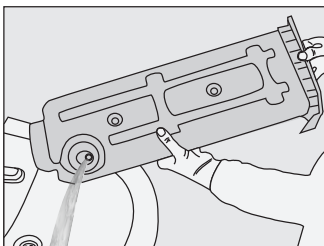

- หากมีการสะสมของเส้นใยในโพรงของถังน้ำ ให้ทำความสะอาดด้วยน้ำที่ไหล
- วางถังน้ำกลับลงไปในตำแหน่งเดิม



หากใช้ตัวเลือกการระบายน้ำโดยตรงก็ไม่จำเป็นต้องระบายน้ำออกจากถังน้ำ


การบำรุงรักษาและการทำความสะอาด

6.4 การทำความสะอาดลินชักตัวกรอง


เส้นขนและเส้นใยที่ไม่สามารถตัดกรองด้วยตัวกรองเส้นใยได้จะอุดตันในลินชักตัวกรองด้านหลังของแผ่นดัดนอก ไฟสถานะการแจ้งเตือนจะสว่างขึ้นเป็นครั้งคราวสูงสุดทุก 7 รอบการอบแห้ง เพื่อแจ้งเตือนบนผลิตภัณฑ์ที่มีไฟแจ้งเตือนการทำความสะอาดลินชักตัวกรอง «» โฟมของลินชักตัวกรองที่วางบนพลาสติกมีให้อยู่ด้านในของลินชักตัวกรอง

สำหรับการทำความสะอาดลินชักตัวกรอง:


- กดปุ่มแบบแผ่นดัดออกเพื่อเปิดแผ่นดัดออกมา

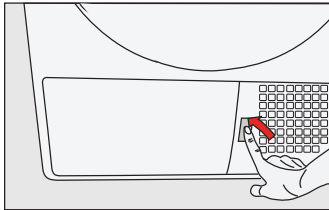


- ถอดฝาครอบลินชักตัวกรองโดยหมุนในทิศทางตามลูกศร

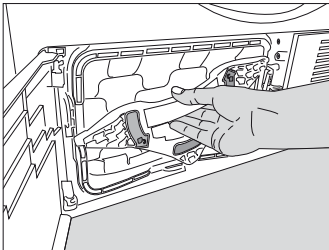



- ดึงลินชักตัวกรองออกมา

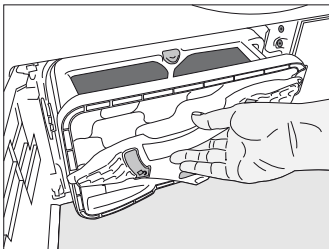

- เปิดลินชักตัวกรองโดยการกดปุ่มสีแดง

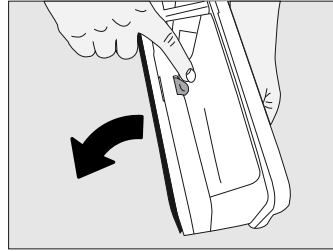

- นำฟองน้ำของลินชักตัวกรองออกมา

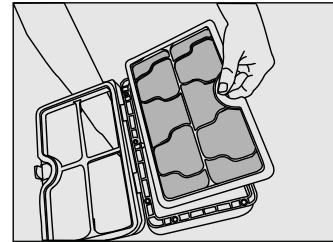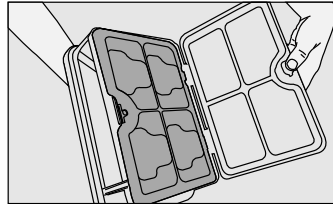


- ล้างทำความสะอาดฟองน้ำของลินชักตัวกรองด้วยมือเพื่อขจัดเส้นใยและเส้นขนบนพื้นผิวออก หลังจากล้างฟองน้ำแล้ว ให้บีบน้ำด้วยมือและขจัดน้ำส่วนเกินออก ทำให้ฟองน้ำแห้งดีก่อนใส่กลับเข้าไป




ไม่จำเป็นต้องทำความสะอาดฟองน้ำ หากการสะสมตัวของเส้นใยและเส้นขนไม่มากนัก

- วางฟองน้ำกลับลงไปในตำแหน่งเดิม

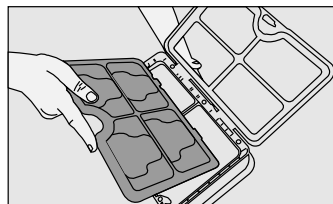


การบำรุงรักษาและการทำความสะอาด


- ปิดลิ้นชักตัวกรองในลักษณะการล็อกปุ่มสีแดง

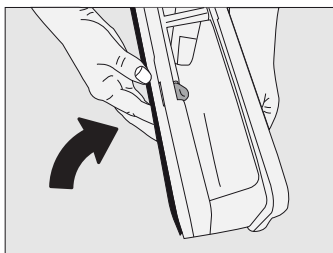

- วางลิ้นชักตัวกรองกลับเข้าไปในตำแหน่งเดิม หมุนฝาครอบลิ้นชักตัวกรองในทิศทางของลูกศรเพื่อให้มันเ็นไขว้ปิดสนิท

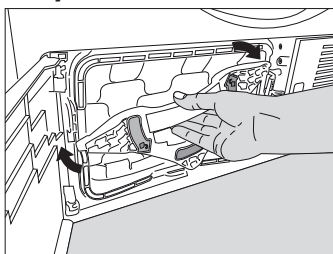

- ปิดฝาครอบแผ่นดันออก

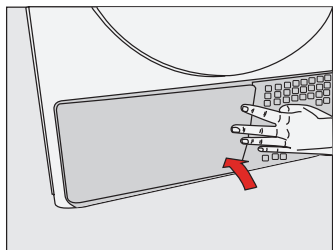



การอบแห้งโดยไม่มีย่าน้ำของลิ้นชักตัวกรองติดตั้งอยู่จะทำให้เครื่องเสียหายได้



ตัวกรองเส้นใยที่สกปรกและลิ้นชักตัวกรองจะทำให้เกิดระยะเวลาการอบแห้งที่ยาวนานขึ้นและการใช้พลังงานสูงขึ้น

6.5 การทำความสะอาดตัวระเหย

ทำความสะอาดเส้นใยที่สะสมตัวบนครีบของตัวระเหยที่ตั้งอยู่ด้านหลังลิ้นชักตัวกรองด้วยตัวทำความสะอาดจากสูญญากาศ

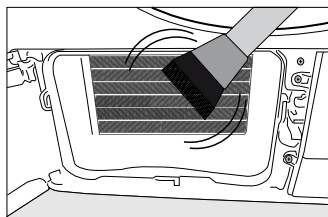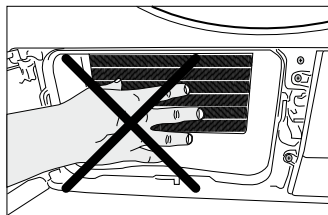

คุณยังสามารถทำความสะอาดด้วยมือโดยสวมถุงมือป้องกัน ห้ามพยายามทำความสะอาดด้วยมือเปล่า ครีบของตัวระเหยอาจทำอันตรายต่อมือของคุณได้

กระบวนการรอบแท้งใช้เวลานานเกินไป

ช่องของตัวกรองเส้นใยอุดตัน >>> ล้างทำความสะอาดตัวกรองเส้นใยด้วยน้ำอุ่น

- ลินชักตัวกรองอาจถูกขัดขวาง>>>ทำความสะอาดโฟมด้านในลินชักตัวกรอง
- โครงการระบายอากาศบนด้านหน้าของเครื่องอุดตัน >>> นำวัตถุแปลกปลอม (หากมี) ที่อุดตันช่องระบายอากาศด้านหน้าของโครงการระบายอากาศออก
- การระบายอากาศไม่เพียงพอเนื่องจากห้องที่ติดตั้งเครื่องอบแห้งมีขนาดเล็ก เปิดประตูและหน้าต่างของห้องเพื่อให้อุณหภูมิห้องสูงขึ้นมากเกินไป
- การเกาะตัวของคราบหินปูนบนเซนเซอร์วัดความชื้น >>> ทำความสะอาดเซนเซอร์วัดความชื้น
- โหลดเสื้อผ้าเข้าไปมากเกินไป >>> อย่าโหลดเสื้อผ้าเข้าไปมากเกินไป
- เสื้อผ้าอาจไม่ถูกหมุนปั่นอย่างเพียงพอ >>> หมุนปั่นเสื้อผ้าด้วยความเร็วสูงสุดเท่าที่เป็นไปได้ในขณะซักผ้า

เสื้อผ้ายังออกมาเปียกเมื่อสิ้นสุดการอบแห้ง



หลังจากการอบแห้ง จะมีความรู้สึกที่เสื้อผ้าที่ร้อนมีความชื้นกว่าระดับความชื้นจริง

- อาจไม่ได้ใช้โปรแกรมที่เหมาะสมสำหรับประเภทเสื้อผ้า>>> ตรวจสอบป้ายกำกับเสื้อผ้าและเลือกโปรแกรมที่เหมาะสมสำหรับประเภทเส้นใยหรือใช้โปรแกรมแบบตั้งเวลาเพิ่มเติม
- ช่องของตัวกรองเส้นใยอุดตัน >>> ล้างทำความสะอาดตัวกรองเส้นใยด้วยน้ำอุ่น
- ลินชักตัวกรองอาจถูกขัดขวาง>>>ทำความสะอาดโฟมด้านในลินชักตัวกรอง
- โหลดเสื้อผ้าเข้าไปมากเกินไป >>> อย่าโหลดเสื้อผ้าเข้าไปมากเกินไป
- เสื้อผ้าอาจไม่ถูกหมุนปั่นอย่างเพียงพอ >>> หมุนปั่นเสื้อผ้าด้วยความเร็วสูงสุดเท่าที่เป็นไปได้ในขณะซักผ้า

ไม่ได้เปิดเครื่องอบแห้งหรือโปรแกรมไม่เริ่มทำงาน เครื่องอบแห้งไม่เริ่มทำงานตามที่ตั้งค่า

- อาจไม่ได้เสียบปลั๊กไฟ >>> ตรวจสอบให้แน่ใจว่าเสียบปลั๊กไฟของเครื่อง
- ประตูโหลดเปิดแง้มไว้ >>> ตรวจสอบให้แน่ใจว่าประตูโหลดปิดสนิท
- ไม่ได้เลือกโปรแกรมหรือไม่ได้กดปุ่มเริ่มต้น/หยุดชั่วคราว >>> ตรวจสอบให้แน่ใจว่าได้เลือกโปรแกรมแล้วและเครื่องไม่ได้อยู่ในโหมดหยุดชั่วคราว
- การล๊อคป้องกันเด็กถูกเปิดใช้งาน >>> การปิดทำการการล๊อคป้องกันเด็ก

โปรแกรมถูกขัดจังหวะโดยไม่ทราบสาเหตุ

- ประตูโหลดเปิดแง้มไว้ >>> ตรวจสอบให้แน่ใจว่าประตูโหลดปิดสนิท
- เกิดไฟฟ้าดับขึ้น >>> กดปุ่ม “เริ่มต้น/หยุดชั่วคราว” /ยกเลิก เพื่อเริ่มต้นโปรแกรม
- ถังน้ำมีน้ำเต็ม >>> ระบายน้ำออกจากถัง

เสื้อผ้าหดตัว เป็นขุยหรือเสื่อมสภาพ

- ไม่ได้ใช้โปรแกรมที่เหมาะสมกับประเภทเสื้อผ้า >>> ตรวจสอบป้ายกำกับเสื้อผ้าและเลือกโปรแกรมที่เหมาะสมสำหรับประเภทเสื้อผ้า

ไฟสว่างของถังไม่สว่างขึ้น (ในรุ่นที่มีหลอดไฟ)

- อาจไม่ได้เปิดเครื่องอบแห้งด้วยปุ่มเปิด / ปิด >>> ตรวจสอบให้แน่ใจว่าได้เปิดสวิตช์เครื่องอบแห้งแล้ว
- หลอดไฟเสีย >>> แจ้งตัวแทนศูนย์บริการที่ได้รับการรับรองเพื่อขอเปลี่ยนหลอดไฟ

การแก้ไขปัญหา

ไฟสัญญาณสิ้นสุดการทำงาน/ด้านทานรอยยับย่นติดสว่าง

- โปรแกรมด้านทานรอยยับย่นถูกเปิดทำงานเพื่อที่จะป้องกันไม่ให้เสื้อผ้าที่เหลืค้างในเครื่องอบแห้งยับย่น >>> ปิดเครื่องอบแห้งและนำเสื้อผ้าออกมา

ไฟสัญญาณสิ้นสุดการทำงานติดสว่าง

- โปรแกรมสิ้นสุดการทำงาน ปิดเครื่องอบแห้งและนำเสื้อผ้าออกมา

สัญญาณการทำความสะอาดตัวกรองติดสว่าง

- ไม่ได้ทำความสะอาดตัวกรองเส้นใย >>> ทำความสะอาดตัวกรองเส้นใย

สัญญาณการทำความสะอาดตัวกรองติดกระพริบ

- กระเปาะของตัวกรองอุดตันด้วยเส้นใย >>> ทำความสะอาดกระเปาะตัวกรองเส้นใย
- มีคราบสะสมตัวขึ้นที่กระเปาะตัวกรองเส้นใยที่อาจทำให้เกิดการอุดตัน >>> ล้างทำความสะอาดตัวกรองเส้นใยด้วยน้ำอุ่น
- ลินชักตัวกรองอุดตัน >>> ทำความสะอาดฟองน้ำและผ้าตัวกรองในลินชักตัวกรอง

น้ำรั่วไหลจากประตูโหลด

- เส้นใยสะสมตัวที่พื้นผิวด้านในของประตูโหลดและบนพื้นผิวของปะเก็นของประตูโหลด >>> ทำความสะอาดพื้นผิวด้านในของประตูโหลดและบนพื้นผิวของปะเก็นของประตูโหลด

ประตูโหลดเปิดขึ้นเอง

- ประตูโหลดเปิดแฉ้มไว้ >>> กดประตูโหลดให้ปิดจนกว่าคุณจะได้ยินเสียงการล็อก
- สัญญาณแจ้งเตือนถึงน้ำติดสว่าง/ติดกระพริบ
- ถังน้ำมีน้ำเต็ม >>> ระบายน้ำออกจากถัง
- ท่อยางระบายน้ำอาจบิดงอ >>> หากผลิตภัณฑ์ถูกเชื่อมต่อโดยตรงไปยังระบบระบายน้ำเสีย ให้ตรวจสอบท่อยางระบายน้ำ

สัญญาณแจ้งเตือนการทำความสะอาดตัวกรองติดกระพริบ

- ไม่ได้ทำความสะอาดลินชักตัวกรอง >>> ทำความสะอาดฟองน้ำและผ้าตัวกรองในลินชักตัวกรอง



ถ้าคุณไม่สามารถกำจัดปัญหาได้แม้ว่าคุณได้ปฏิบัติตามคำแนะนำในคู่มือเล่มนี้แล้ว ให้ปรึกษากับตัวแทนจำหน่ายของคุณหรือตัวแทนบริการที่ได้รับอนุญาต ห้ามทำการแก้ไขซ่อมแซมผลิตภัณฑ์ที่ไม่ทำงานตามฟังก์ชันด้วยตัวเอง

